



Position of Parts in Seat (LHD w/ Power Seat)

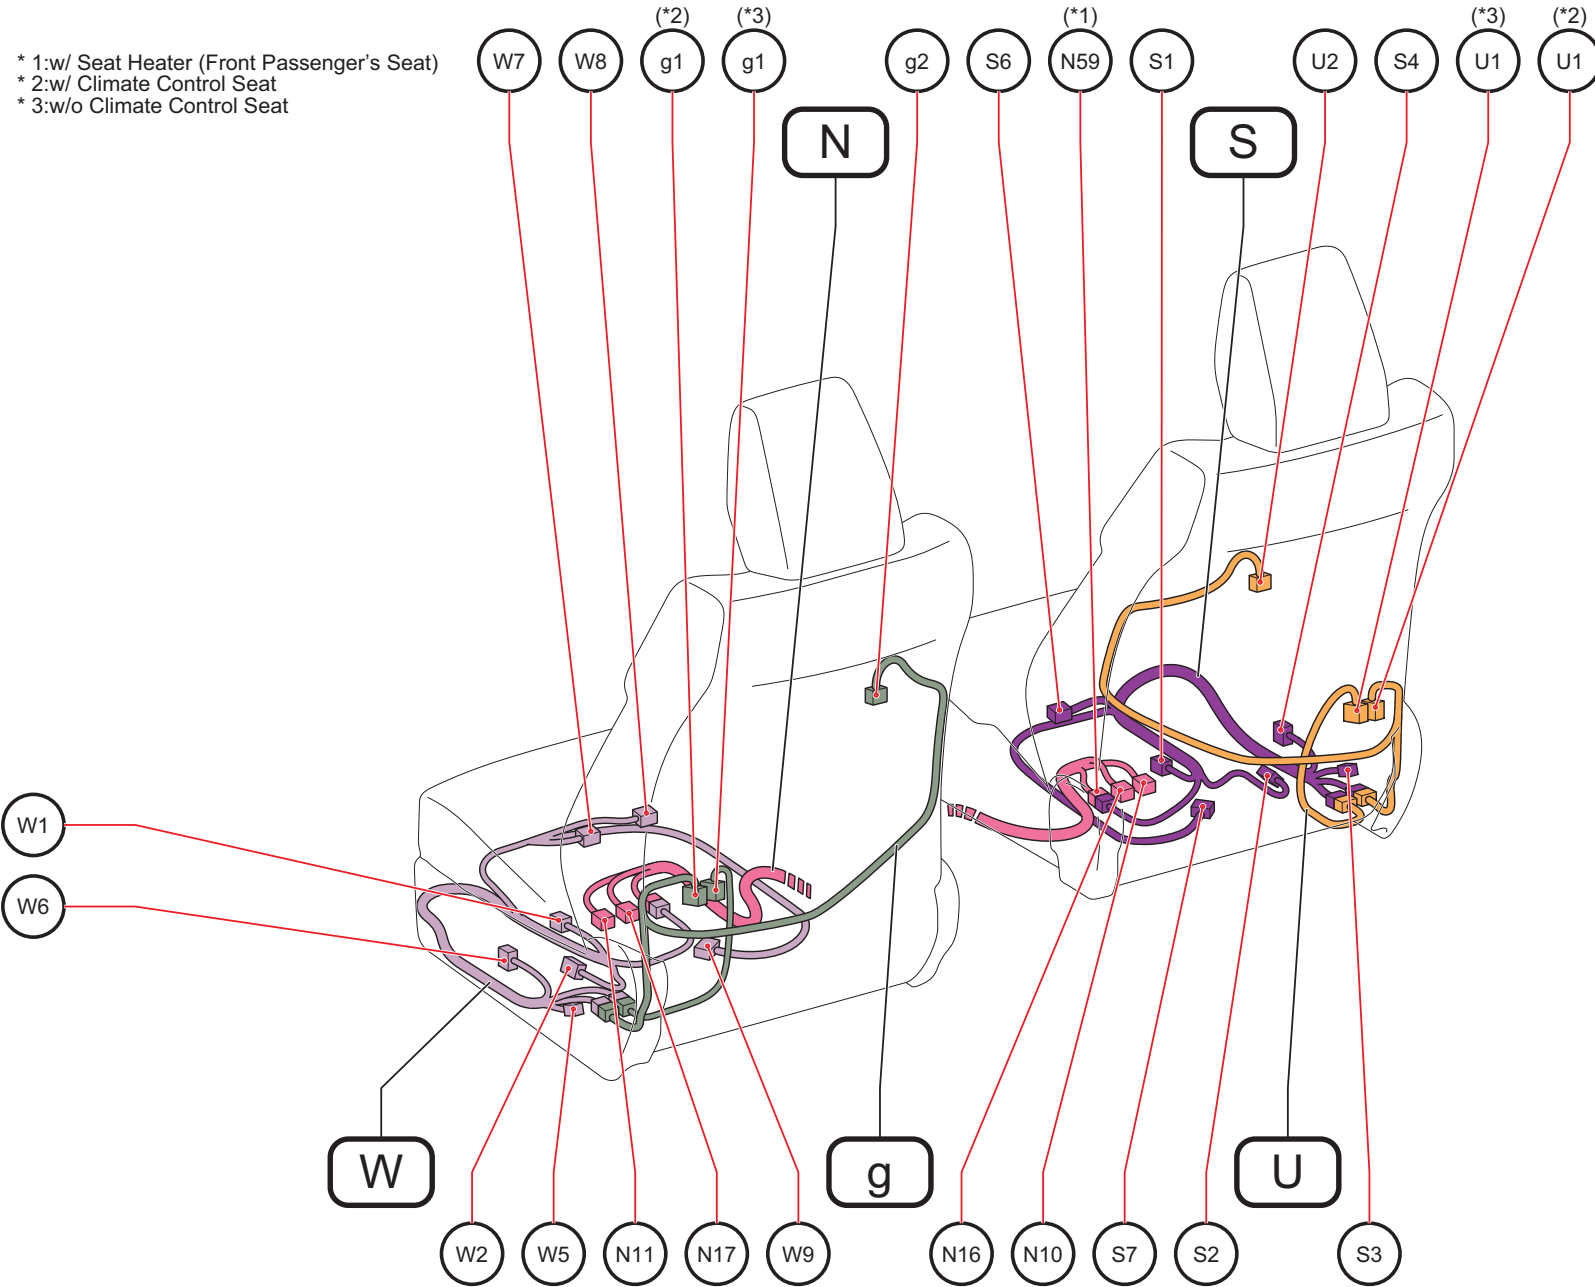


Position of Parts in Seat (LHD w/ Power Seat)

N10	Front Seat Airbag Assembly RH
N11	Front Seat Airbag Assembly LH
N16	Front Seat Inner Belt Assembly RH
N17	Front Seat Inner Belt Assembly LH
N59	Front Seat Cushion Heater Assembly RH
S1	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
S2	Front Power Seat Tilt Position Motor RH (Front Seat Adjuster Assembly RH)
S3	Front Power Seat Lift Position Motor RH (Front Seat Adjuster Assembly RH)
S4	Front Power Seat Switch RH
S6	No. 50 Junction Connector
S7	Seat Cushion Climate Blower Sub-Assembly RH
U1	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)
U2	Seat Back Climate Control Blower RH
W1	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
W2	Front Power Seat Tilt Position Motor LH (Front Seat Adjuster Assembly LH)
W5	Front Power Seat Lift Position Motor LH (Front Seat Adjuster Assembly LH)
W6	Front Power Seat Switch LH
W7	Front Seat Cushion Heater Assembly LH
W8	No. 51 Junction Connector
W9	Seat Cushion Climate Blower Sub-Assembly LH
g1	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
g2	Seat Back Climate Control Blower LH


Position of Parts in Seat (LHD w/ Power Seat)

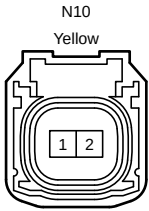


90980-12698

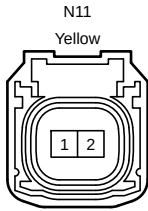


90980-12698

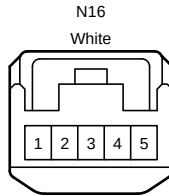


90980-12366

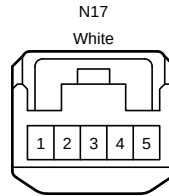


90980-12366

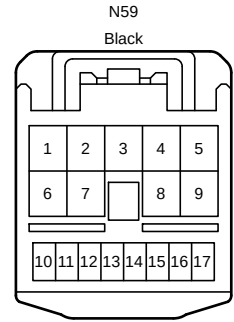


90980-12374

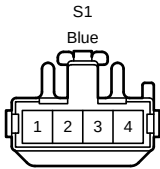


90980-12335

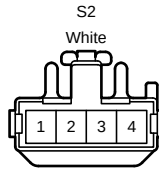


90980-12335

 


90980-12341

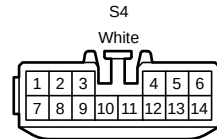


90980-10807

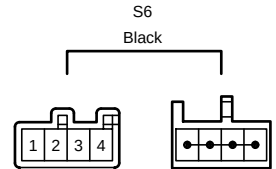


90980-11398

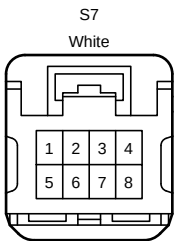


90980-12735

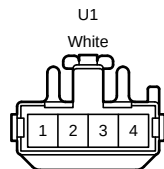


90980-12335

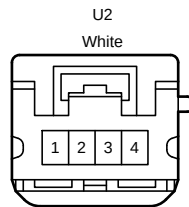


90980-12733

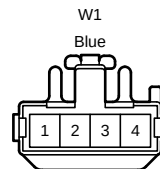


90980-12335

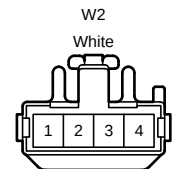


90980-12335

 


90980-12341

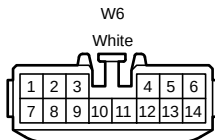


90980-10807

 


90980-11735

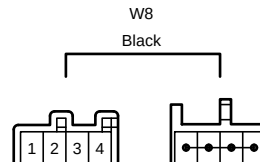


90980-11398

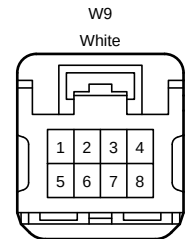

90980-12735

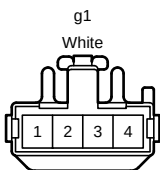

90980-12335

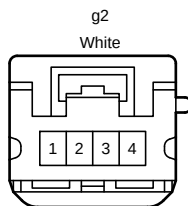

90980-12733