


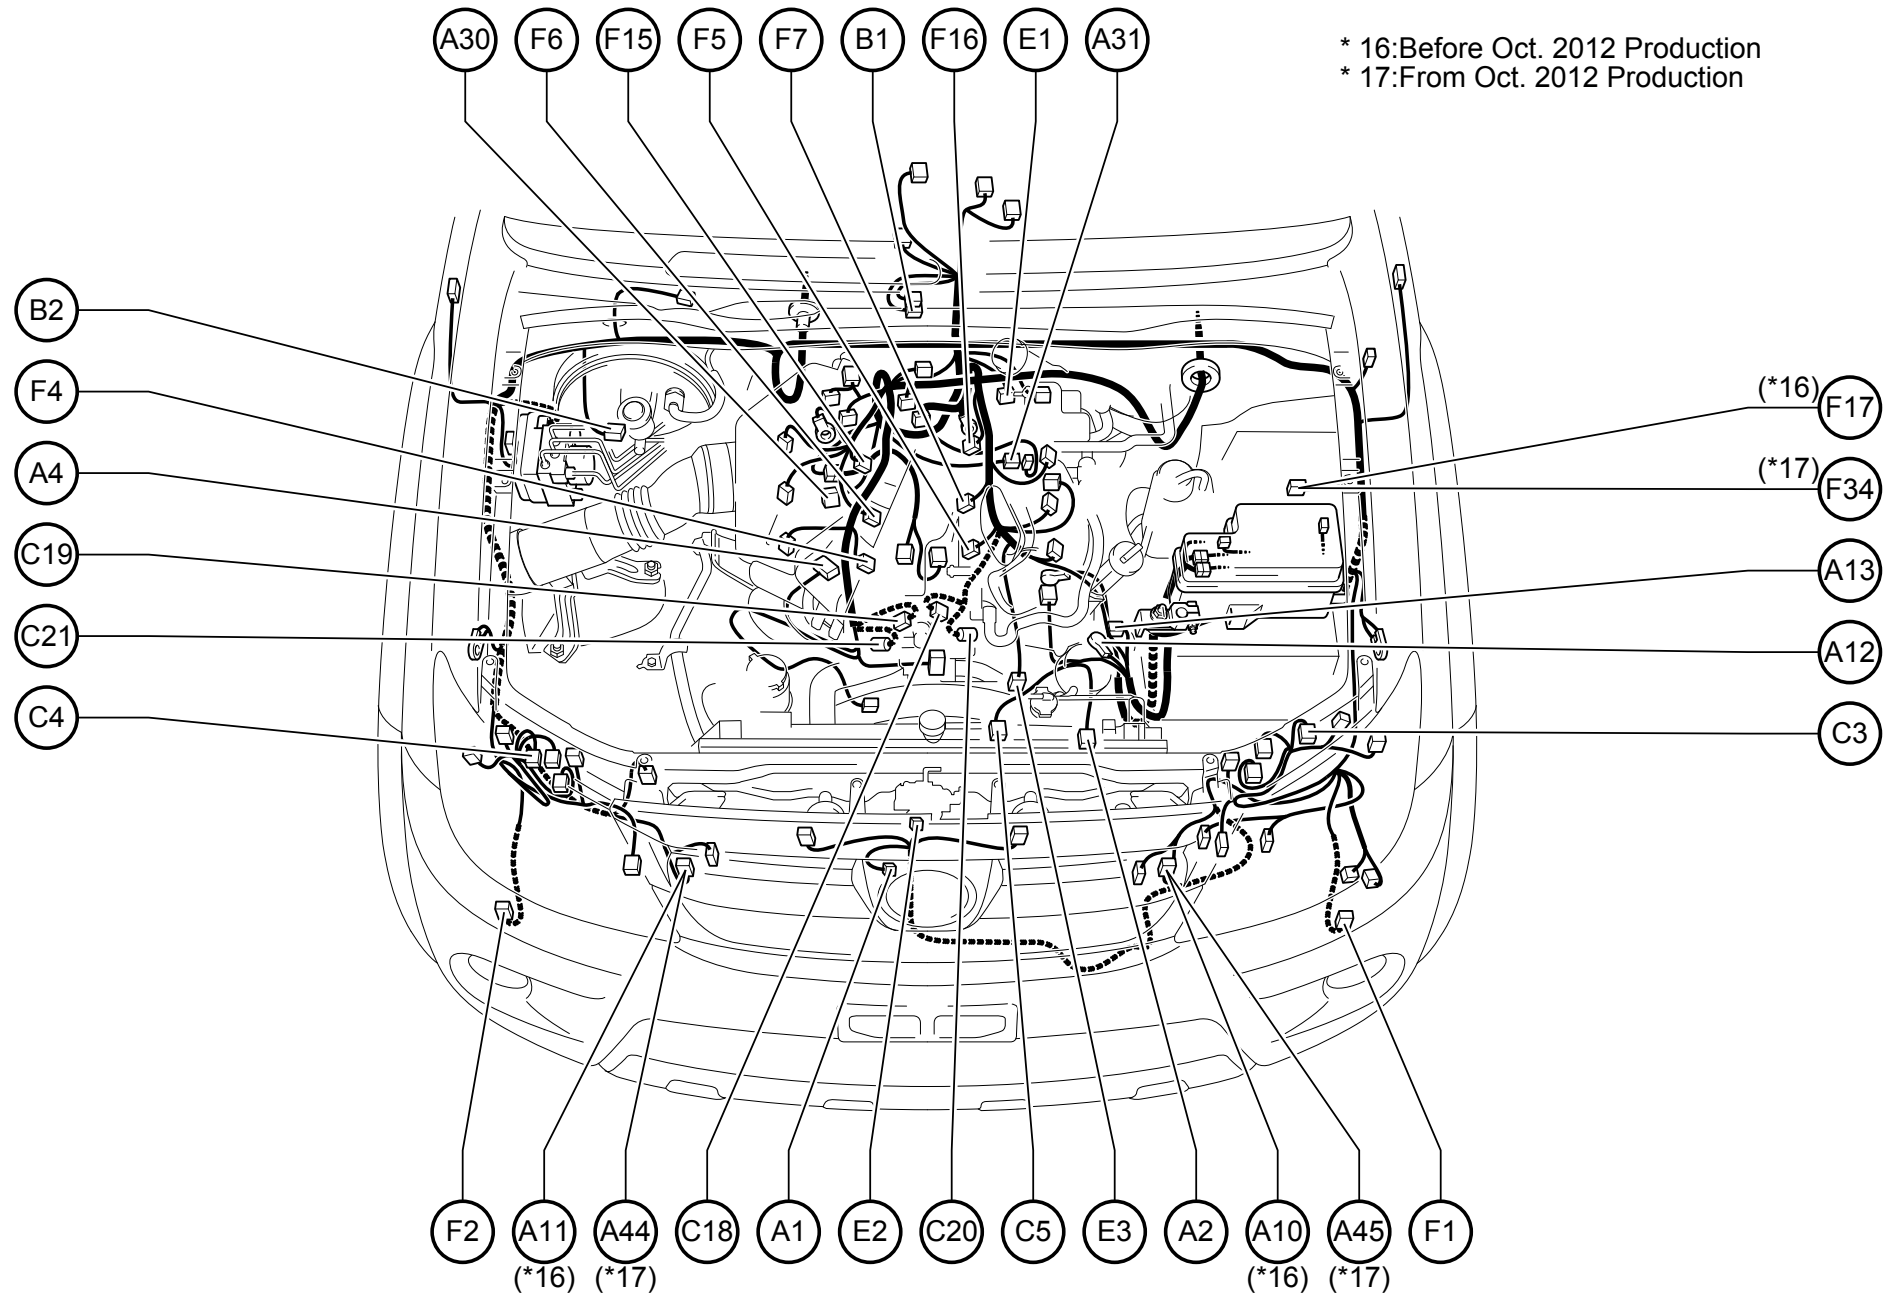

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Compressor
- A 4 Air Flow Meter
- A 10 Airbag Sensor (Front LH)
- A 11 Airbag Sensor (Front RH)
- A 12 Alternator
- A 13 Alternator
- A 30 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 31 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 44 Airbag Sensor (Front RH)
- A 45 Airbag Sensor (Front LH)






- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW

- C 3 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front LH)
- C 4 Clearance Lamp (Front RH)
- C 4 Clearance Lamp (Front RH)
- C 5 Crankshaft Position Sensor
- C 18 Camshaft Timing Oil Control Valve (LH)
- C 19 Camshaft Timing Oil Control Valve (RH)
- C 20 VVT Sensor (Bank 2)
- C 21 VVT Sensor (Bank 1)




- E 1 ECT Solenoid
- E 2 Engine Hood Courtesy SW
- E 3 Engine Oil Pressure SW

- F 1 Fog Lamp (Front LH)
- F 2 Fog Lamp (Front RH)
- F 4 Fuel Injector (No.1)
- F 5 Fuel Injector (No.2)
- F 6 Fuel Injector (No.3)
- F 7 Fuel Injector (No.4)
- F 15 Fuel Injector (No.5)
- F 16 Fuel Injector (No.6)
- F 17 Fuel Pump Resistor
- F 34 Fuel Pump Resistor


Position of Parts in Engine Compartment <RHD 1GR-FE>

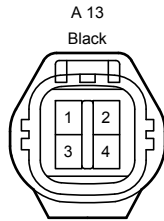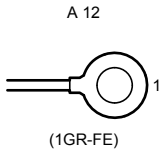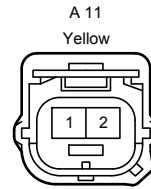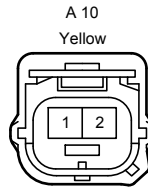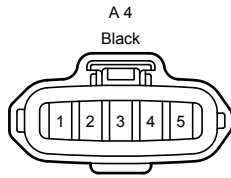


(1GR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

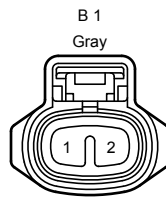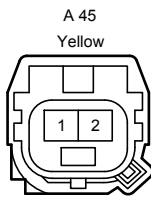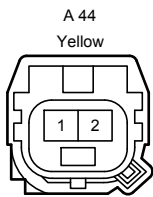


(1GR-FE, 1KD-FTV, 2KD-FTV, 5L-E)

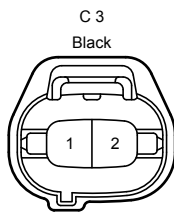


(Before Aug. 2008 Production Except 2TR-FE, From Aug. 2008 Production Except South Africa)

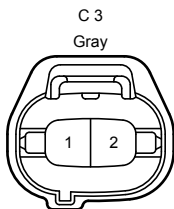


(Before Aug. 2008 Production 2TR-FE, From Aug. 2008 Production South Africa)

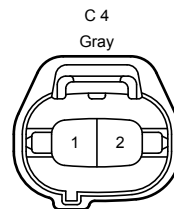


(Before Aug. 2008 Production 2TR-FE, From Aug. 2008 Production South Africa)

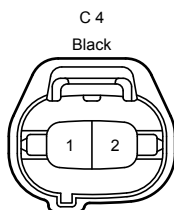

(Before Aug. 2008 Production Except 2TR-FE, From Aug. 2008 Production Except South Africa)

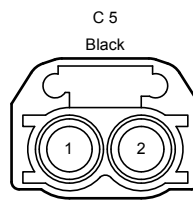

(1GR-FE)

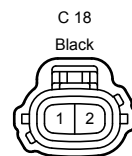

Position of Parts in Engine Compartment <RHD 1GR-FE>

