


- * 16: Before Oct. 2012 Production
- * 17: From Oct. 2012 Production
- * 26: w/ Air Injection Control Driver

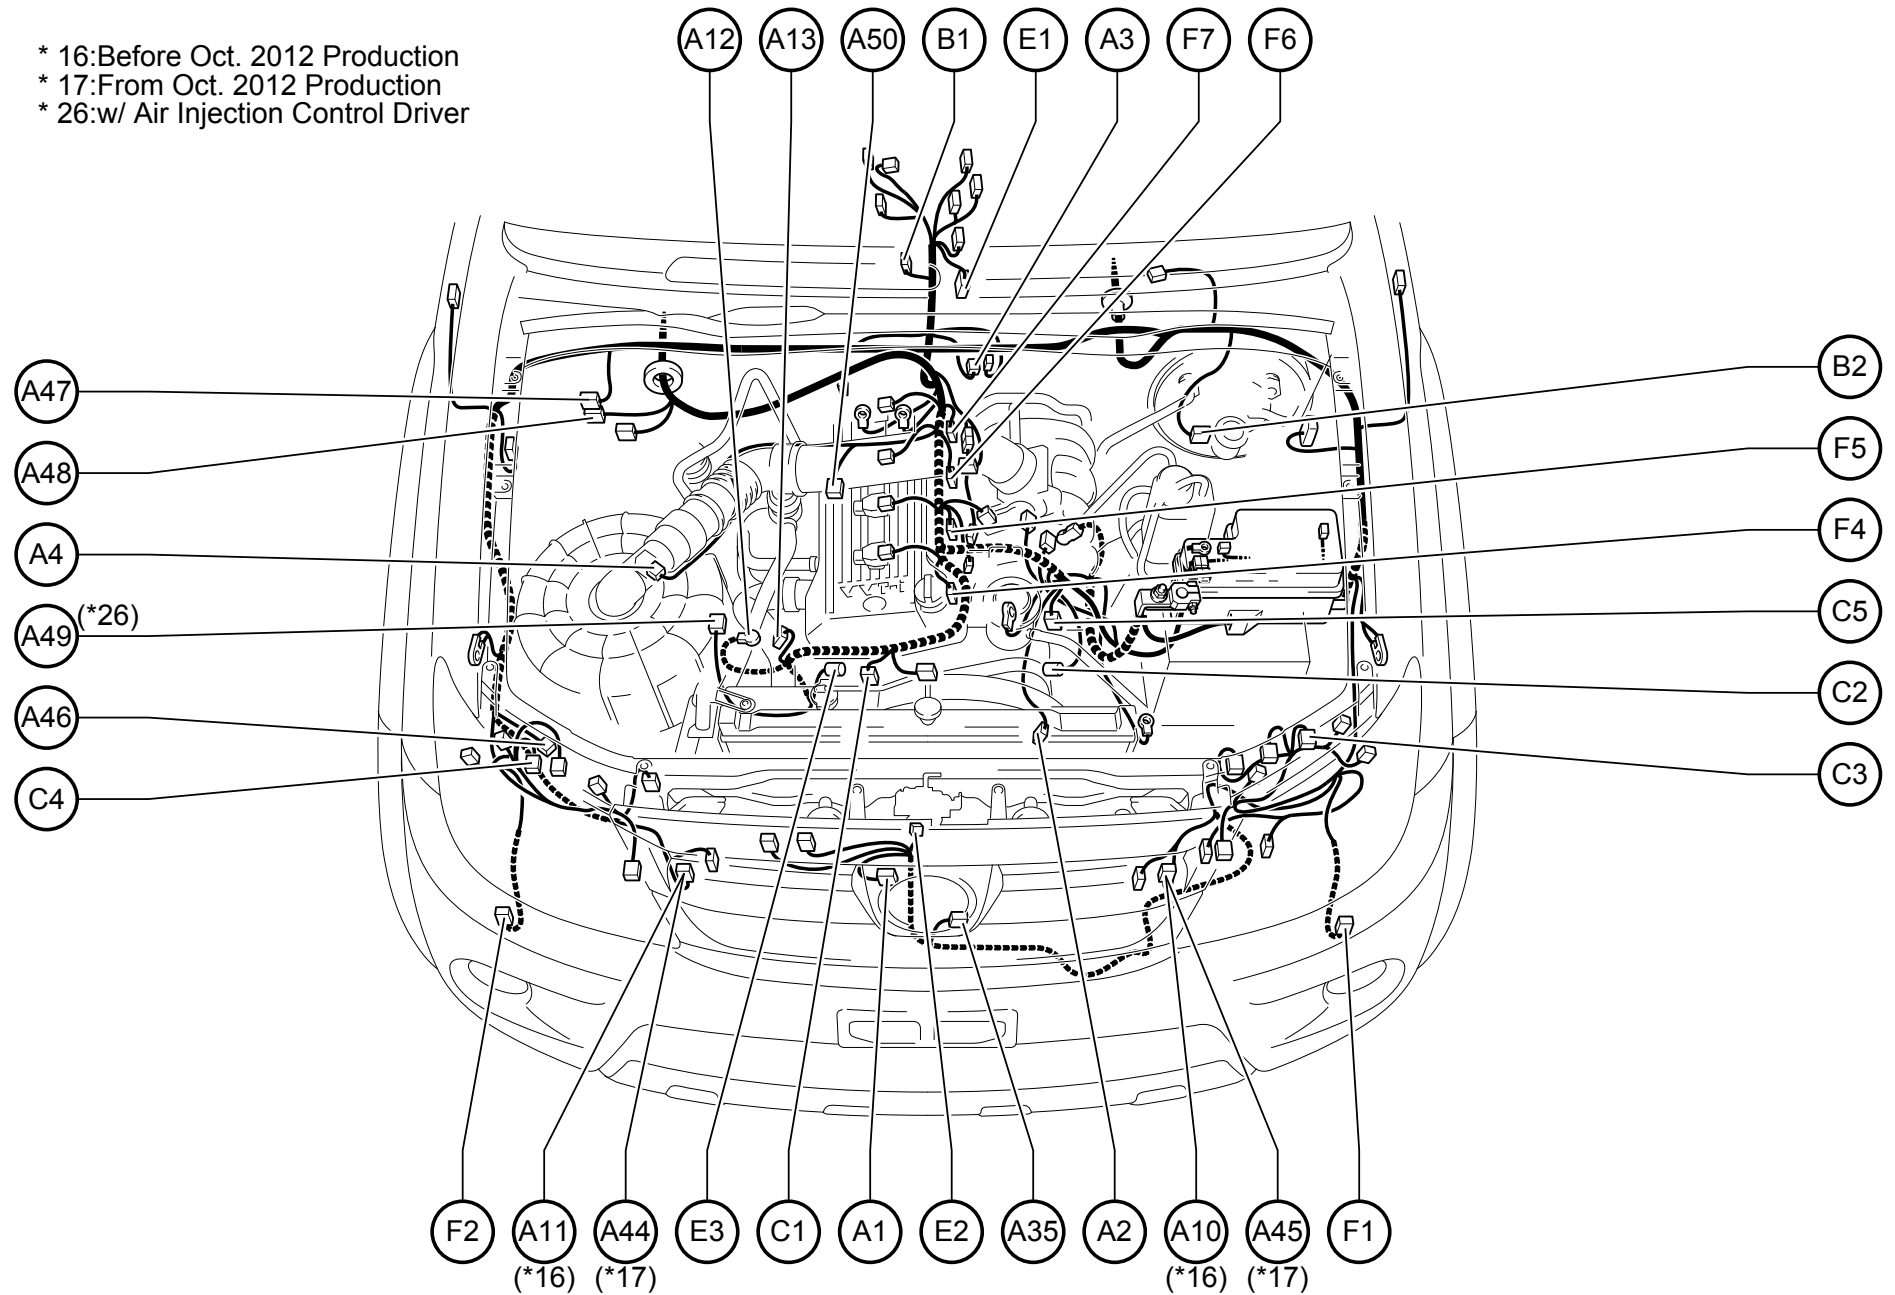

A 1 A/C Ambient Temp. Sensor
A 2 A/C Compressor
A 3 A/T Fluid Temp. Sensor
A 4 Air Flow Meter
A 10 Airbag Sensor (Front LH)
A 11 Airbag Sensor (Front RH)
A 12 Alternator
A 13 Alternator
A 35 A/C Condenser Fan Motor
A 44 Airbag Sensor (Front RH)
A 45 Airbag Sensor (Front LH)
A 46 Air Pump
A 47 Air Injection Control Driver
A 48 Air Injection Control Driver
A 49 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A 50 Air Switching Valve

B 1 Back-Up Lamp SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Clearance Lamp (Front LH)
C 4 Clearance Lamp (Front RH)
C 5 Crankshaft Position Sensor

E 1 ECT Solenoid
E 2 Engine Hood Courtesy SW
E 3 Engine Oil Pressure SW

F 1 Fog Lamp (Front LH)
F 2 Fog Lamp (Front RH)
F 4 Fuel Injector (No.1)
F 5 Fuel Injector (No.2)
F 6 Fuel Injector (No.3)
F 7 Fuel Injector (No.4)

Position of Parts in Engine Compartment <LHD 2TR-FE>

