


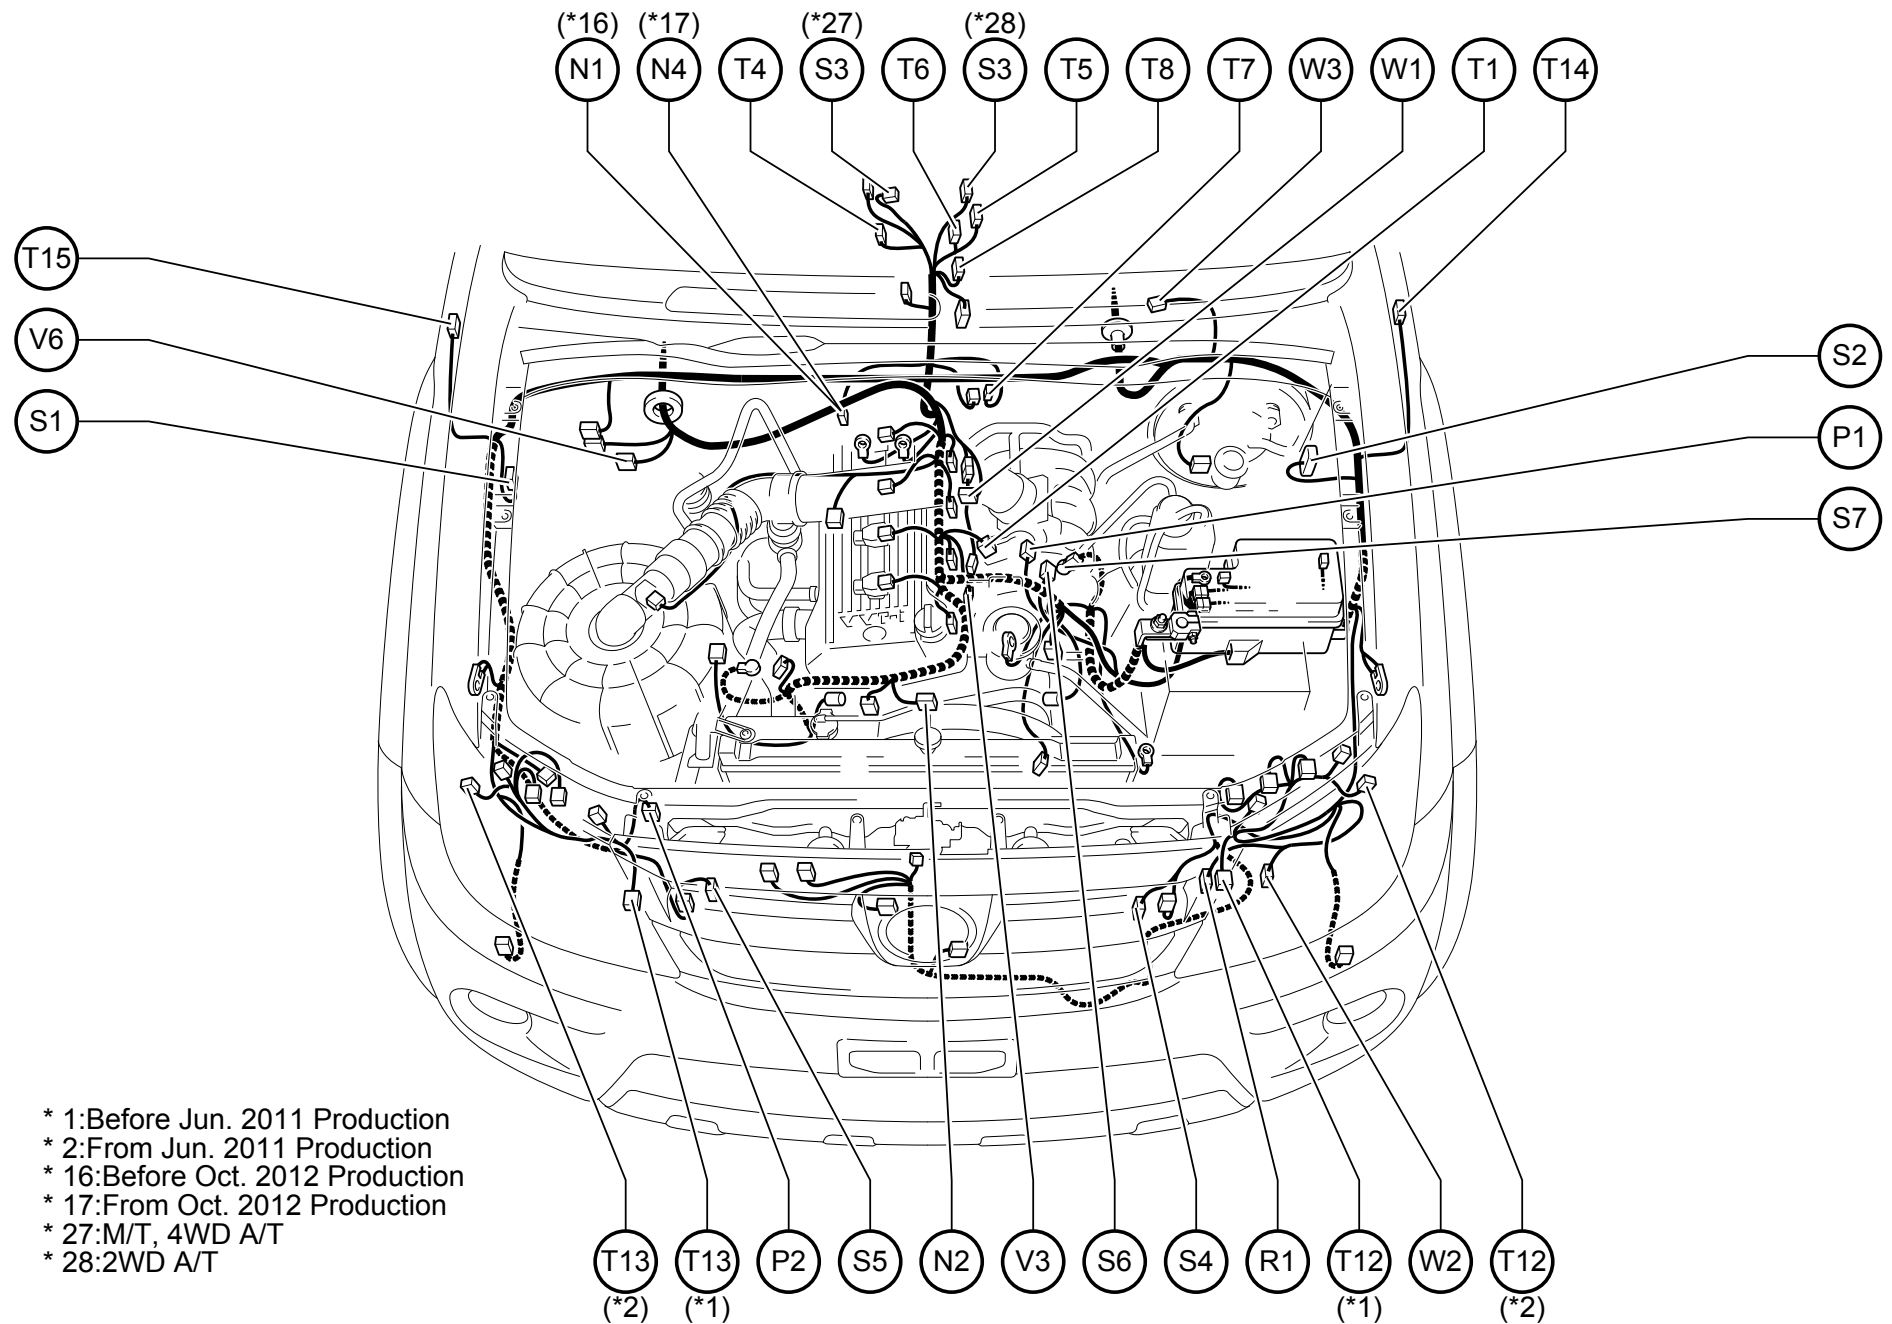

- N 1 Park/Neutral Position SW
- N 2 Noise Filter (Ignition)
- N 2 Noise Filter (Ignition)
- N 4 Park/Neutral Position SW

- P 1 Power Steering Oil Pressure SW
- P 2 Pressure SW
- P 2 Pressure SW

- R 1 Rear Washer Motor






















- S 1 Security Horn
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter

- T 1 Throttle Body Assembly
- T 4 Transfer Indicator SW (Center Diff. Lock)
- T 5 Transfer Indicator SW (L4 Position)
- T 6 Transfer Indicator SW (Neutral Position)
- T 7 Transmission Revolution Sensor (Input)
- T 8 Transmission Revolution Sensor (Output)
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)

- V 3 VSV (Purge)
- V 6 Variable Resistor

- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

Position of Parts in Engine Compartment <LHD 2TR-FE>

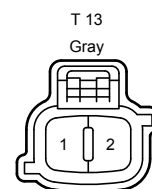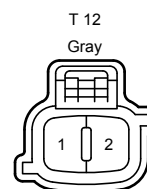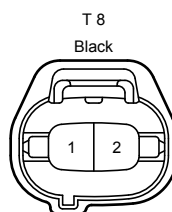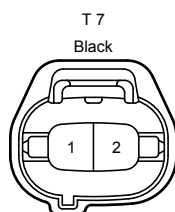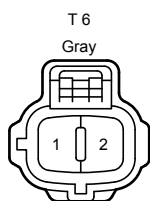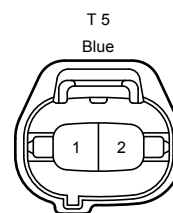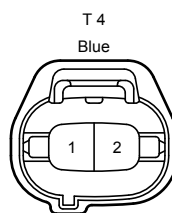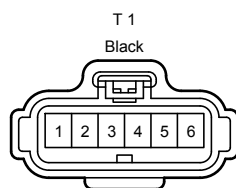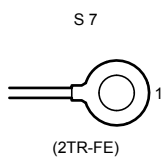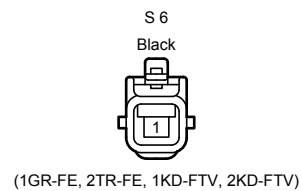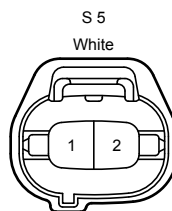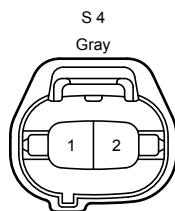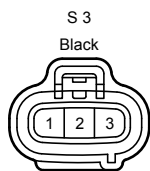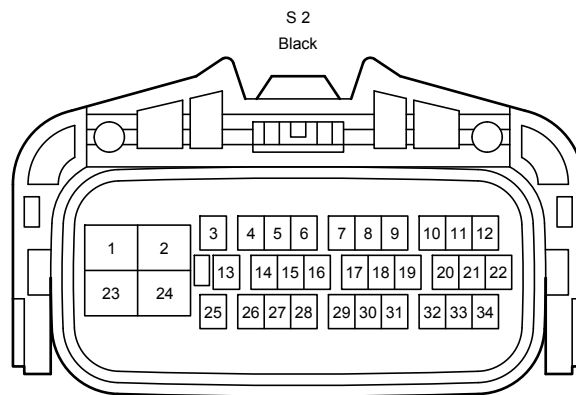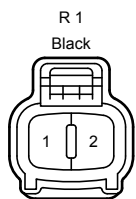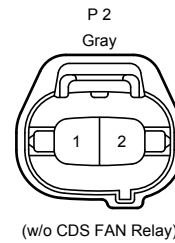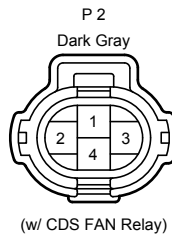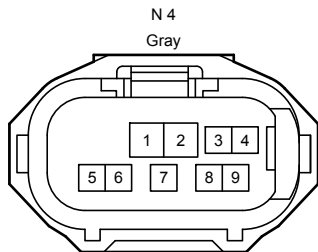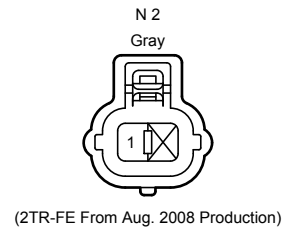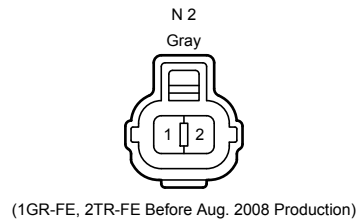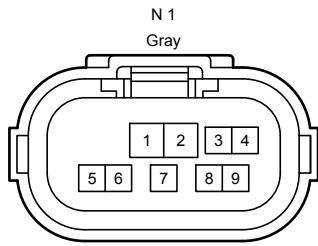

T 14

Gray




T 15

Gray



V 3

Black

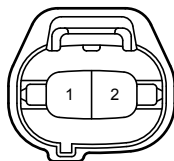

(2TR-FE)

V 6

Black




W 1

Black



W 2

Black

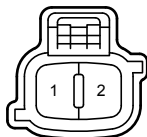

W 3

Black

