


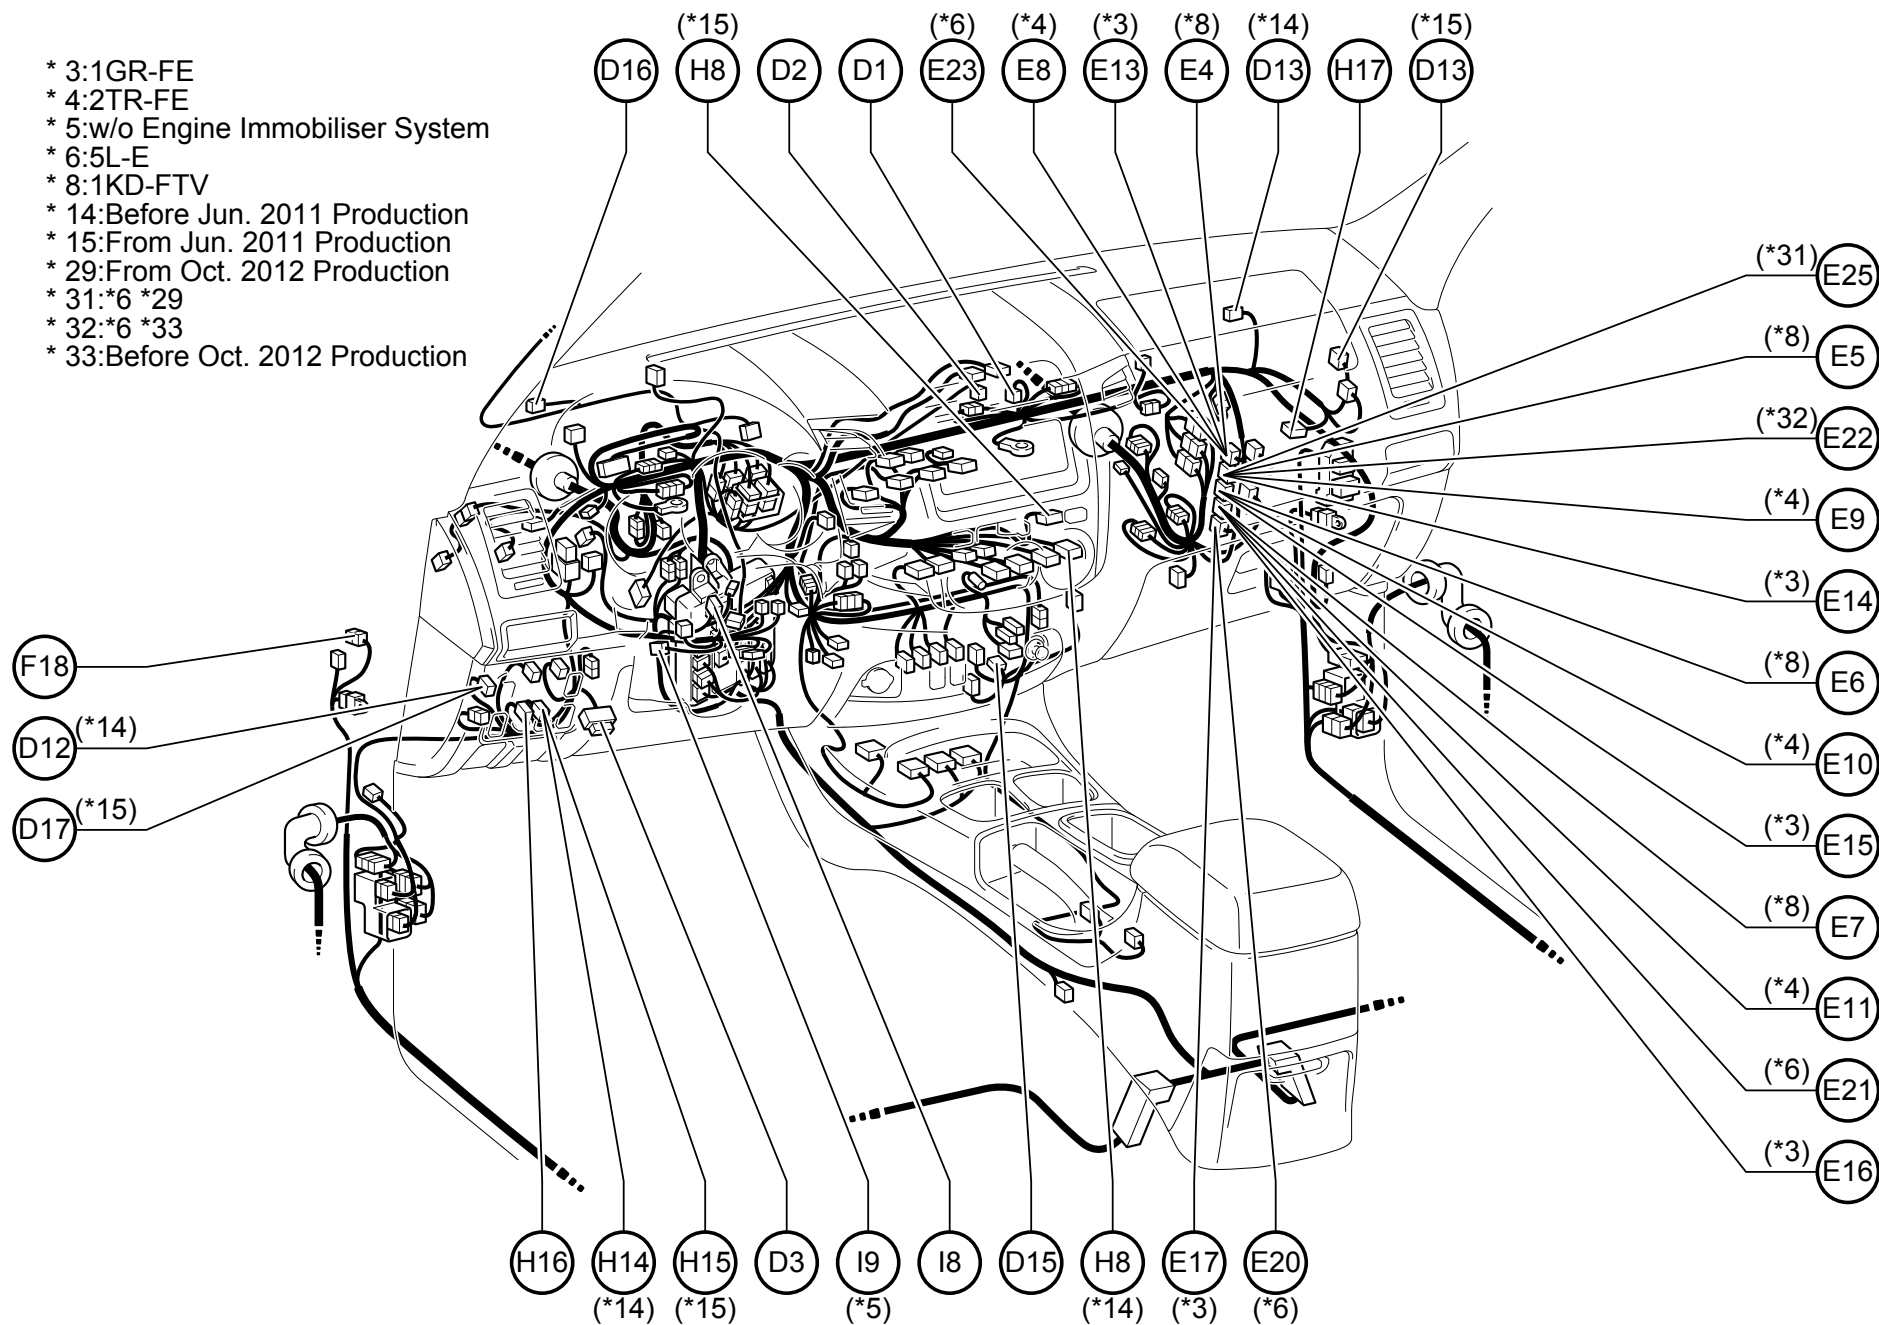

D 1 Damper Servo Motor (Air Inlet)
D 2 Damper Servo Motor (Air Vent Mode)
D 3 DLC3
D 12 Diff. Lock SW
D 13 Door Lock Control Receiver
D 15 Damper Servo Motor (Air Mix)
D 16 Diode (Door Courtesy SW)
D 17 Diff. Lock SW











 






E 4 Engine ECU
E 5 Engine ECU
E 6 Engine ECU
E 7 Engine ECU
E 8 Engine ECU
E 9 Engine ECU
E 10 Engine ECU
E 11 Engine ECU
E 13 Engine ECU
E 14 Engine ECU
E 15 Engine ECU
E 16 Engine ECU
E 17 Engine ECU
E 20 Engine ECU
E 21 Engine ECU
E 22 Engine ECU
E 23 Engine ECU
E 25 Engine ECU

F 18 4WD Control ECU (Rear Diff. Lock) , Short Connector (4WD Control)

H 8 Hazard Warning Signal SW
H 14 Headlamp Leveling SW
H 15 Headlamp Leveling SW
H 16 Headlight Cleaner Switch Assembly
H 17 Headlight Leveling ECU Assembly


I 8 Ignition SW
I 9 Ignition Key Cylinder Lamp

Position of Parts in Instrument Panel <LHD>

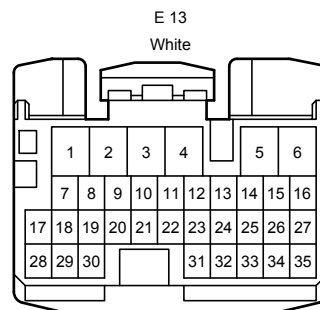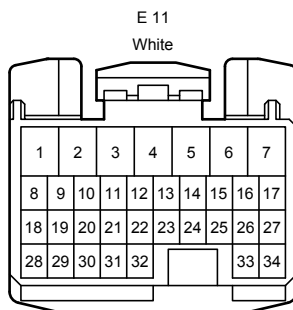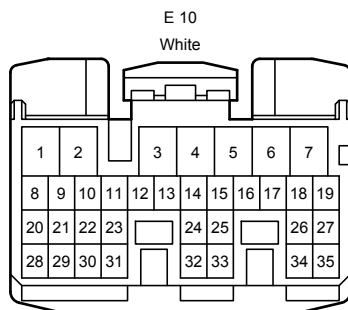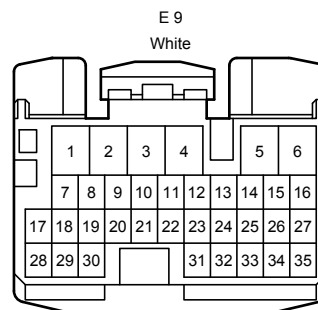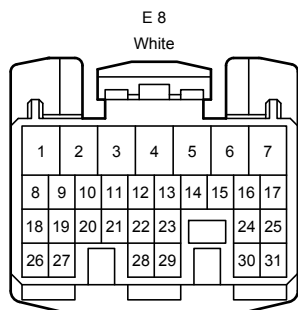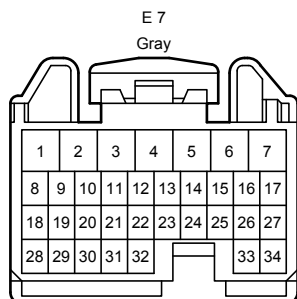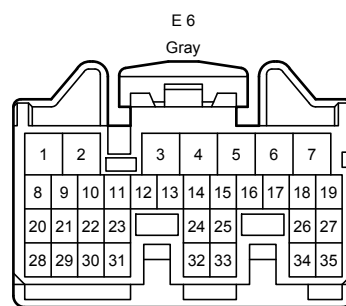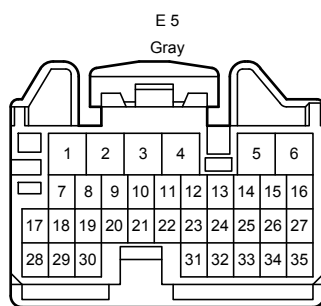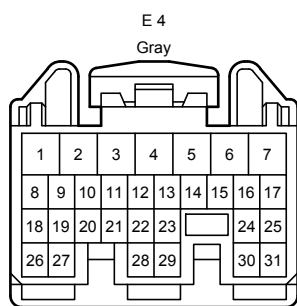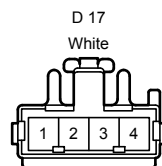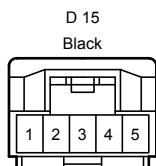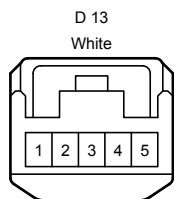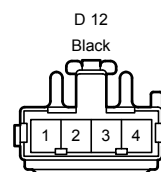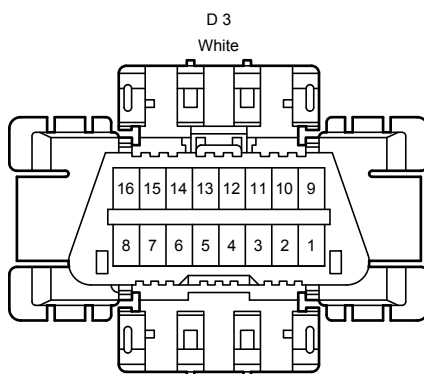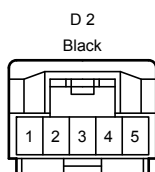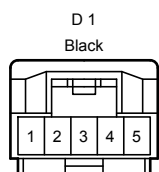


Position of Parts in Instrument Panel <LHD>


E 14
White

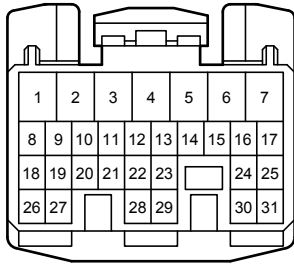


E 15
White

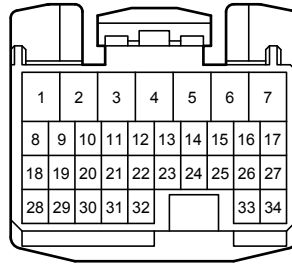


E 16
White

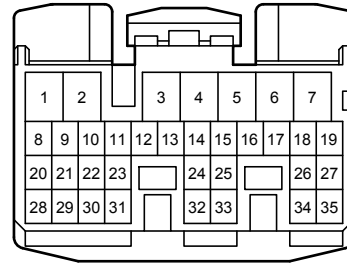


E 17
White

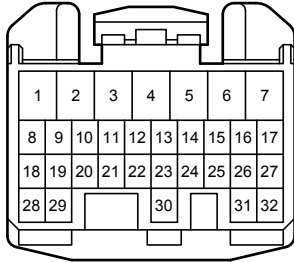


E 20
White

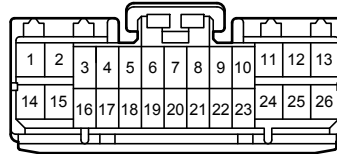


E 21
White

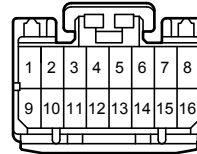


E 22
Dark Gray

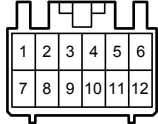


E 23
White

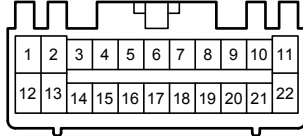


E 25
Black

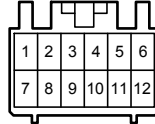


F 18
White

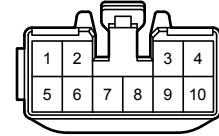


H 8
White

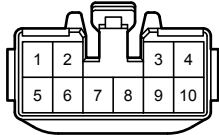


H 14
White

 


H 15
White

 


H 16
White

 

H 17
White

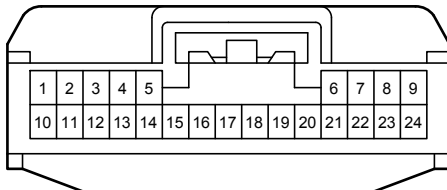

I 8
White

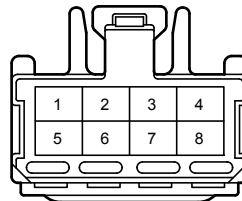

I 9
Black

