


F RELAY LOCATIONS


① : Engine Room R/B No.1	Engine Compartment Front (See Page 20)
② : Engine Room J/B No.1	

(1TR-FE, 2TR-FE)

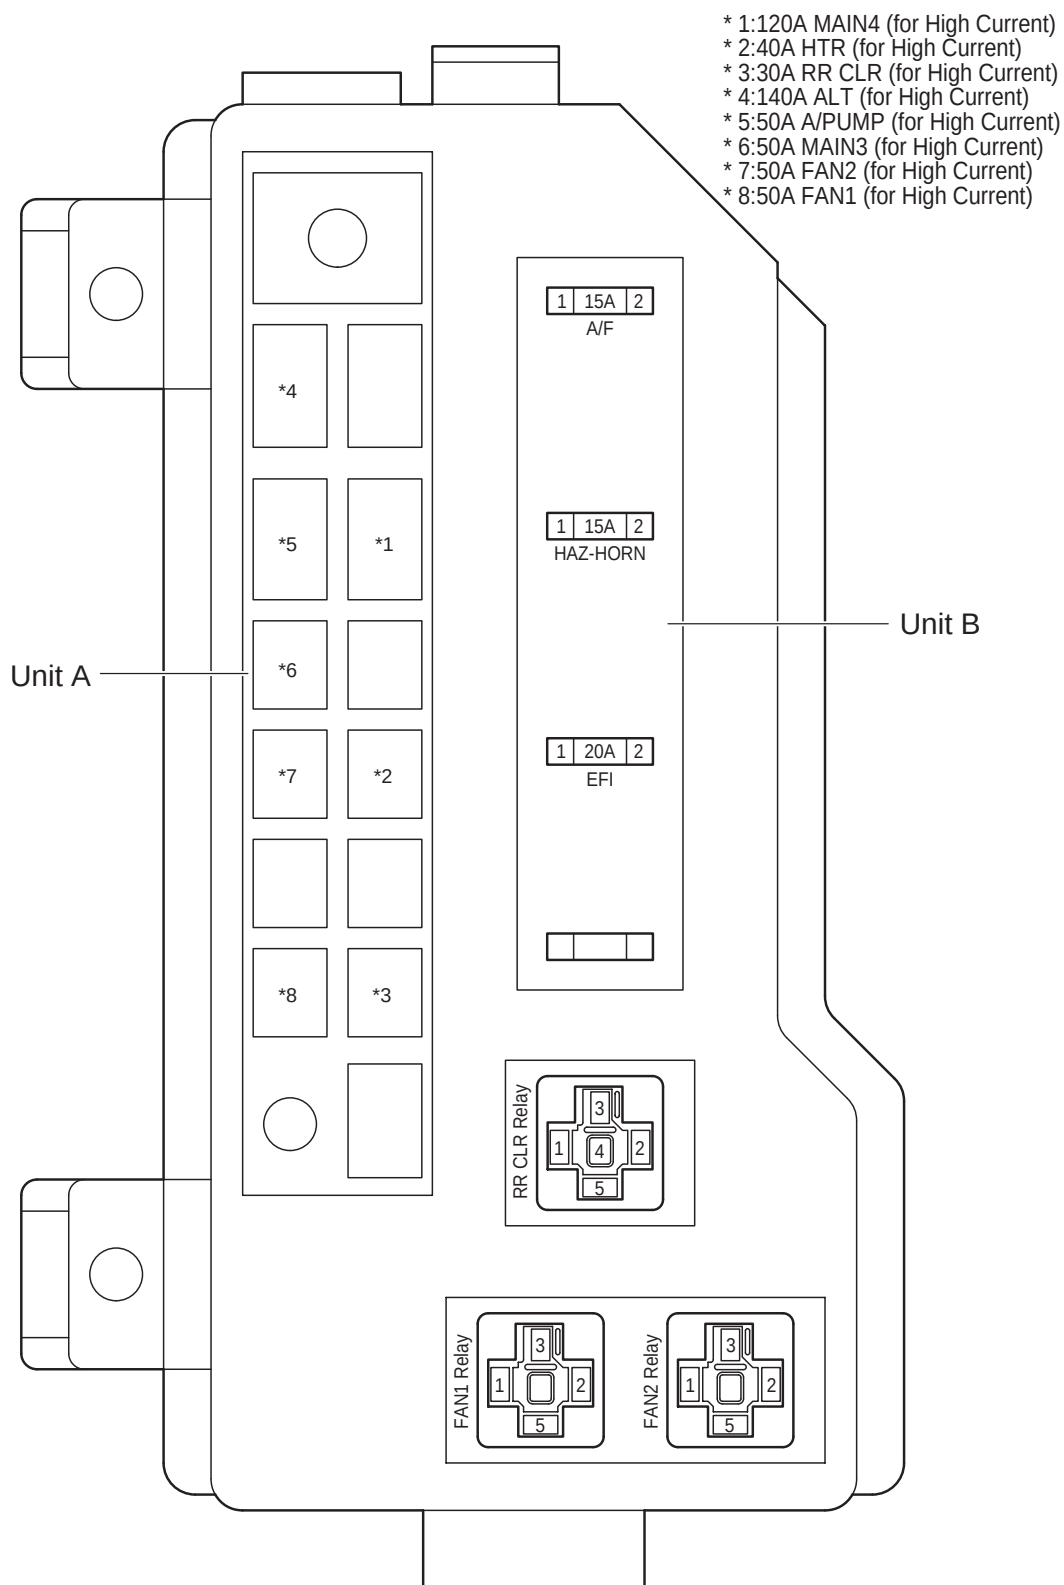


① : Engine Room R/B No.1	Engine Compartment Front (See Page 20)
○ : Engine Room J/B No.1	

(1KD-FTV, 2KD-FTV, 5L-E)

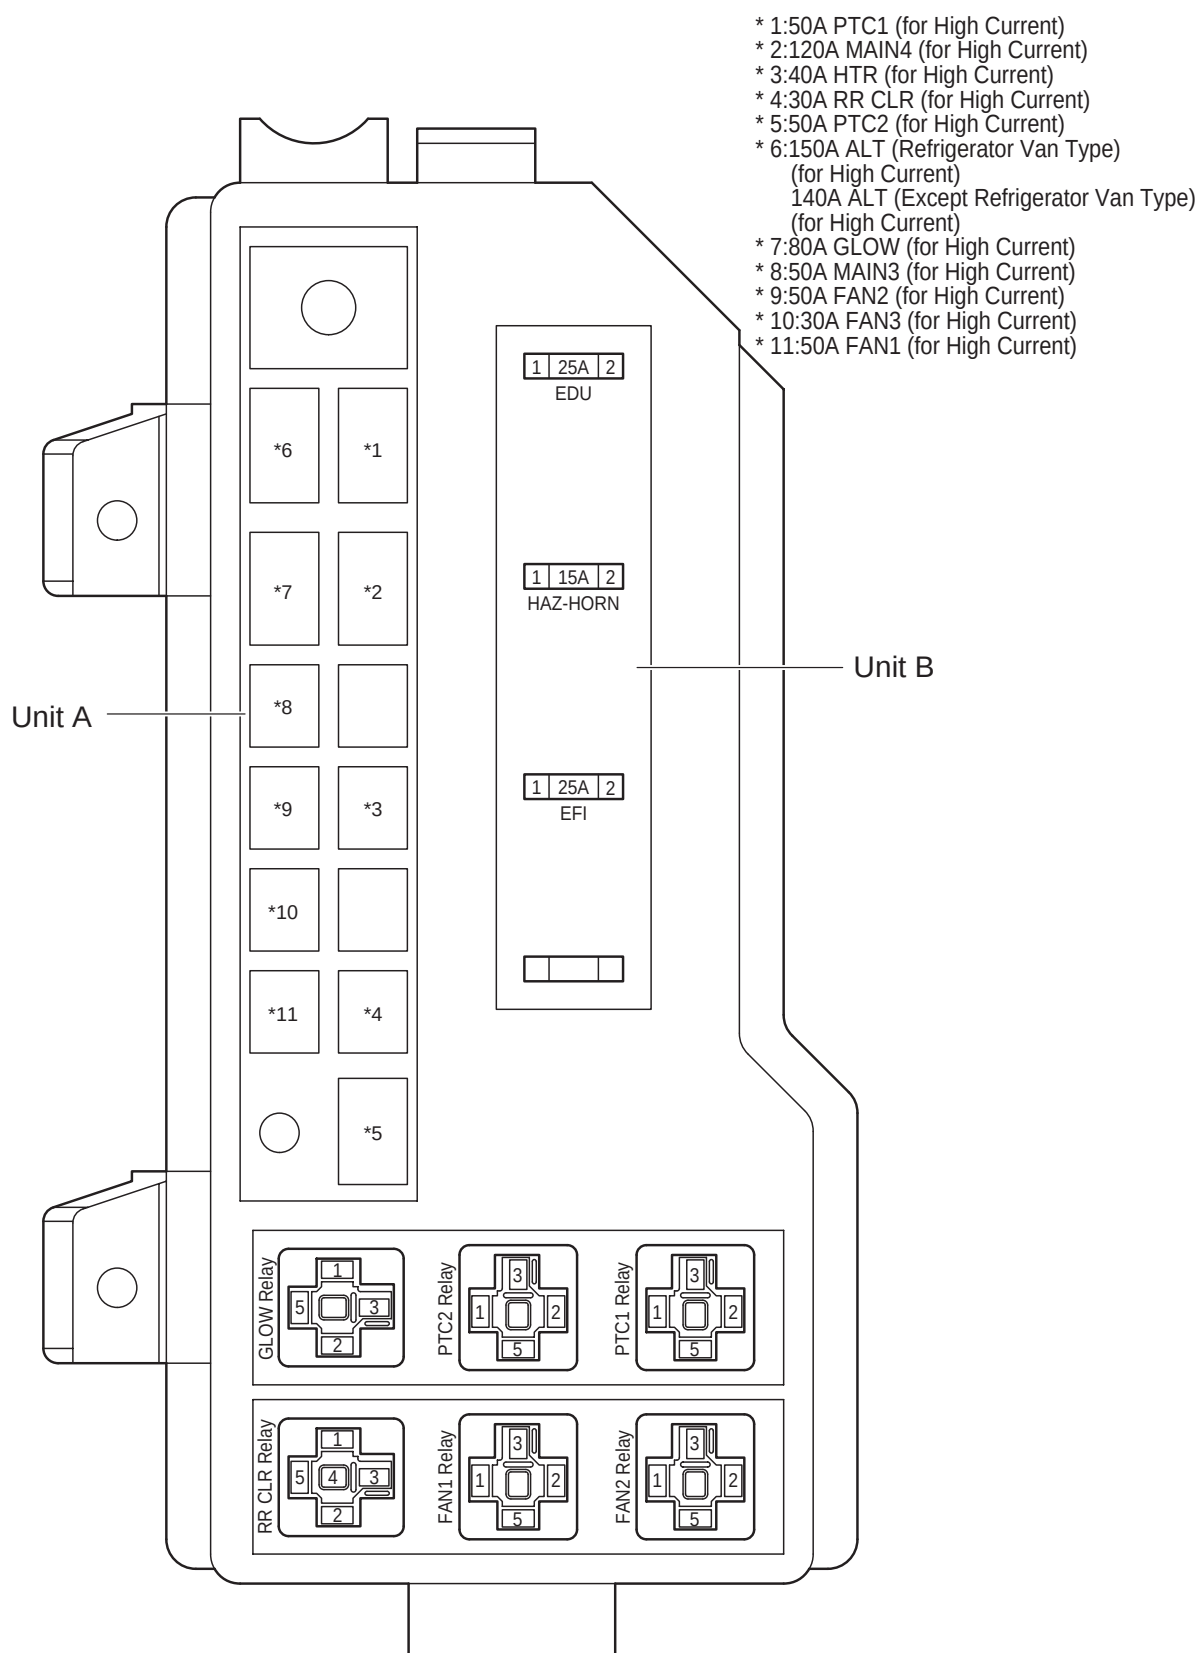

F RELAY LOCATIONS

① : Engine Room R/B No.1	Engine Compartment Front (See Page 20)
○ : Engine Room J/B No.1	

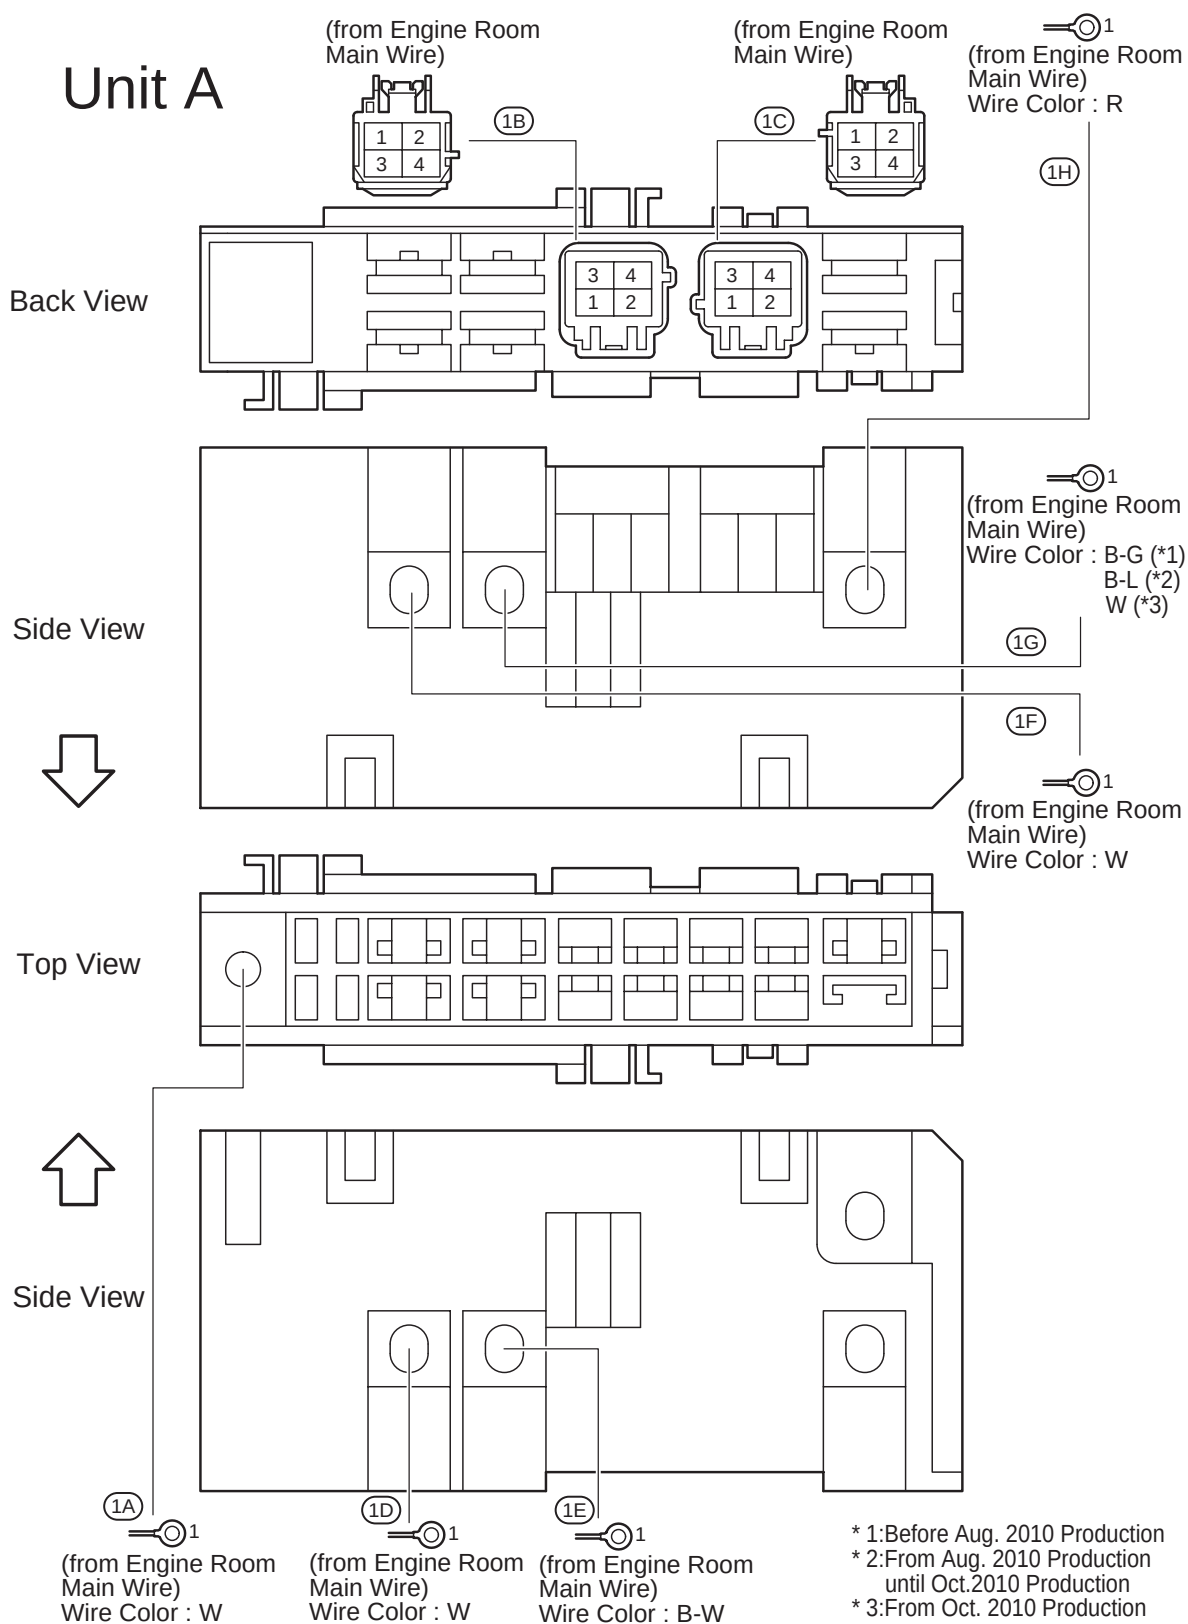

Unit B

* 1:1KD-FTV w/ DPF
* 2:Except *1

