
 
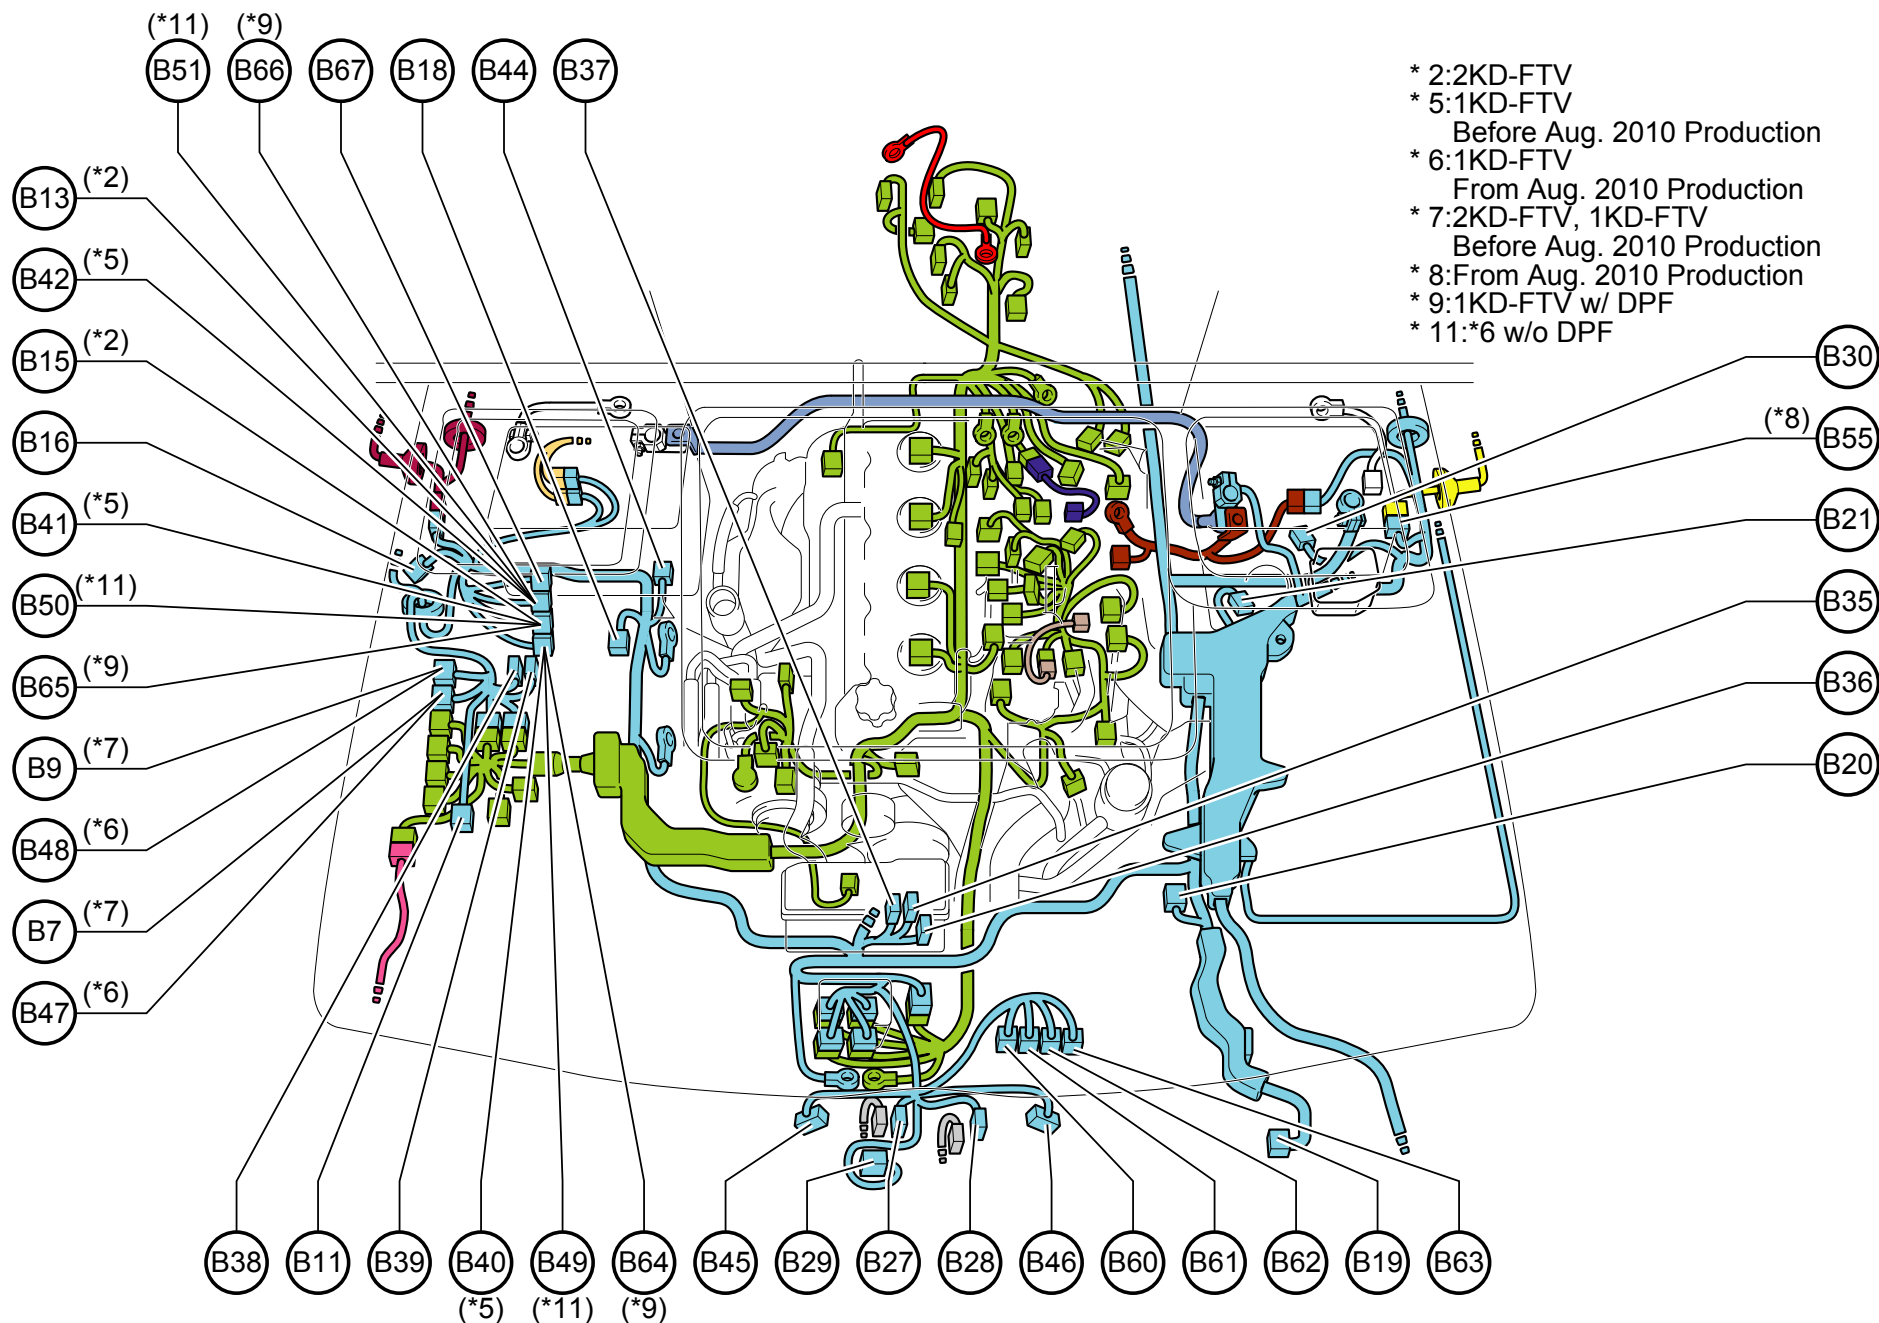

 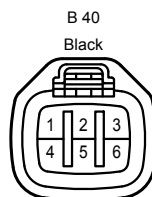
 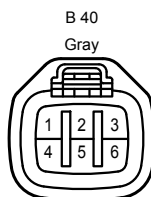
 


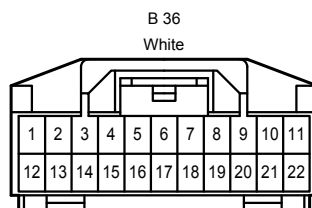
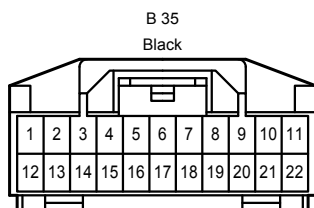
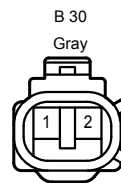
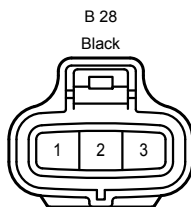
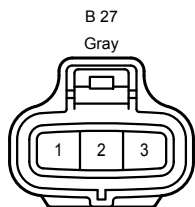
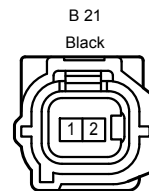
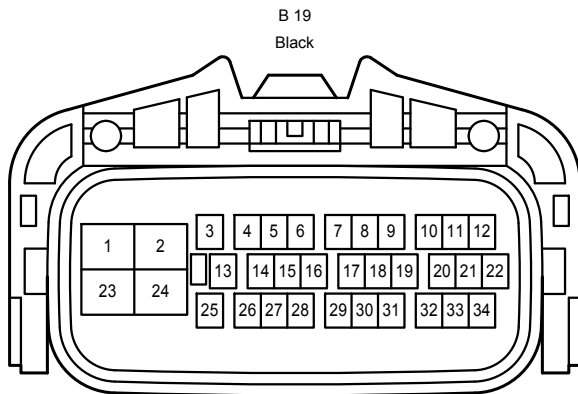
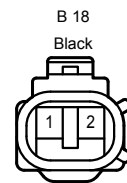
 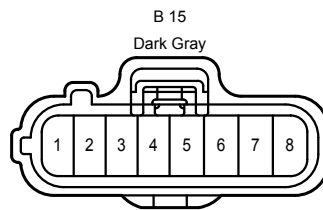
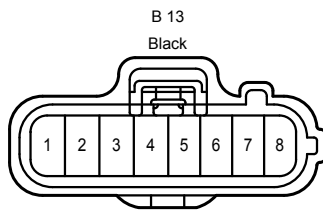



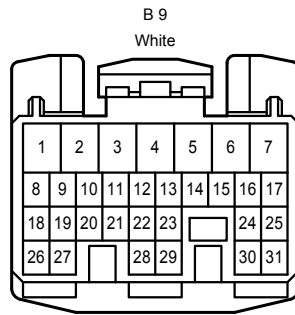

- B 7 Engine ECU
- B 9 Engine ECU
- B 11 Front Seat Inner Belt (Driver's Side)
- B 13 Injector Driver (EDU)
- B 15 Injector Driver (EDU)
- B 16 A/C Magnetic Valve (Rear A/C)
- B 18 Speed Sensor (Front RH)
- B 19 Skid Control ECU with Actuator
- B 20 Speed Sensor (Front LH)
- B 21 Fuel Filter Warning SW
- B 27 Cooling Fan ECU No.1
- B 28 Cooling Fan ECU No.2
- B 29 Water Temp. Sensor (Radiator)
- B 30 Fuel Sedimentary Level Warning SW
- B 35 Junction Connector
- B 36 Junction Connector
- B 37 Junction Connector
- B 38 Junction Connector
- B 39 Junction Connector
- B 40 Injector Driver (EDU)
- B 41 Injector Driver (EDU)
- B 42 Injector Driver (EDU)
- B 44 Option Connector (TVSS Siren)
- B 45 Cooling Fan ECU No.1
- B 46 Cooling Fan ECU No.2
- B 47 Engine ECU
- B 48 Engine ECU
- B 49 Injector Driver (EDU)
- B 50 Injector Driver (EDU)
- B 51 Injector Driver (EDU)
- B 55 Slide Door Control Junction (Male LH)
- B 60 Injector Driver (EDU)
- B 61 Injector Driver (EDU)
- B 62 Injector Driver (EDU)
- B 63 Injector Driver (EDU)
- B 64 Glow Plug Controller
- B 65 Glow Plug Controller
- B 66 Glow Plug Controller
- B 67 Glow Plug Controller

Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

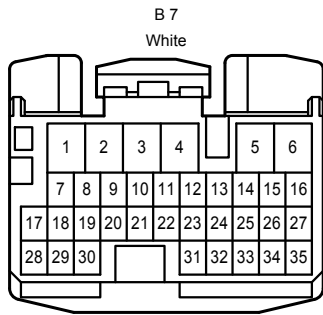

(Before Sep. 2007 Production)

 
(From Sep. 2007 Production)

(Before Sep. 2007 Production)


Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>




(From Sep. 2007 Production until Apr. 2009 Production)



(From Apr. 2009 Production)

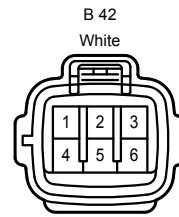

(Before Apr. 2009 Production)

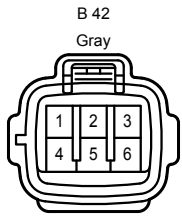

(From Apr. 2009 Production)

