

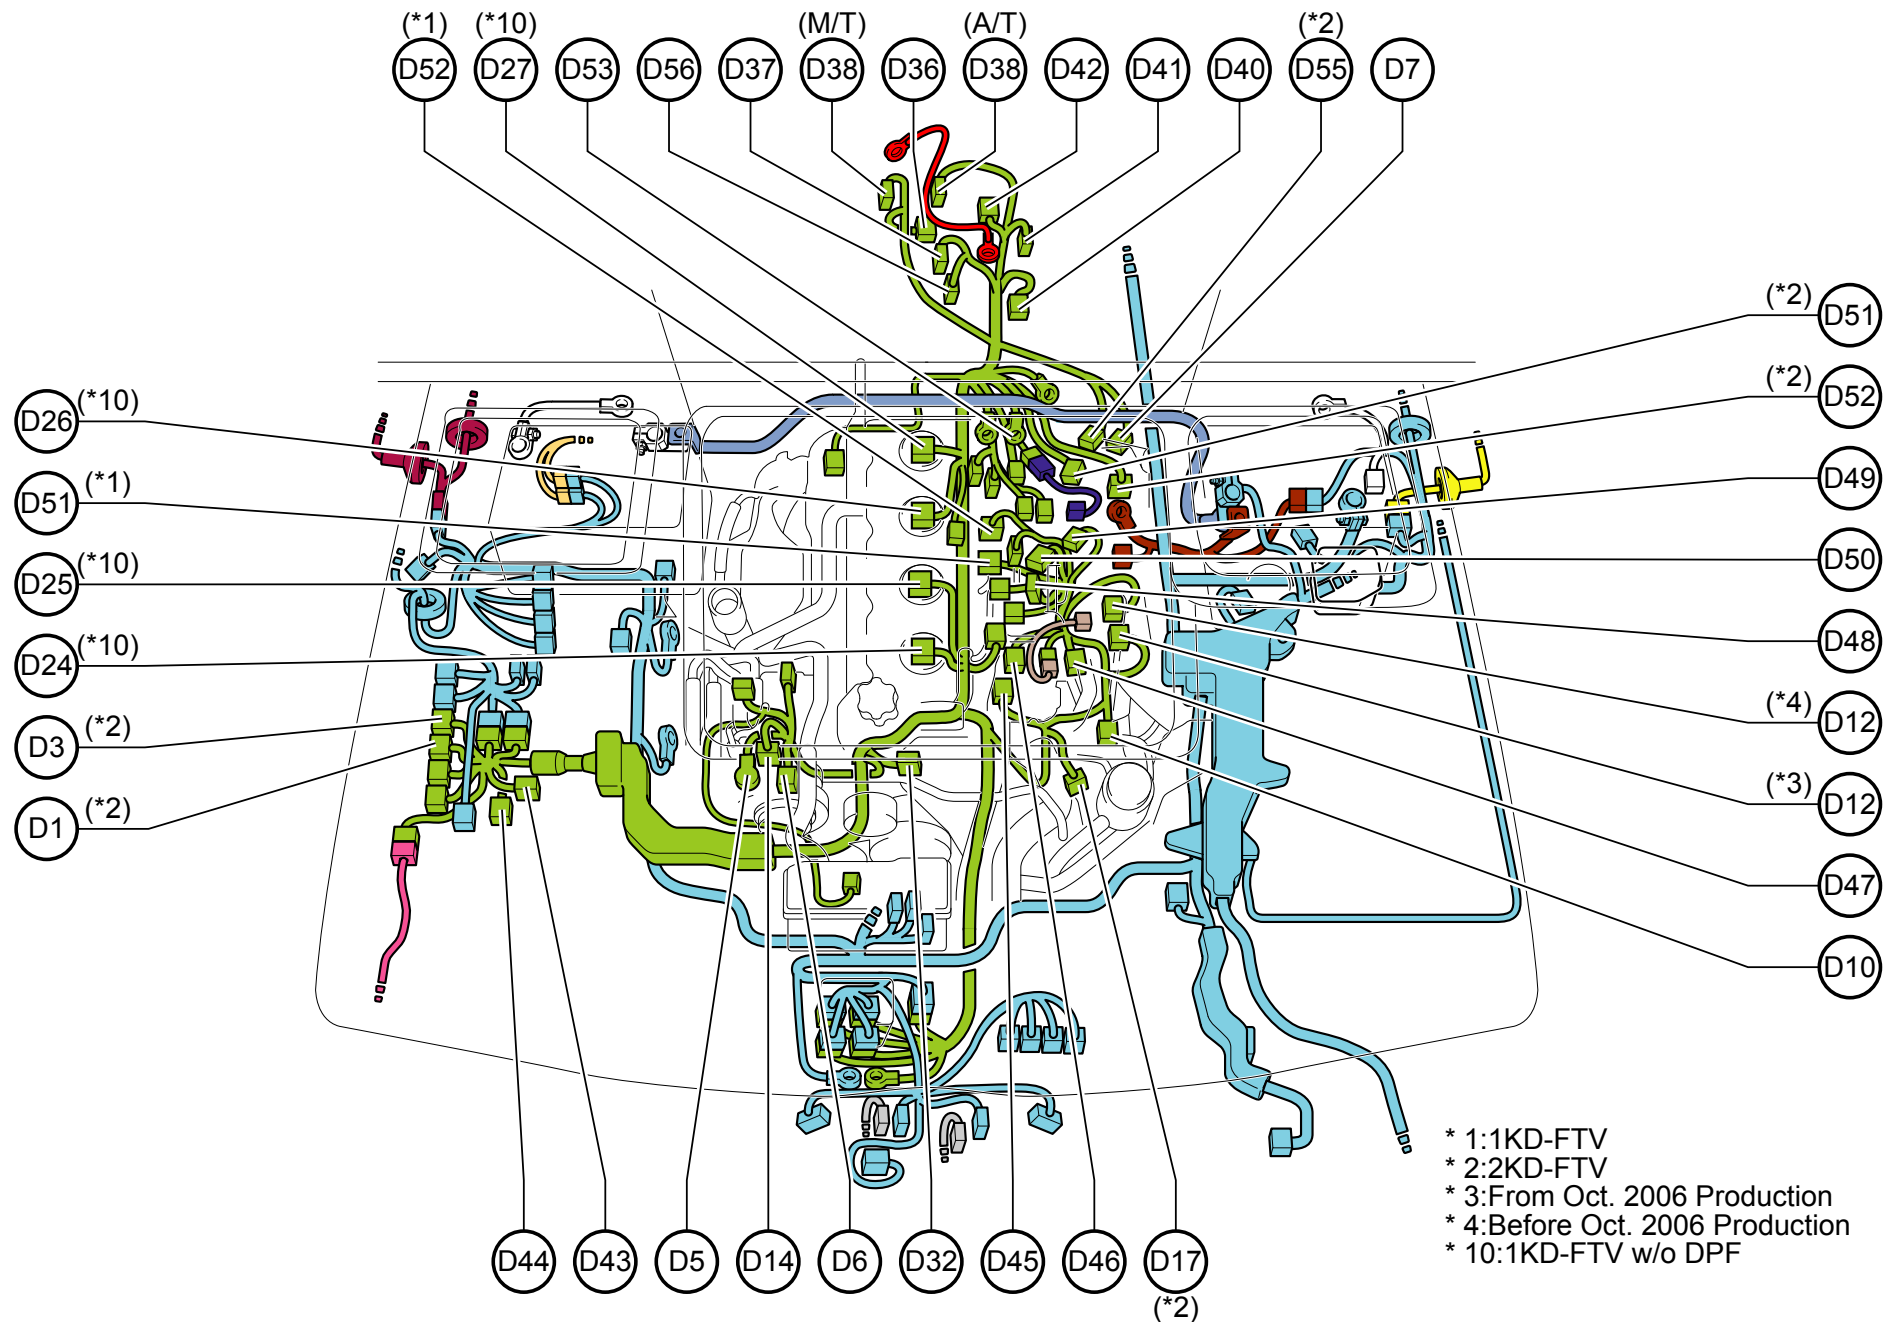
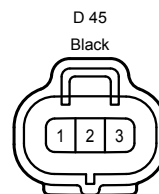
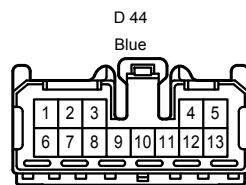
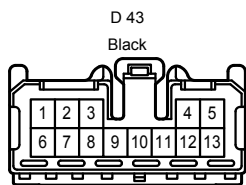
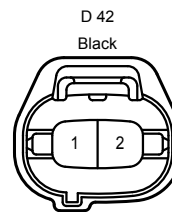
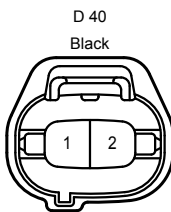
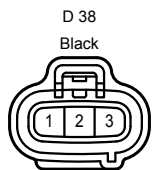
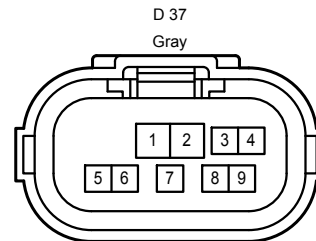
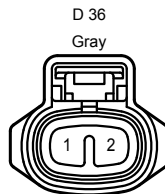
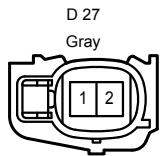
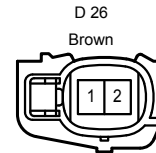
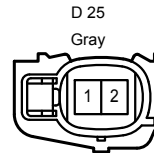
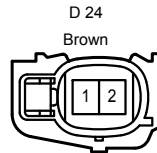
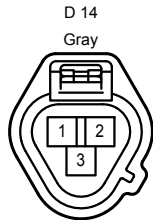
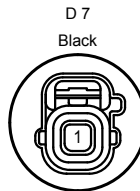
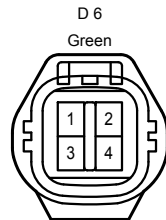
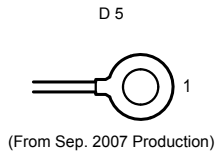
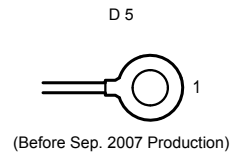







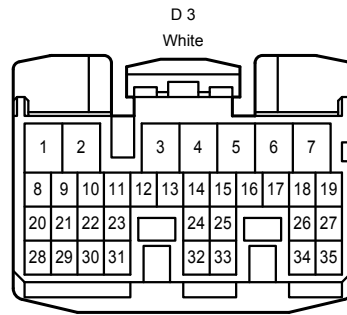


- D 1 Engine ECU
- D 3 Engine ECU
- D 5 Alternator
- D 6 Alternator
- D 7 Engine Oil Pressure SW
- D 10 Camshaft Position Sensor
- D 12 Engine Oil Level Sensor
- D 14 A/C Compressor
- D 17 Crankshaft Position Sensor
- D 24 Fuel Injector (No.1)
- D 25 Fuel Injector (No.2)
- D 26 Fuel Injector (No.3)
- D 27 Fuel Injector (No.4)
- D 32 Water Temp. Sensor (Engine Coolant)
- D 36 Back-Up Lamp SW
- D 37 Park/Neutral Position SW
- D 38 Speed Sensor
- D 40 Transmission Revolution Sensor (Input)
- D 41 ECT Solenoid
- D 42 Transmission Revolution Sensor (Output)
- D 43 Junction Connector
- D 44 Junction Connector
- D 45 Fuel Pressure Sensor
- D 46 Fuel Temp. Sensor
- D 47 Suction Control Valve
- D 48 Throttle Body Assembly
- D 49 Inlet Air Temp. Sensor (Intake Manifold)
- D 50 Throttle Body Assembly
- D 51 Turbo Pressure Sensor
- D 52 EGR Valve Position Sensor
- D 53 Glow Plug
- D 55 VRV (EGR)
- D 56 A/T Fluid Temp. Sensor


# Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

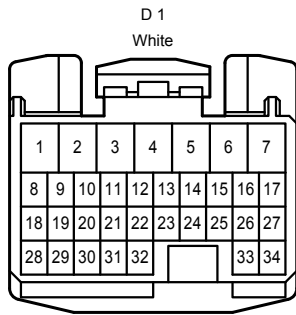

Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

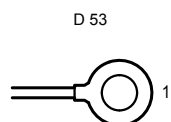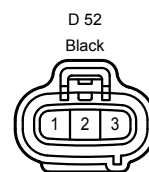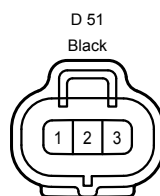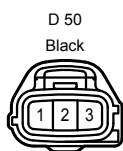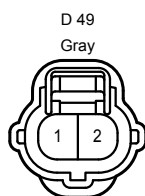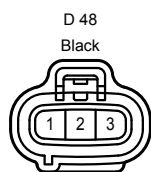

(1KD-FTV Before Sep. 2007 Production, 2KD-FTV)

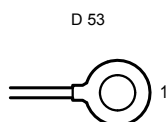

(1KD-FTV From Sep. 2007 Production)

