


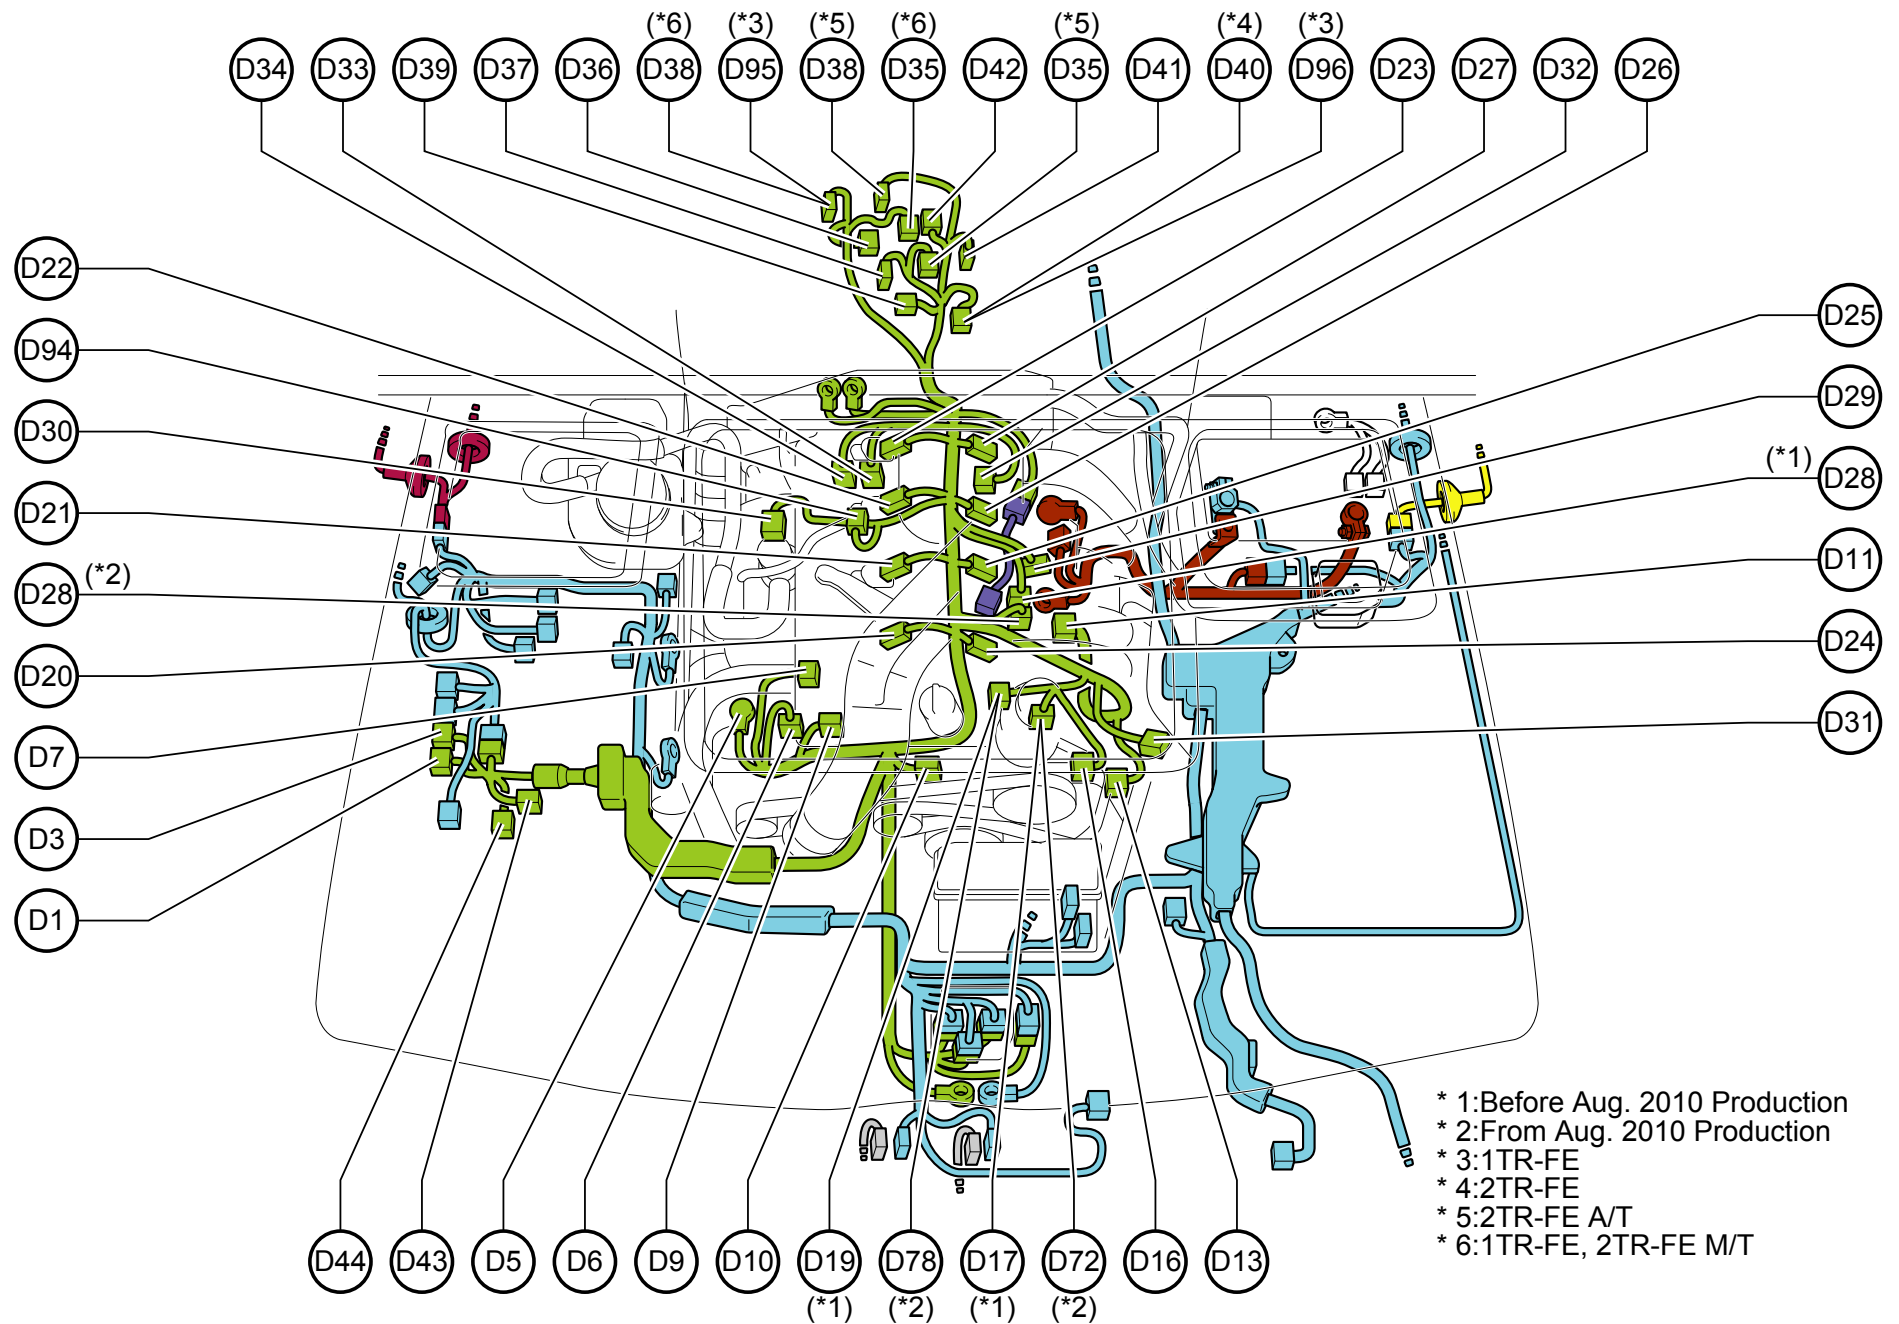

- D 1 Engine ECU
- D 3 Engine ECU
- D 5 Alternator
- D 6 Alternator
- D 7 Engine Oil Pressure SW
- D 9 Noise Filter (Ignition)
- D 10 Camshaft Position Sensor
- D 11 Engine Oil Level Sensor
- D 13 A/C Compressor
- D 16 Power Steering Oil Pressure SW
- D 17 Crankshaft Position Sensor
- D 19 Camshaft Timing Oil Control Valve
- D 20 Ignition Coil (No.1)
- D 21 Ignition Coil (No.2)
- D 22 Ignition Coil (No.3)
- D 23 Ignition Coil (No.4)
- D 24 Fuel Injector (No.1)
- D 25 Fuel Injector (No.2)
- D 26 Fuel Injector (No.3)
- D 27 Fuel Injector (No.4)
- D 28 Purge VSV
- D 29 Throttle Body Assembly
- D 30 Air Switching Valve
- D 31 Variable Resistor
- D 32 Water Temp. Sensor (Engine Coolant)
- D 33 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 34 Heated Oxygen Sensor (Bank 1 Sensor 1)
- D 35 Heated Oxygen Sensor (Bank 1 Sensor 2)
- D 36 Back-Up Lamp SW
- D 37 Park/Neutral Position SW
- D 38 Speed Sensor
- D 39 A/T Fluid Temp. Sensor
- D 40 Transmission Revolution Sensor (Input)
- D 41 ECT Solenoid
- D 42 Transmission Revolution Sensor (Output)
- D 43 Junction Connector
- D 44 Junction Connector
- D 72 Crankshaft Position Sensor
- D 78 Camshaft Timing Oil Control Valve
- D 94 Air Pressure Sensor
- D 95 A/T Fluid Temp. Sensor
- D 96 Transmission Revolution Sensor (Input)

Position of Parts in Engine Compartment <RHD 1TR-FE, 2TR-FE>

