


* 2:From Aug. 2010 Production

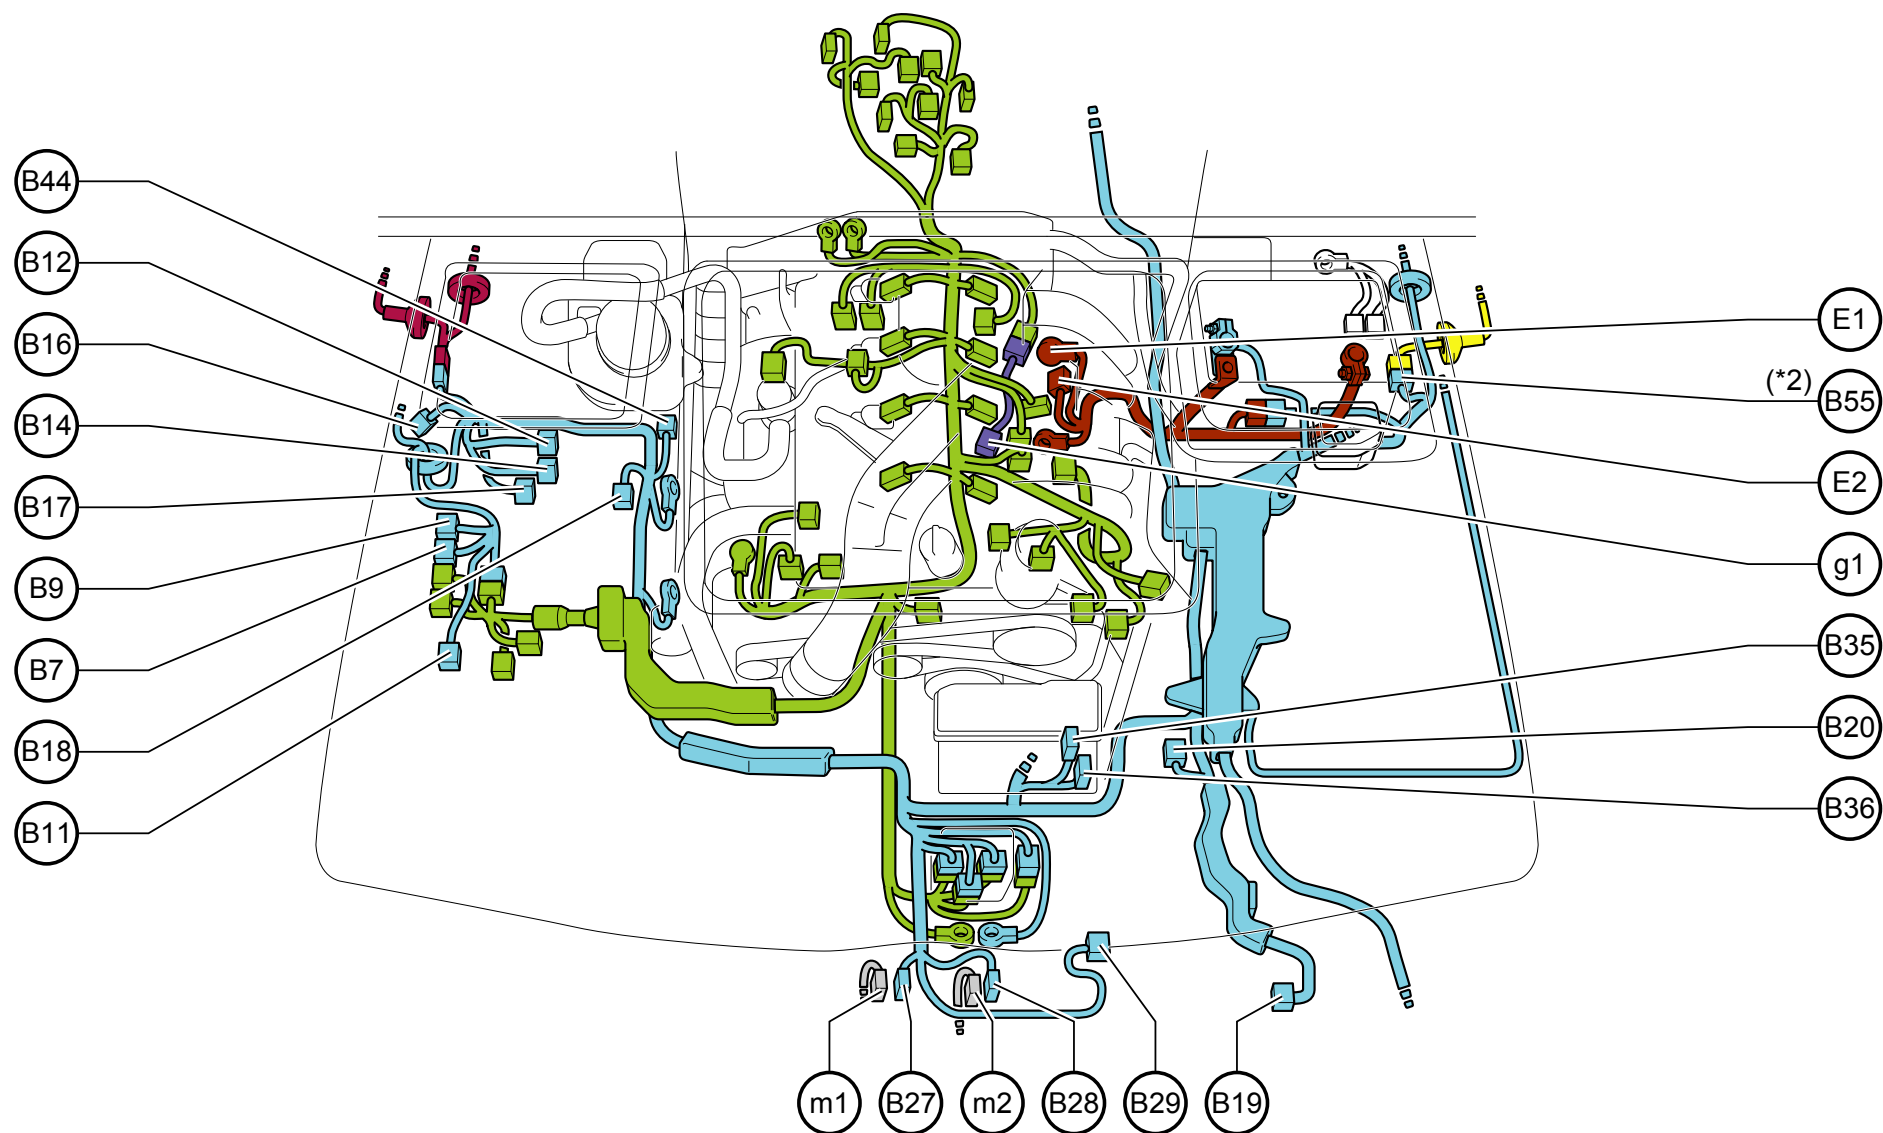

- B 7 Engine ECU
- B 9 Engine ECU
- B 11 Front Seat Inner Belt (Driver's Side)
- B 12 Air Injection Control Driver
- B 14 Air Injection Control Driver
- B 16 A/C Magnetic Valve (Rear A/C)
- B 17 Air Pump
- B 18 Speed Sensor (Front RH)
- B 19 Skid Control ECU with Actuator
- B 20 Speed Sensor (Front LH)
- B 27 Cooling Fan ECU No.1
- B 28 Cooling Fan ECU No.2
- B 29 Water Temp. Sensor (Radiator)
- B 35 Junction Connector
- B 36 Junction Connector
- B 44 Option Connector (TVSS Siren)
- B 55 Slide Door Control Junction (Male LH)

- E 1 Starter
- E 2 Starter

- g 1 Knock Control Sensor (Bank 1)

- m 1 Cooling Fan ECU No.1 , Cooling Fan Motor No.1
- m 2 Cooling Fan ECU No.2 , Cooling Fan Motor No.1

Position of Parts in Engine Compartment <RHD 1TR-FE, 2TR-FE>

