


Position of Parts in Engine Compartment <RHD 5L-E>

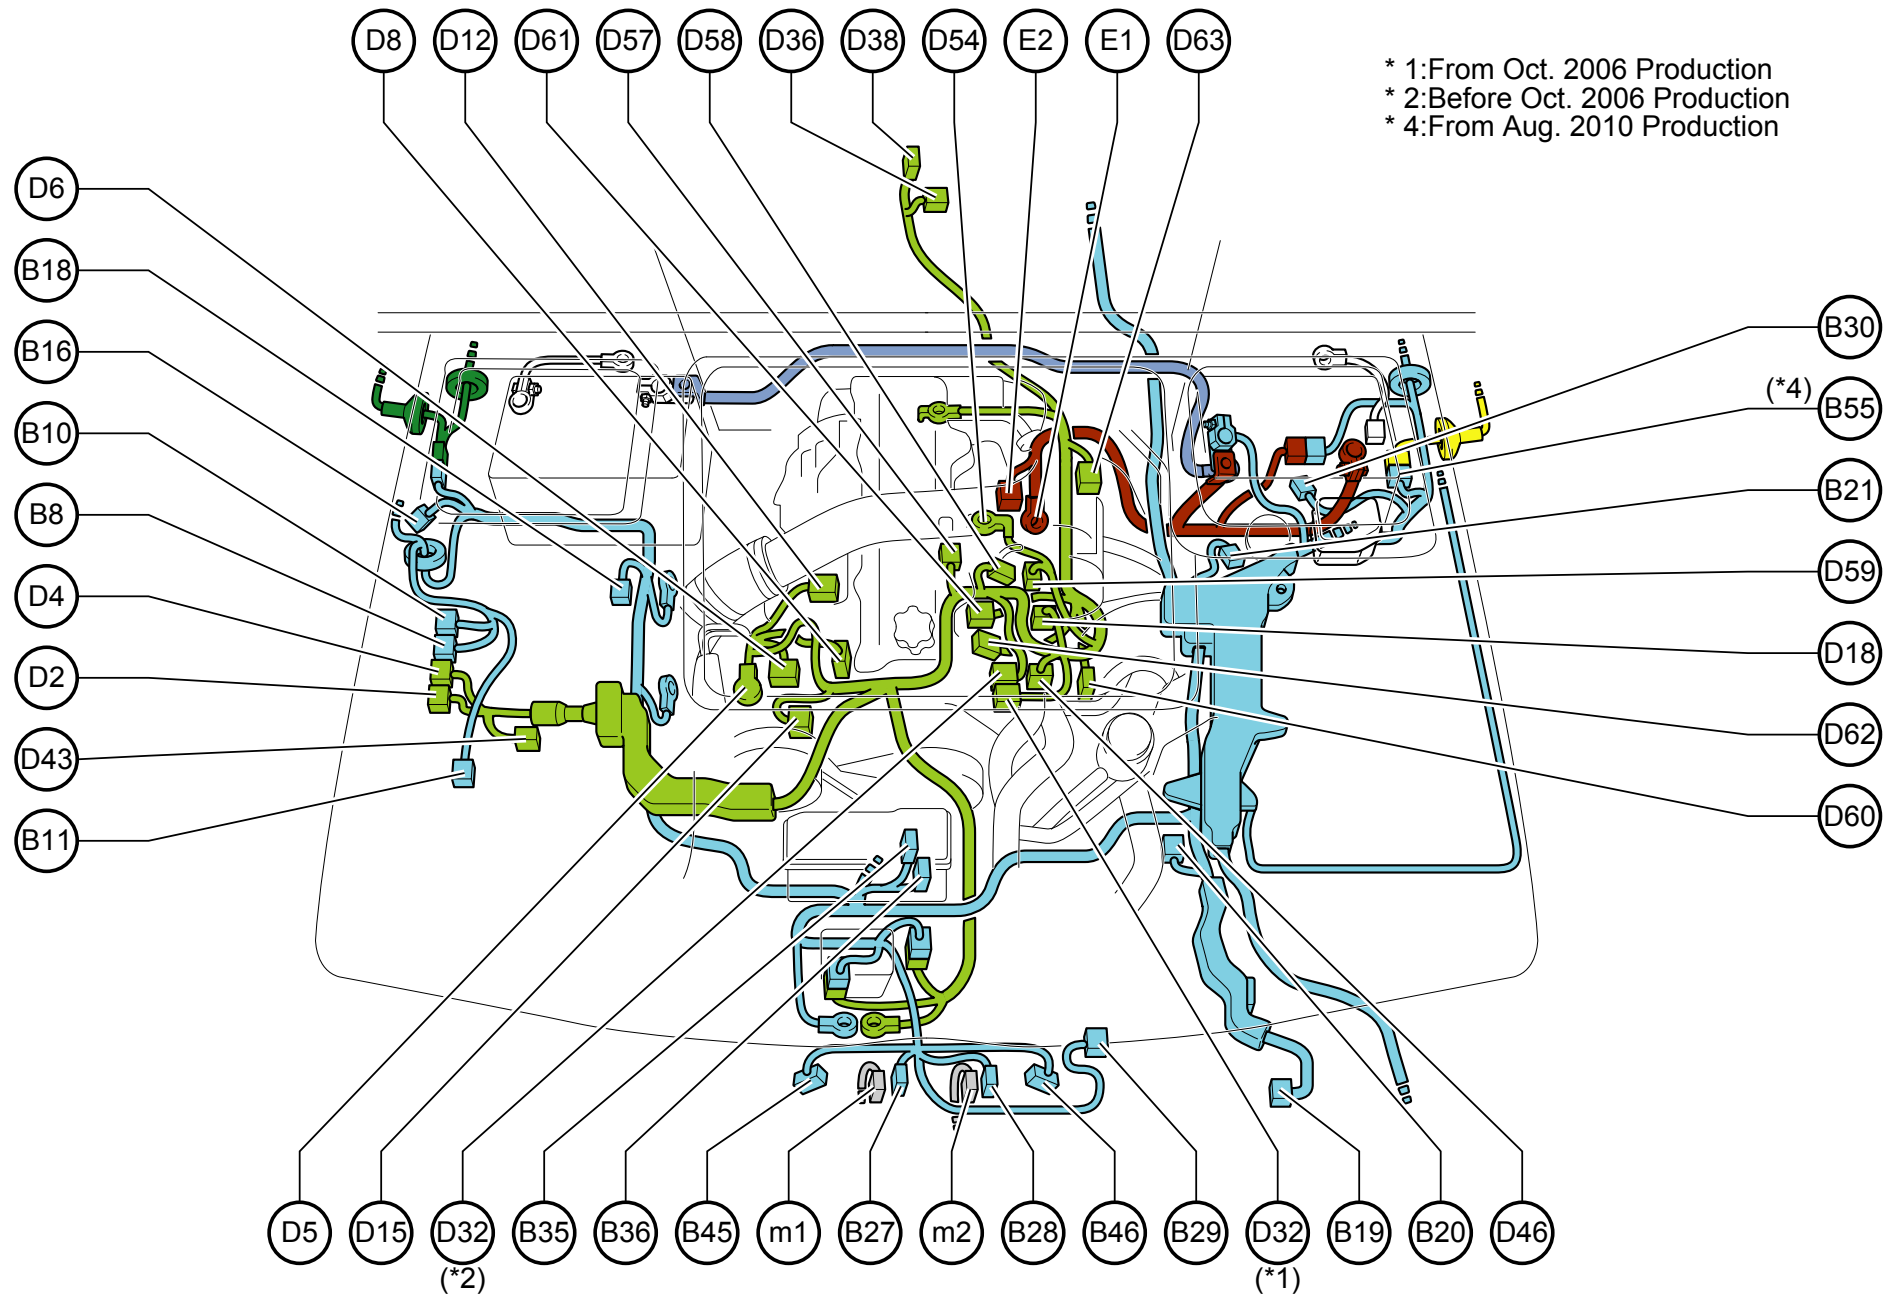















 


B 8 Engine ECU
 B 10 Engine ECU
 B 11 Front Seat Inner Belt (Driver's Side)
 B 16 A/C Magnetic Valve (Rear A/C)
 B 18 Speed Sensor (Front RH)
 B 19 Skid Control ECU with Actuator
 B 20 Speed Sensor (Front LH)
 B 21 Fuel Filter Warning SW
 B 27 Cooling Fan ECU No.1
 B 28 Cooling Fan ECU No.2
 B 29 Water Temp. Sensor (Radiator)
 B 30 Fuel Sedimentary Level Warning SW
 B 35 Junction Connector
 B 36 Junction Connector
 B 45 Cooling Fan ECU No.1
 B 46 Cooling Fan ECU No.2
 B 55 Slide Door Control Junction (Male LH)

D 2 Engine ECU
 D 4 Engine ECU
 D 5 Alternator
 D 6 Alternator
 D 8 Engine Oil Pressure SW
 D 12 Engine Oil Level Sensor
 D 15 A/C Compressor
 D 18 Engine Speed Sensor
 D 32 Water Temp. Sensor (Engine Coolant)
 D 36 Back-Up Lamp SW
 D 38 Speed Sensor
 D 43 Junction Connector
 D 46 Fuel Temp. Sensor
 D 54 Glow Plug
 D 57 Manifold Absolute Pressure Sensor
 D 58 Throttle Body Assembly
 D 59 Spill Control Valve
 D 60 Injection Pump Assembly
 D 61 Timer Control Valve
 D 62 Crankshaft Position Sensor
 D 63 Throttle Position SW













E 1 Starter
 E 1 Starter
 E 2 Starter

m 1 Cooling Fan ECU No.1 , Cooling Fan Motor No.1
 m 2 Cooling Fan ECU No.2 , Cooling Fan Motor No.1

Position of Parts in Engine Compartment <RHD 5L-E>

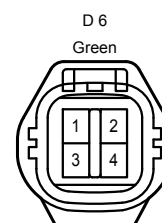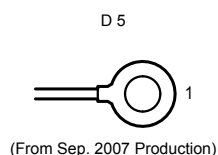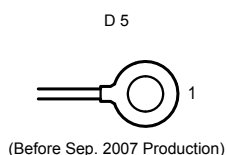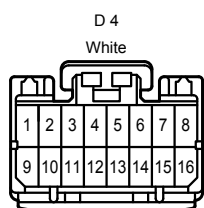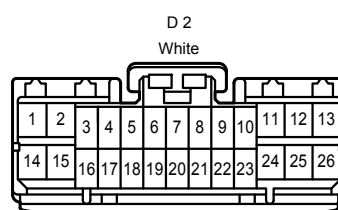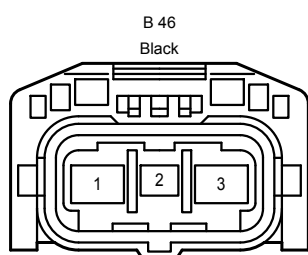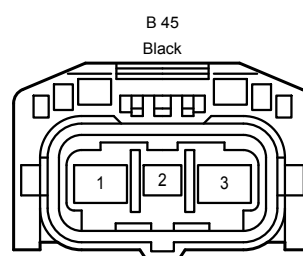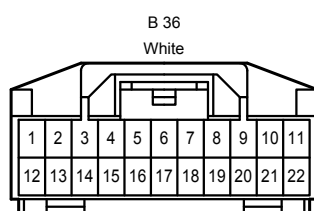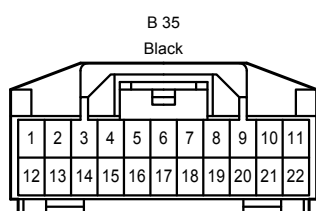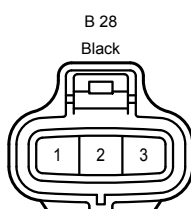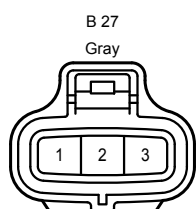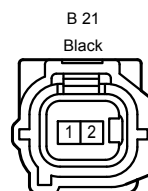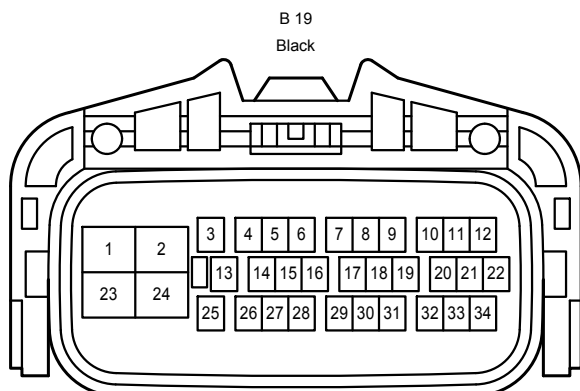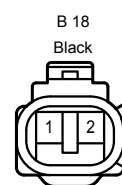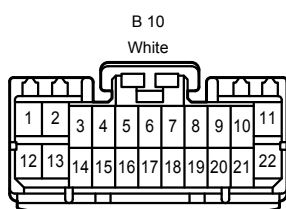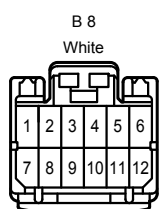

  Position of Parts in Engine Compartment <RHD 5L-E>

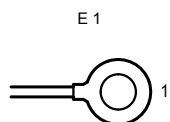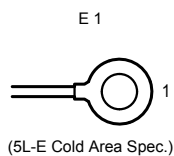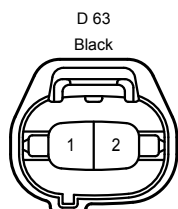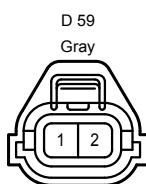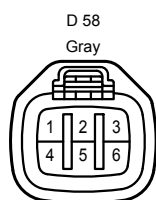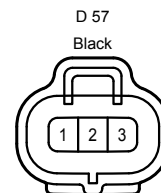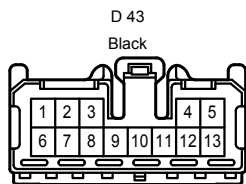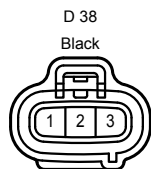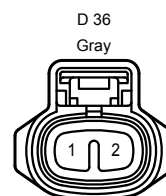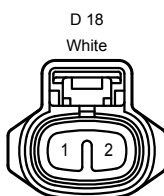

(5L-E Except Cold Area Spec., 2KD-FTV M/T South Africa Production Except Cold Area Spec., 2TR-FE China)



(1KD-FTV, 2KD-FTV, 5L-E)

