


Position of Parts in Body <RHD>

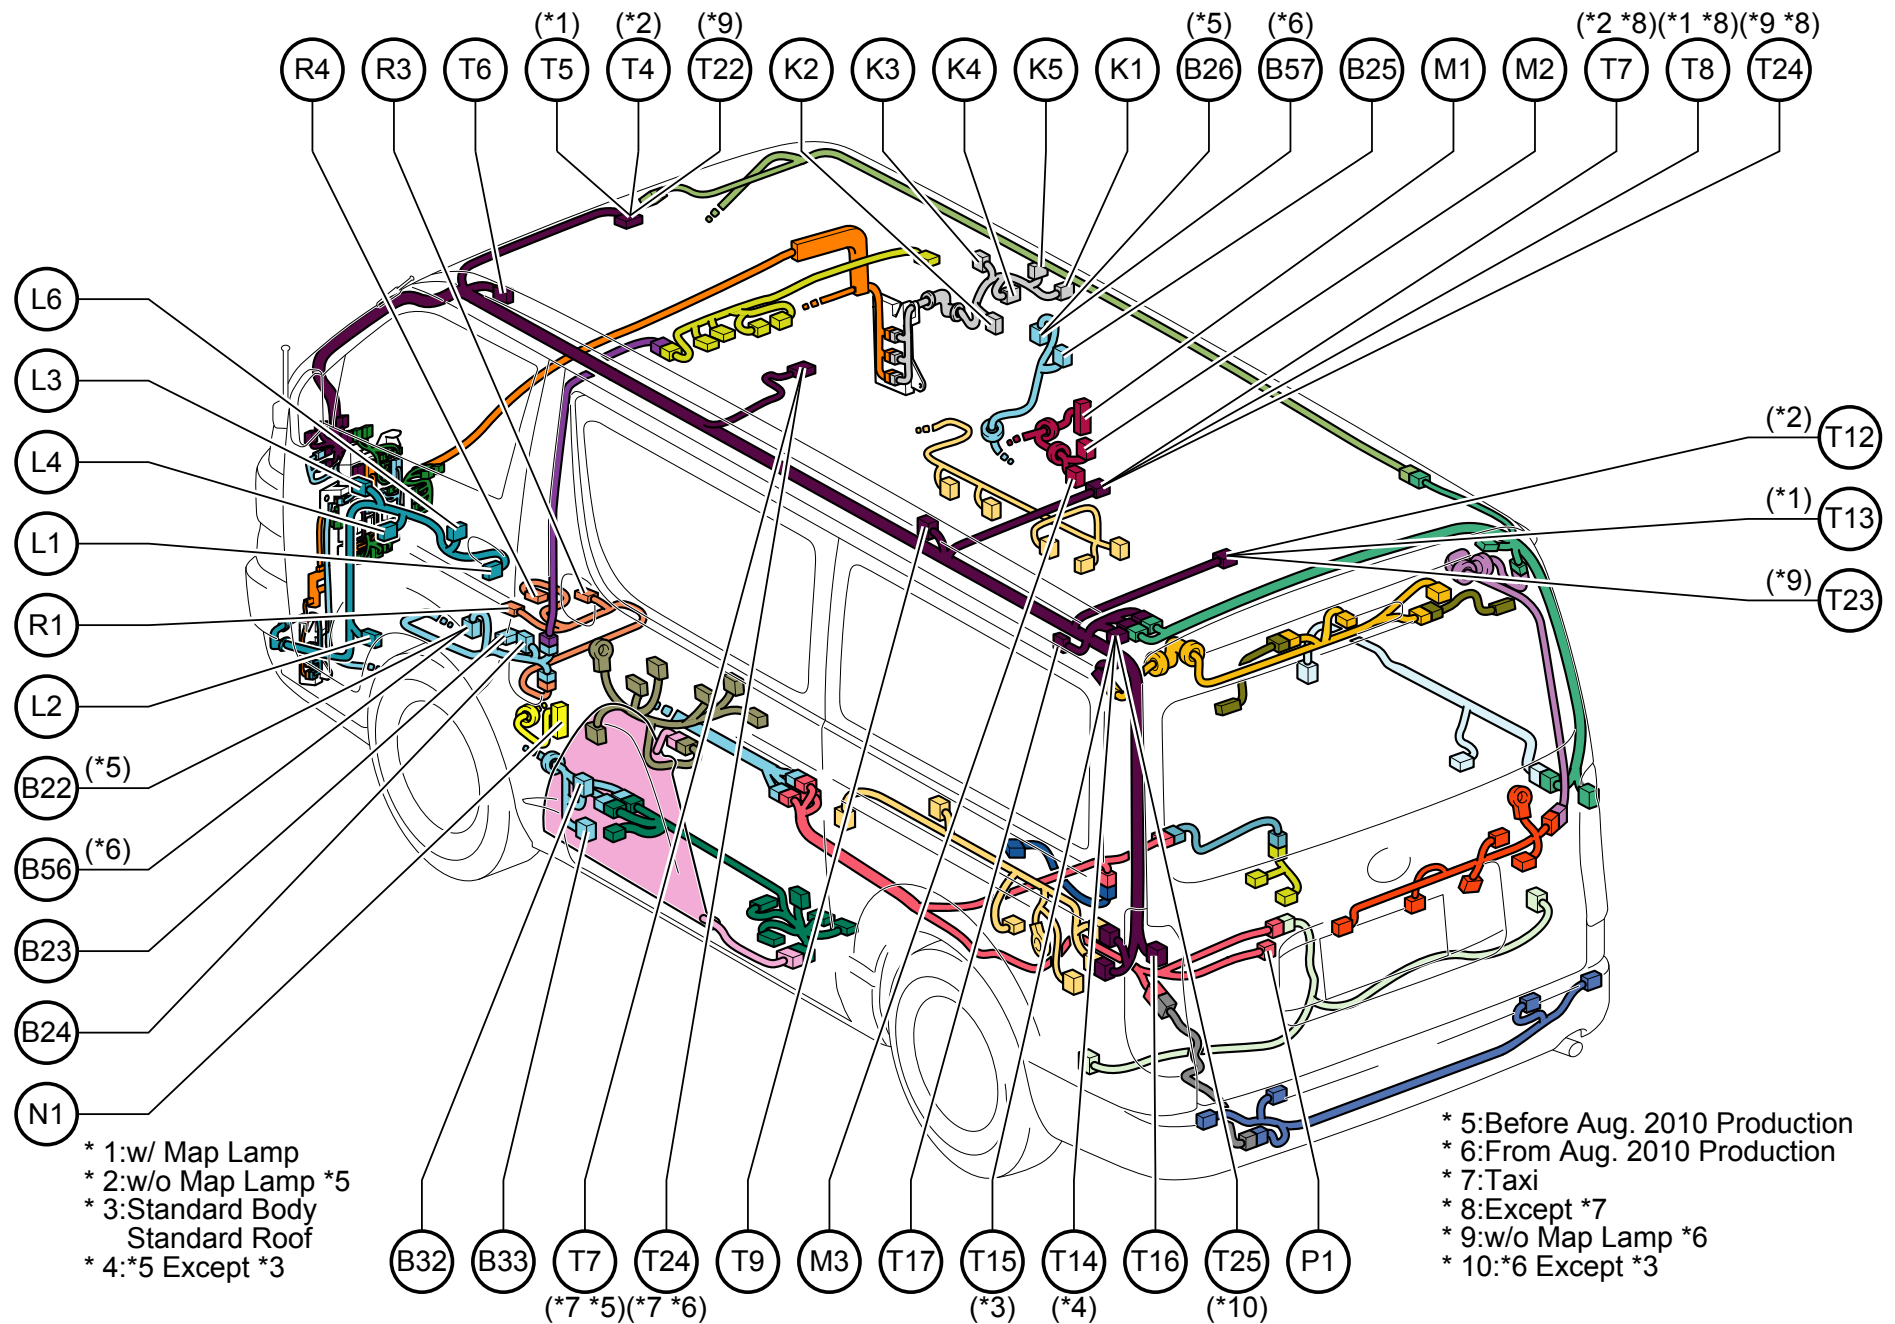

B 22 Door Courtesy SW (Front LH)
 B 23 Front Seat Outer Belt (LH)
 B 24 Blower SW (Rear Heater)
 B 25 Front Seat Outer Belt (RH)
 B 26 Door Courtesy SW (Front RH)
 B 32 Door Control Relay (LH)
 B 33 Step Lamp (LH)
 B 56 Door Courtesy SW (Front LH)
 B 57 Door Courtesy SW (Front RH)

K 1 Door Lock Assembly (Front RH)
 K 2 Speaker (Front Door RH)
 K 3 Outer Rear View Mirror (RH)
 K 4 Power Window Regulator Motor (Front RH)
 K 5 Power Window Master SW

L 1 Door Lock Assembly (Front LH)
 L 2 Speaker (Front Door LH)
 L 3 Outer Rear View Mirror (LH)
 L 4 Power Window Regulator Motor (Front LH)
 L 6 Power Window SW (Front LH)

M 1 Slide Door Control Junction (Male RH)
 M 2 Door Control Relay (RH)
 M 3 Step Lamp (RH)

 
 
 
 
 
 
















N 1 Slide Door Control Junction (Male LH)

P 1 Rear Speed Sensor RH

R 1 Front Seat Inner Belt (Front Passenger's Side)
 R 3 Front Seat Inner Belt (Front Passenger's Side)
 R 4 Belt Warning Occupant Detection Sensor

T 4 Room Lamp (Front)
 T 5 Map Lamp
 T 6 Diode (Door Courtesy No.4)
 T 7 Room Lamp (Center)
 T 8 Room Lamp (Center)
 T 9 Diode (Door Courtesy No.5)
 T 12 Room Lamp (Rear)
 T 13 Room Lamp (Rear)
 T 14 Junction Connector
 T 15 Junction Connector
 T 16 Rear Combination Lamp (LH)
 T 17 Diode (Door Courtesy No.6)
 T 22 Room Lamp (Front)
 T 23 Room Lamp (Rear)
 T 24 Room Lamp (Center)
 T 25 Junction Connector

Position of Parts in Body <RHD>

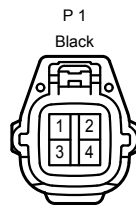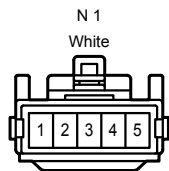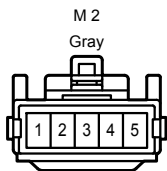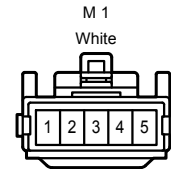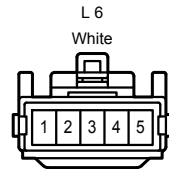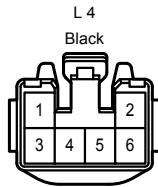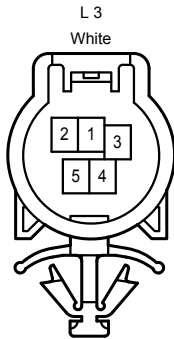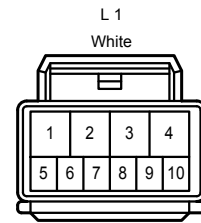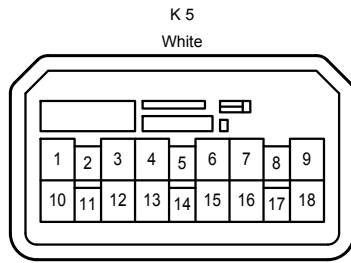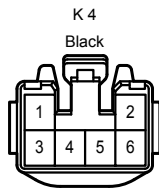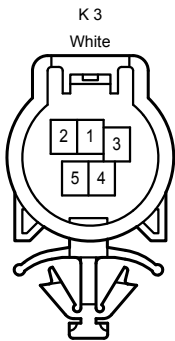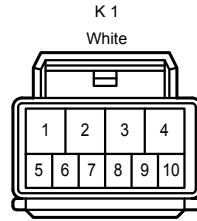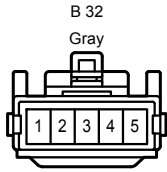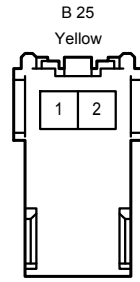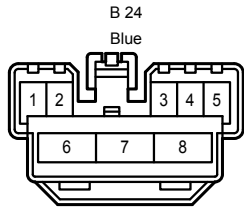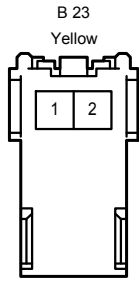

Position of Parts in Body <RHD>

