

 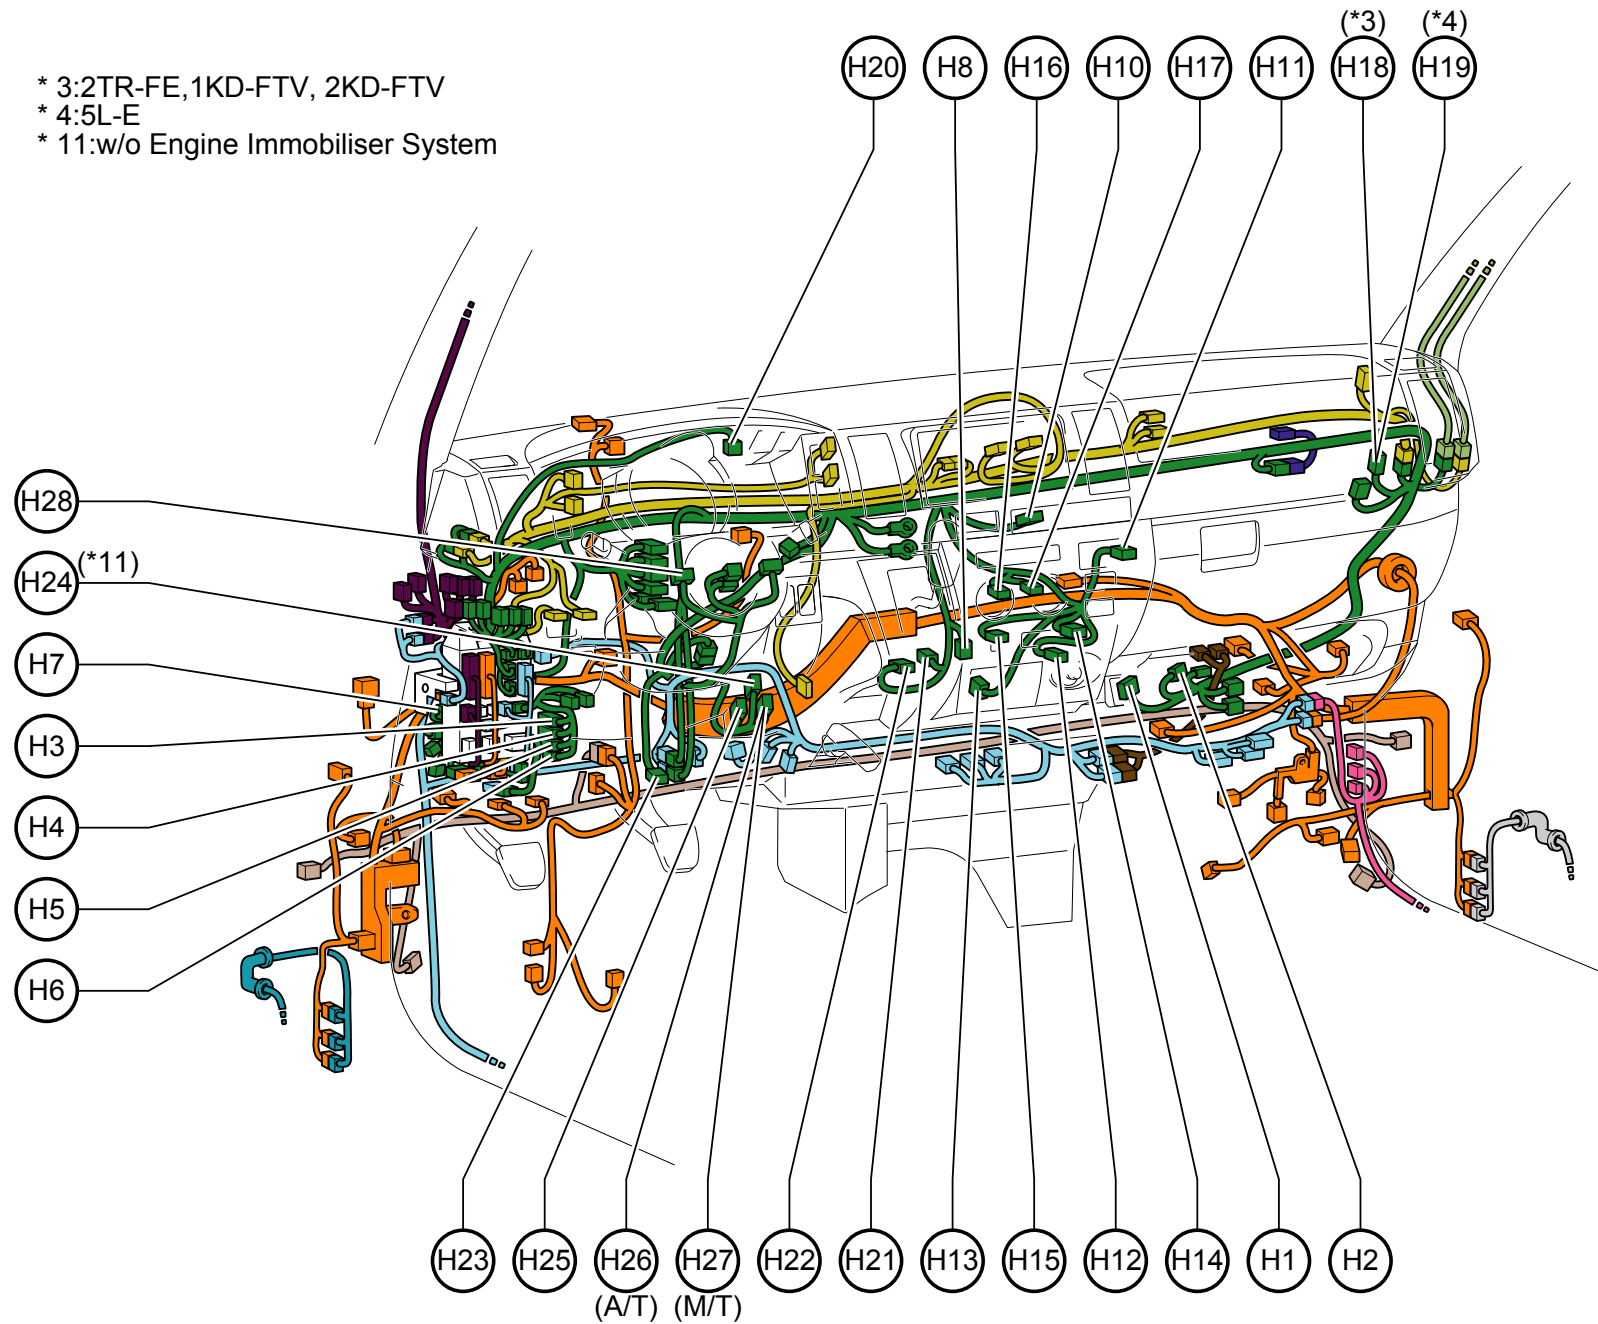
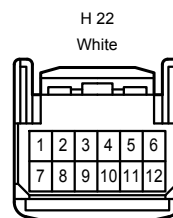

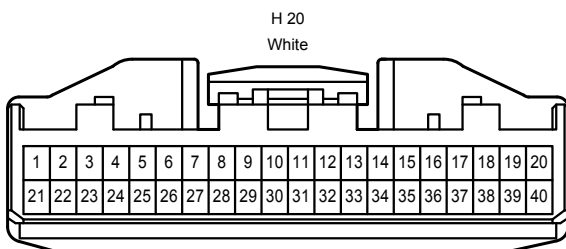
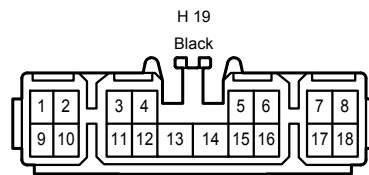
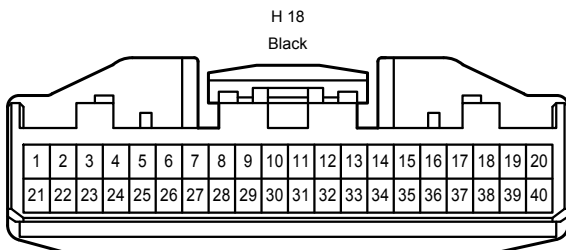
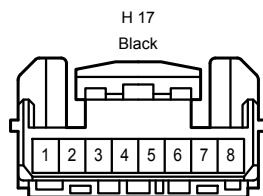
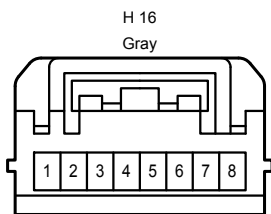
 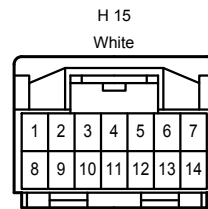
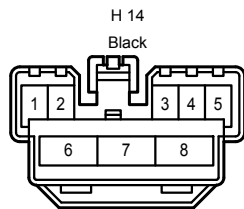

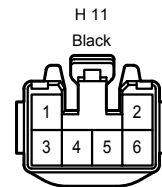
 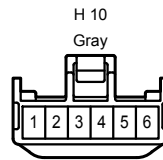
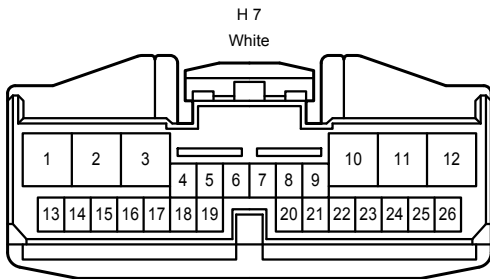


- * 3:2TR-FE,1KD-FTV, 2KD-FTV
- * 4:5L-E
- * 11:w/o Engine Immobiliser System



- H 1 Blower Resistor (Front A/C)
- H 2 Blower Motor (Front A/C)
- H 3 Junction Connector
- H 4 Junction Connector
- H 5 Junction Connector
- H 6 Junction Connector
- H 7 Integration Relay
- H 8 A/C Evaporator Temp. Sensor (Front A/C)
- H 10 Room Lamp SW , Short Pin (Room Lamp SW)
- H 11 Rear Blower SW (Main)
- H 12 Cigarette Lighter
- H 13 Ashtray Illumination
- H 14 Blower SW (Front A/C)
- H 15 Clearance Warning Indicator
- H 16 A/C SW
- H 17 Rear Window Defogger SW
- H 18 A/C Amplifier
- H 19 A/C Amplifier
- H 20 Combination Meter
- H 21 A/T Shift Lever Illumination
- H 22 Shift Lock Control ECU
- H 23 DLC3
- H 24 Ignition Key Cylinder Lamp
- H 25 Ignition SW
- H 26 Unlock Warning SW
- H 27 Unlock Warning SW
- H 28 Combination SW

Position of Parts in Instrument Panel <LHD>

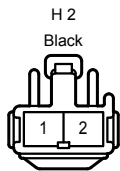

Position of Parts in Instrument Panel <LHD>

