

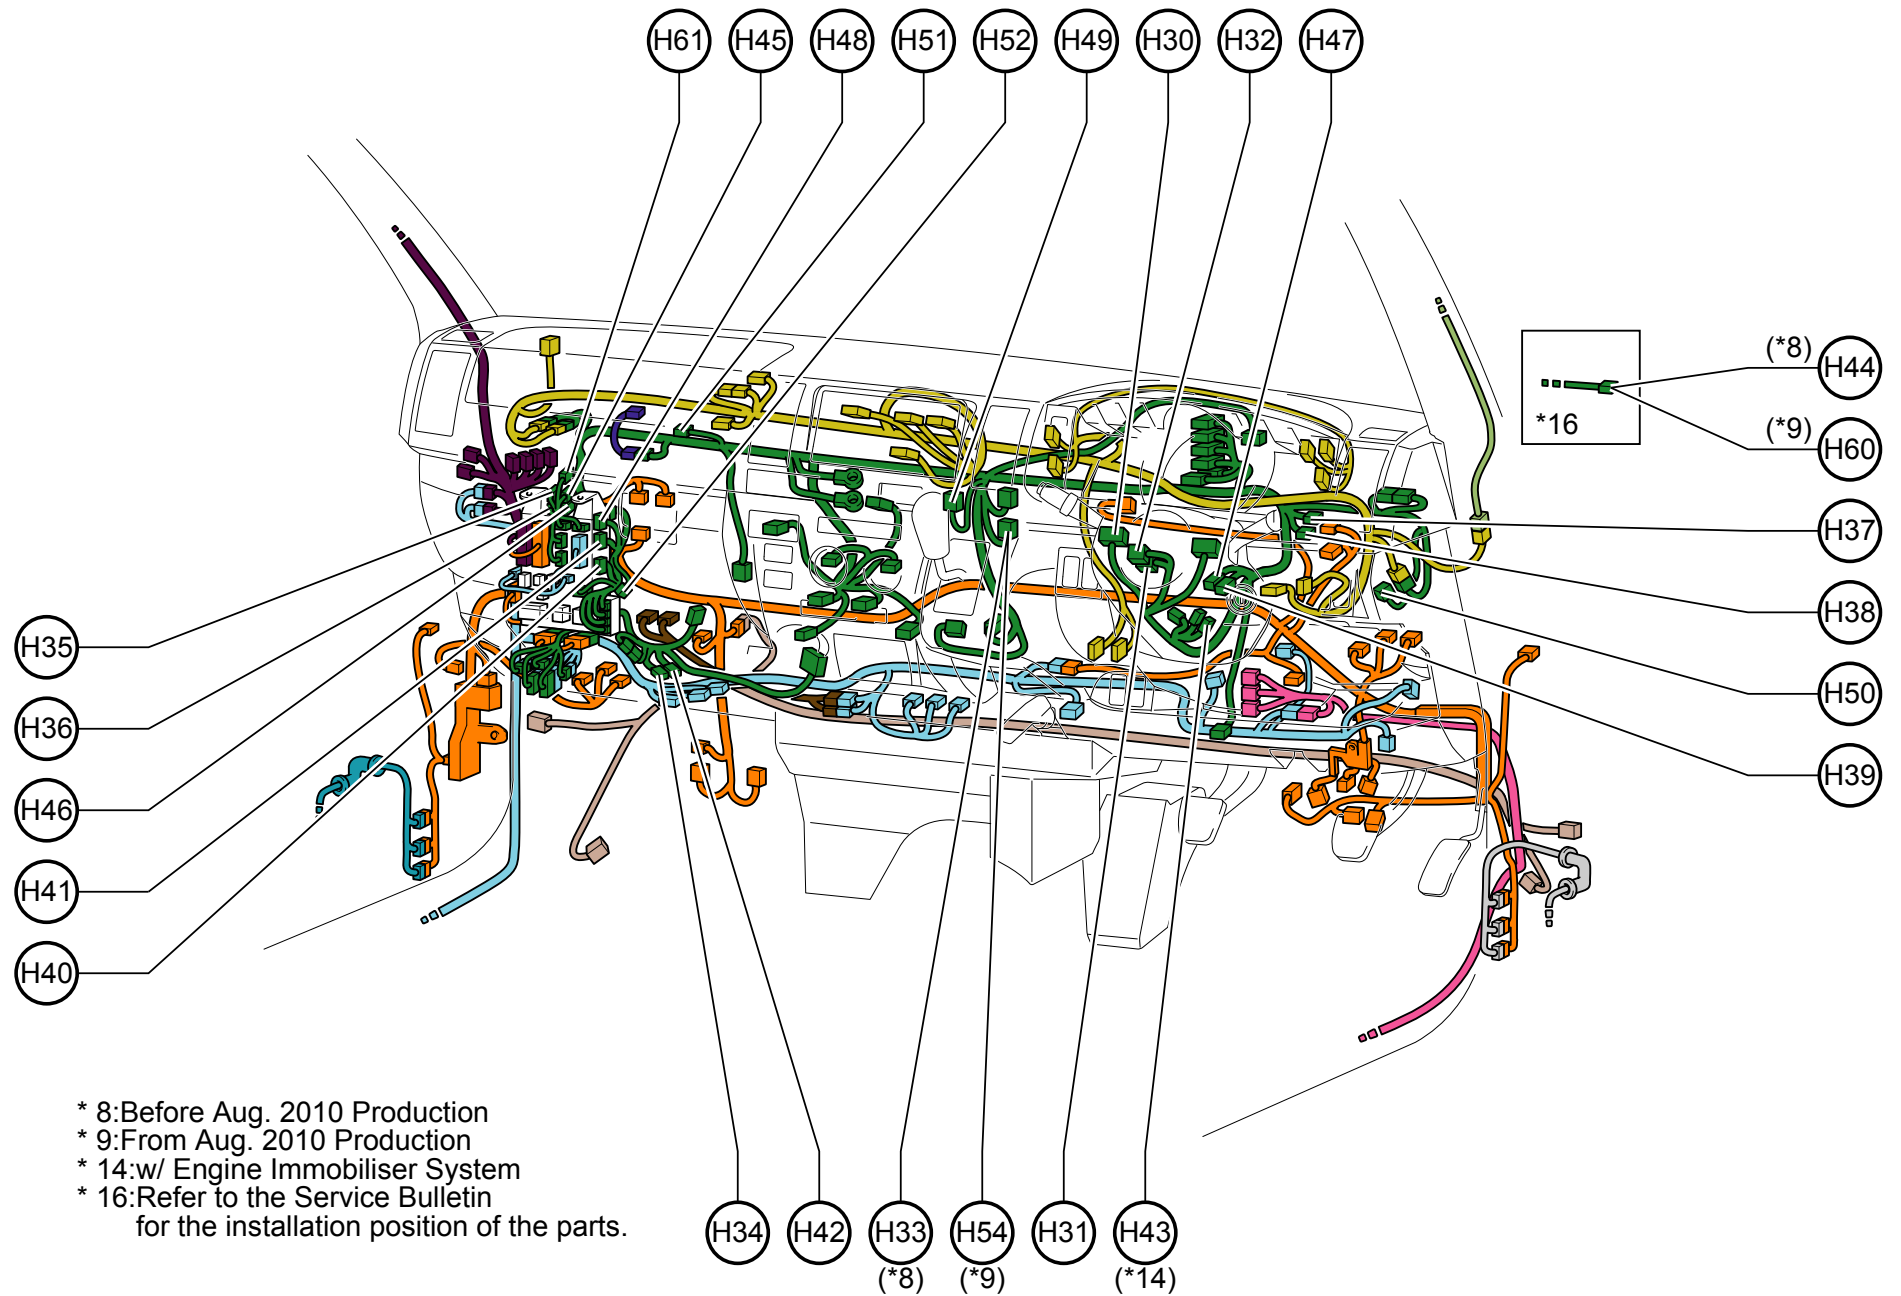
 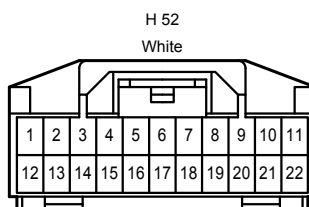
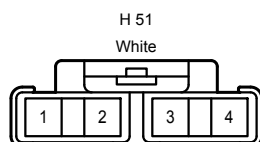
 
 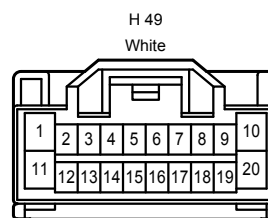
 
 


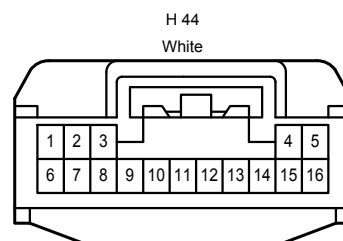
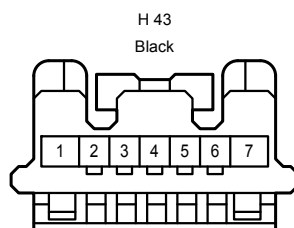
 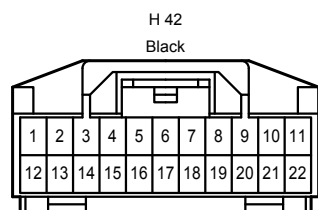
 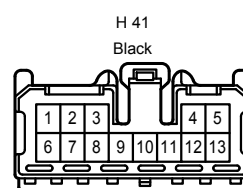
 
 
 
 


 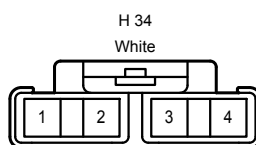
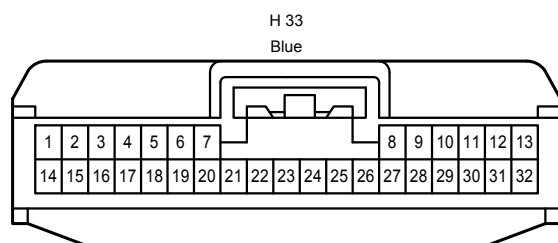



Position of Parts in Instrument Panel <RHD>

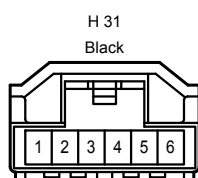


- H 30 Combination SW
- H 31 Spiral Cable
- H 32 Airbag Squib (Steering Wheel Pad)
- H 33 Clearance Warning ECU
- H 34 Fuse Box
- H 35 Diode (Door Courtesy No.1)
- H 36 Diode (Door Courtesy No.2)
- H 37 Diode (Door Courtesy No.3)
- H 38 Diode (Headlight)
- H 39 Diode (Automatic Light Control No.1)
- H 40 Diode (Automatic Light Control No.2)
- H 41 Junction Connector
- H 42 Junction Connector
- H 43 Transponder Key Amplifier
- H 44 Transponder Key ECU
- H 45 Diode (Door Courtesy No.8)
- H 46 Junction Connector
- H 47 Diode (Power Slide Door)
- H 48 Junction Connector
- H 49 Option Connector (TVSS ECU)
- H 50 Option Connector (Clearance Warning Buzzer)
- H 51 Option Connector (Fuse Box)
- H 52 Junction Connector
- H 54 Clearance Warning ECU
- H 60 Transponder Key ECU
- H 61 Diode (Parking Brake SW)

Position of Parts in Instrument Panel <RHD>

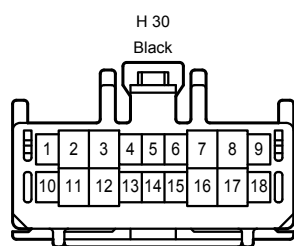


Position of Parts in Instrument Panel <RHD>

H 54
White

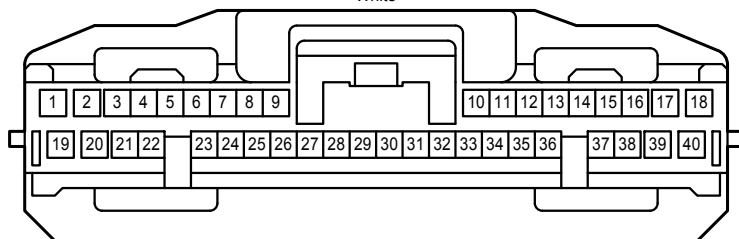

H 60
Black

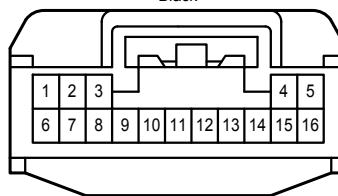

H 61
Gray

