


Position of Parts in Instrument Panel <RHD>

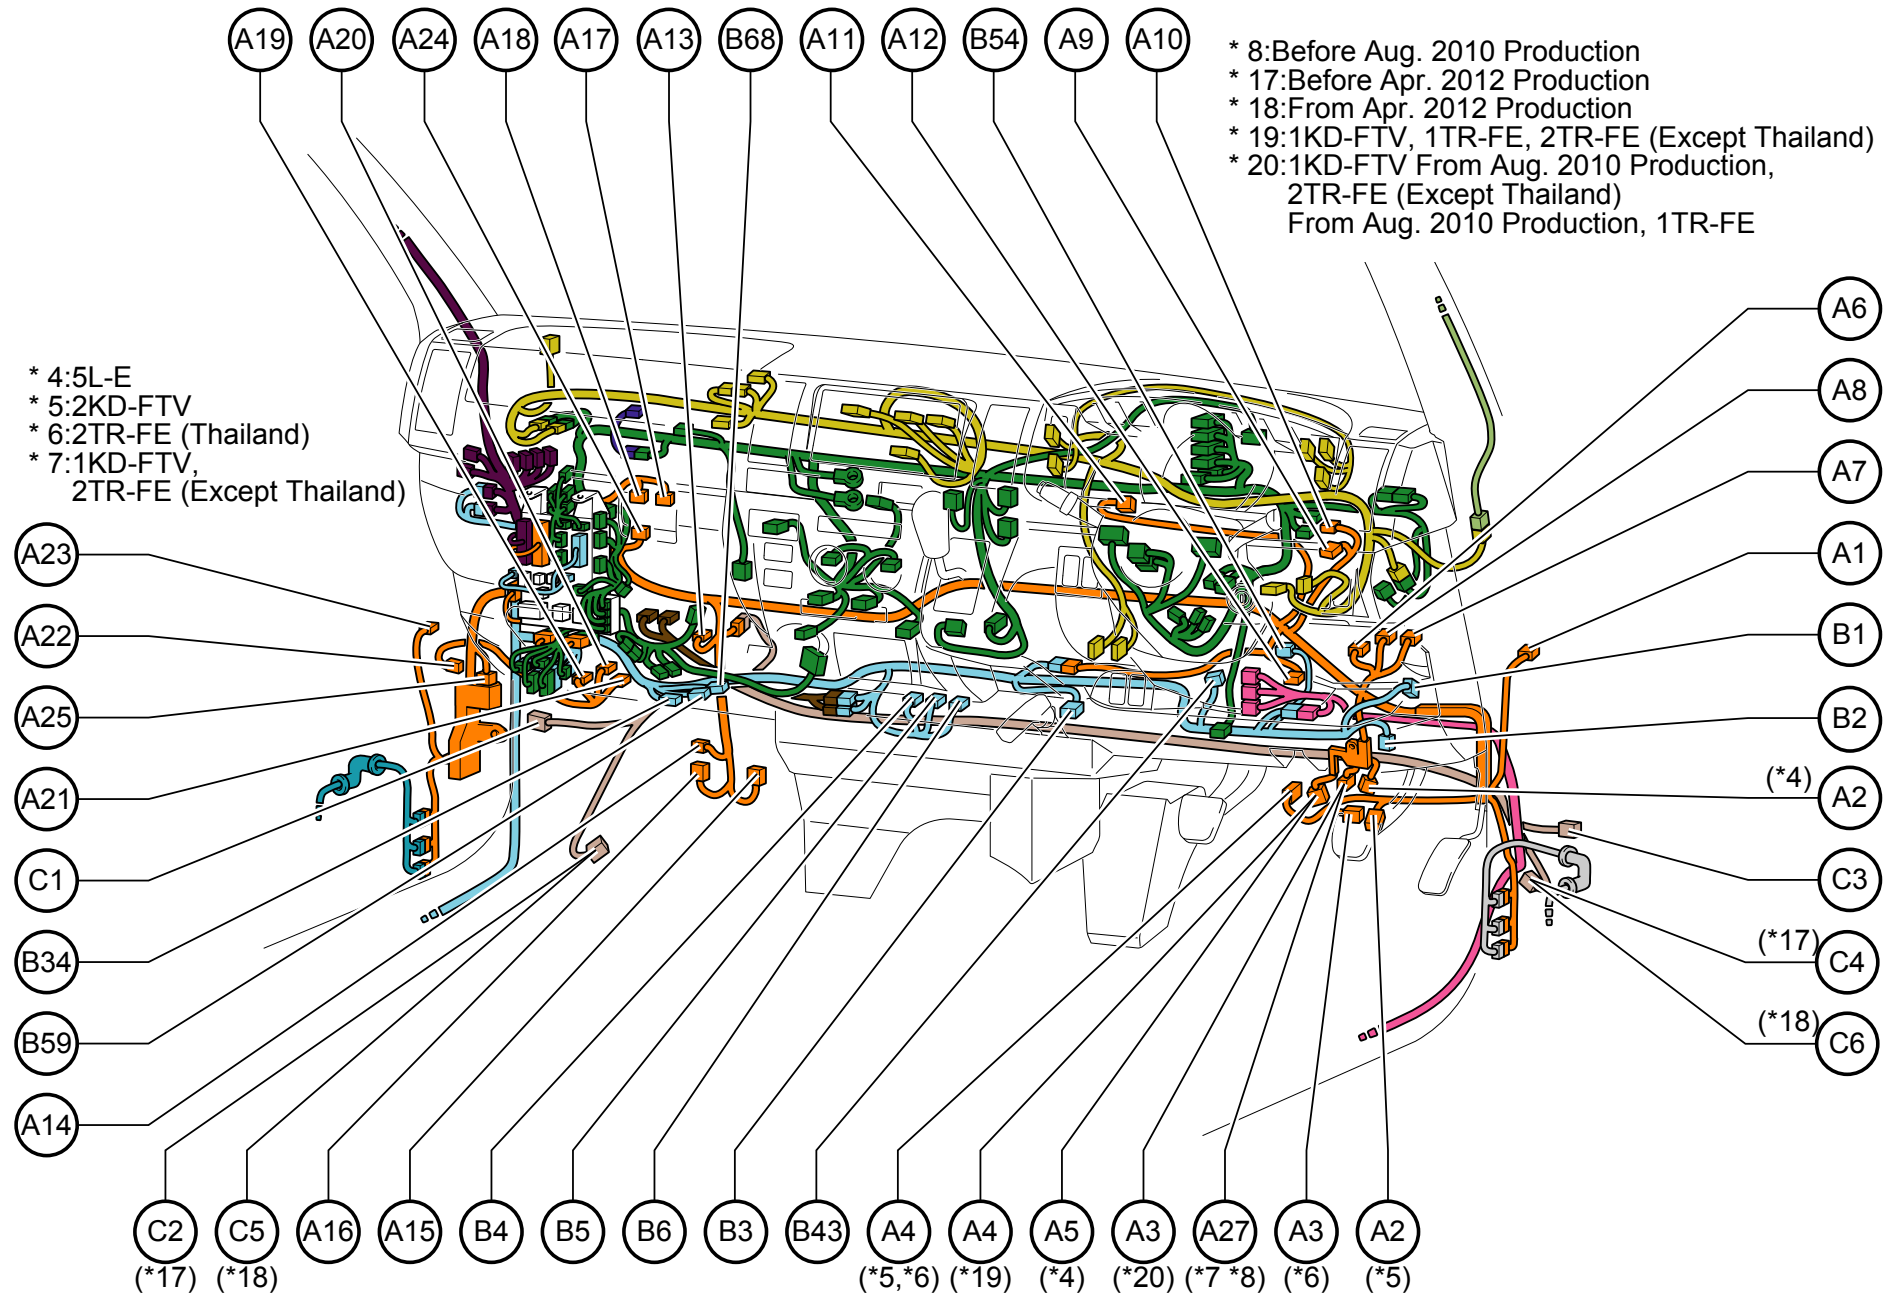


A 1 Turn Signal Lamp (Front RH)
 A 2 Inlet Air Temp. Sensor (Air Cleaner)
 A 3 Air Flow Meter
 A 4 A/C Pressure Sensor No.1
 A 5 Pressure SW
 A 6 Clearance Lamp (Front RH)
 A 7 Headlamp (RH)
 A 8 Headlamp Leveling Motor (RH)
 A 9 Brake Vacuum Warning SW
 A 10 Brake Fluid Level Warning SW
 A 11 Windshield Wiper Motor
 A 12 Airbag Sensor (Front RH)
 A 13 Airbag Sensor (Front LH)
 A 14 Ambient Temp. Sensor
 A 15 Horn (Low)
 A 16 Horn (High)
 A 17 Windshield Washer Motor
 A 18 Rear Washer Motor
 A 19 Headlamp (LH)
 A 20 Headlamp Leveling Motor (LH)
 A 21 Clearance Lamp (Front LH)
 A 22 Cooling Fan Motor No.2
 A 23 Turn Signal Lamp (Front LH)
 A 24 Short Pin (Vacuum)
 A 25 Junction Connector
 A 27 Air Flow Meter


B 1 Accelerator Position Sensor
 B 2 Stop Lamp SW
 B 3 Parking Brake SW
 B 4 Airbag Sensor Assembly Center
 B 5 Airbag Sensor Assembly Center
 B 6 Airbag Sensor Assembly Center
 B 34 Junction Connector
 B 43 Turbo Motor Driver
 B 54 Clutch Switch Assembly
 B 59 Diode (Magnet Clutch)
 B 68 Diode (Oil Pressure)

C 1 Ultrasonic Sensor No.1 (Front LH)
 C 2 Fog Lamp (Front LH)
 C 3 Ultrasonic Sensor No.1 (Front RH)
 C 4 Fog Lamp (Front RH)
 C 5 Fog Lamp (Front LH)
 C 6 Fog Lamp (Front RH)


Position of Parts in Instrument Panel <RHD>

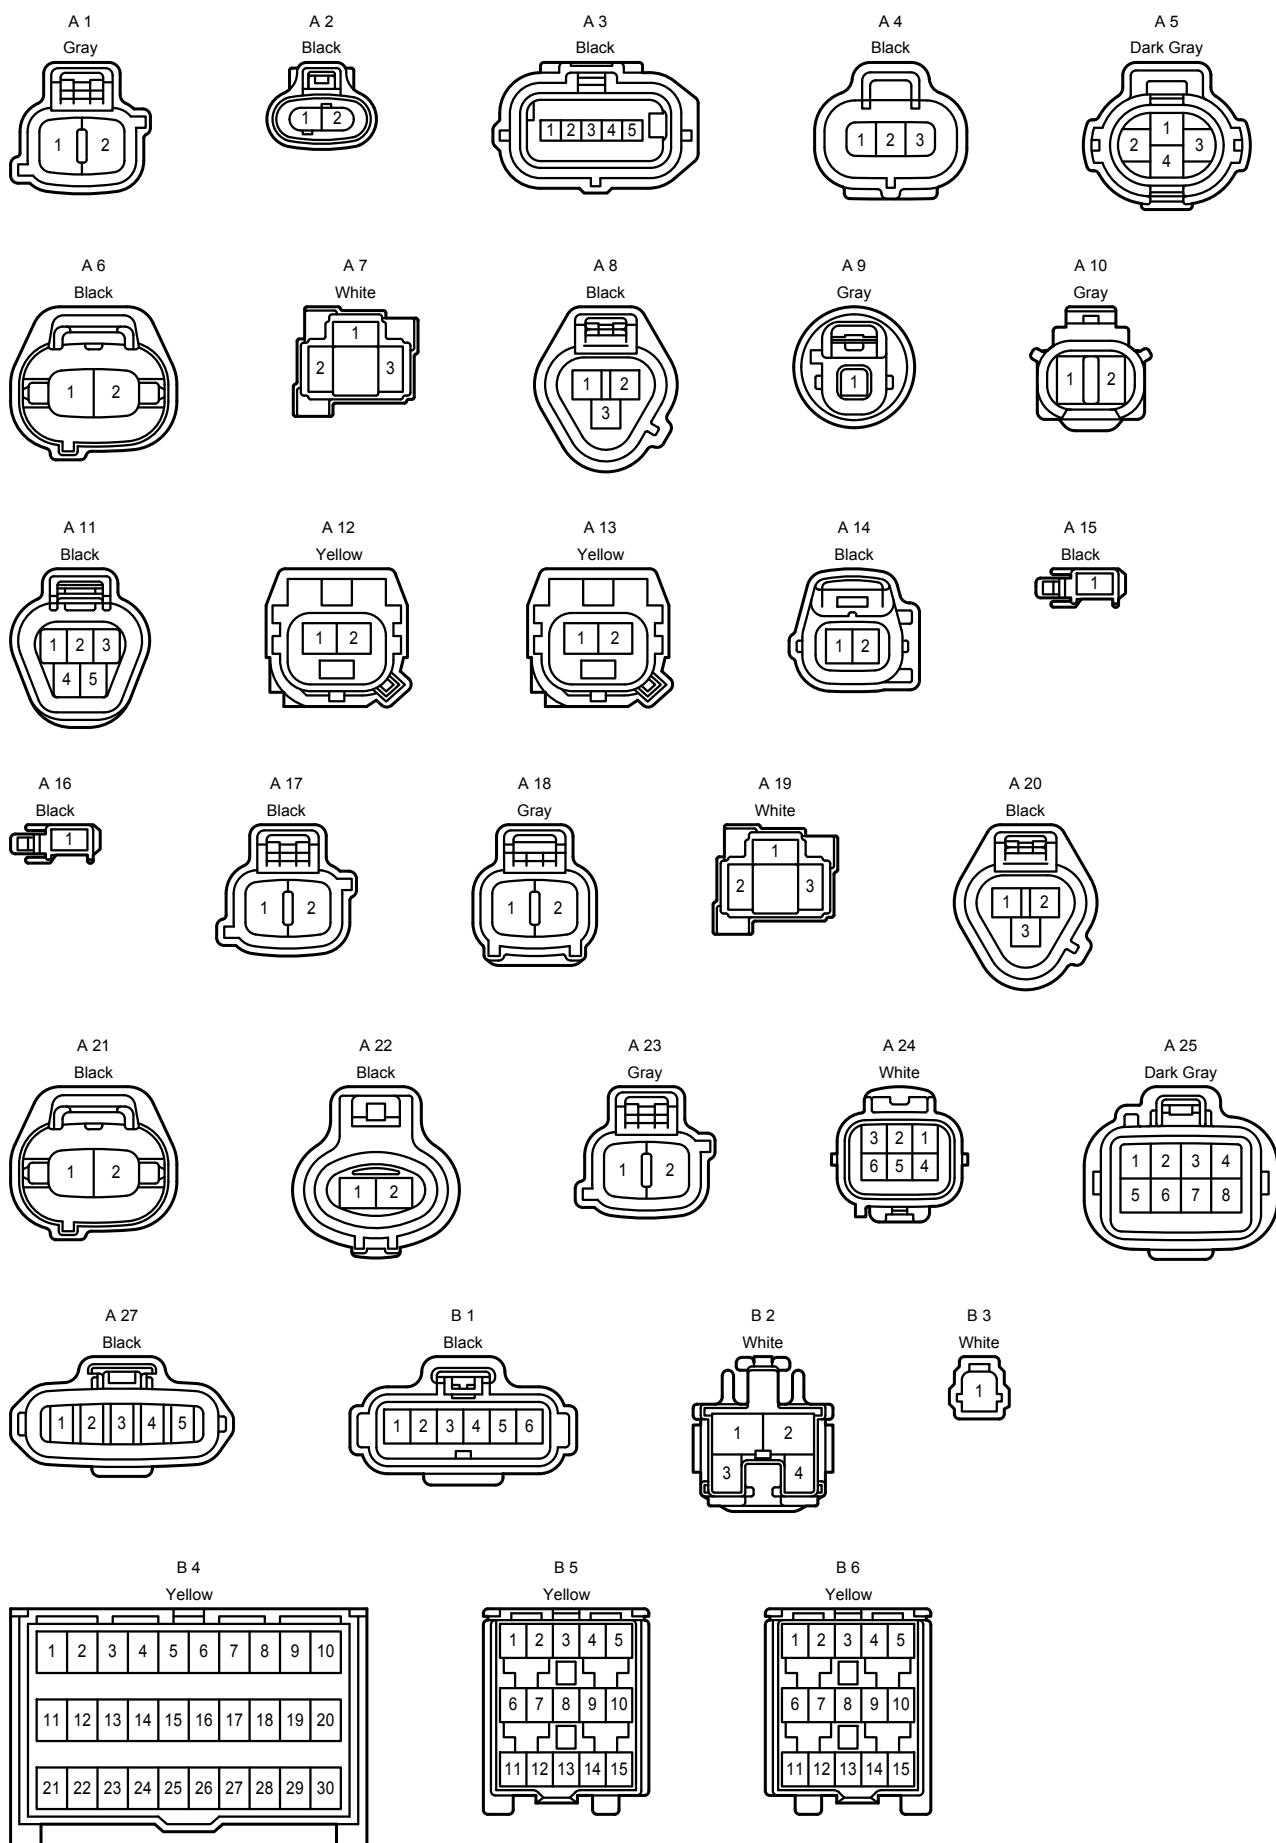

B 34
White

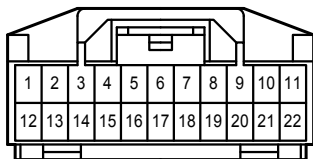

B 43
White

 

B 54
White



 
B 59
White



B 68
Black




C 1
Black



C 2
Brown



 
C 3
Black



C 4
Brown



C 5
Black

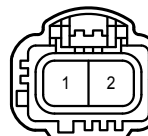

C 6
Black

