
 
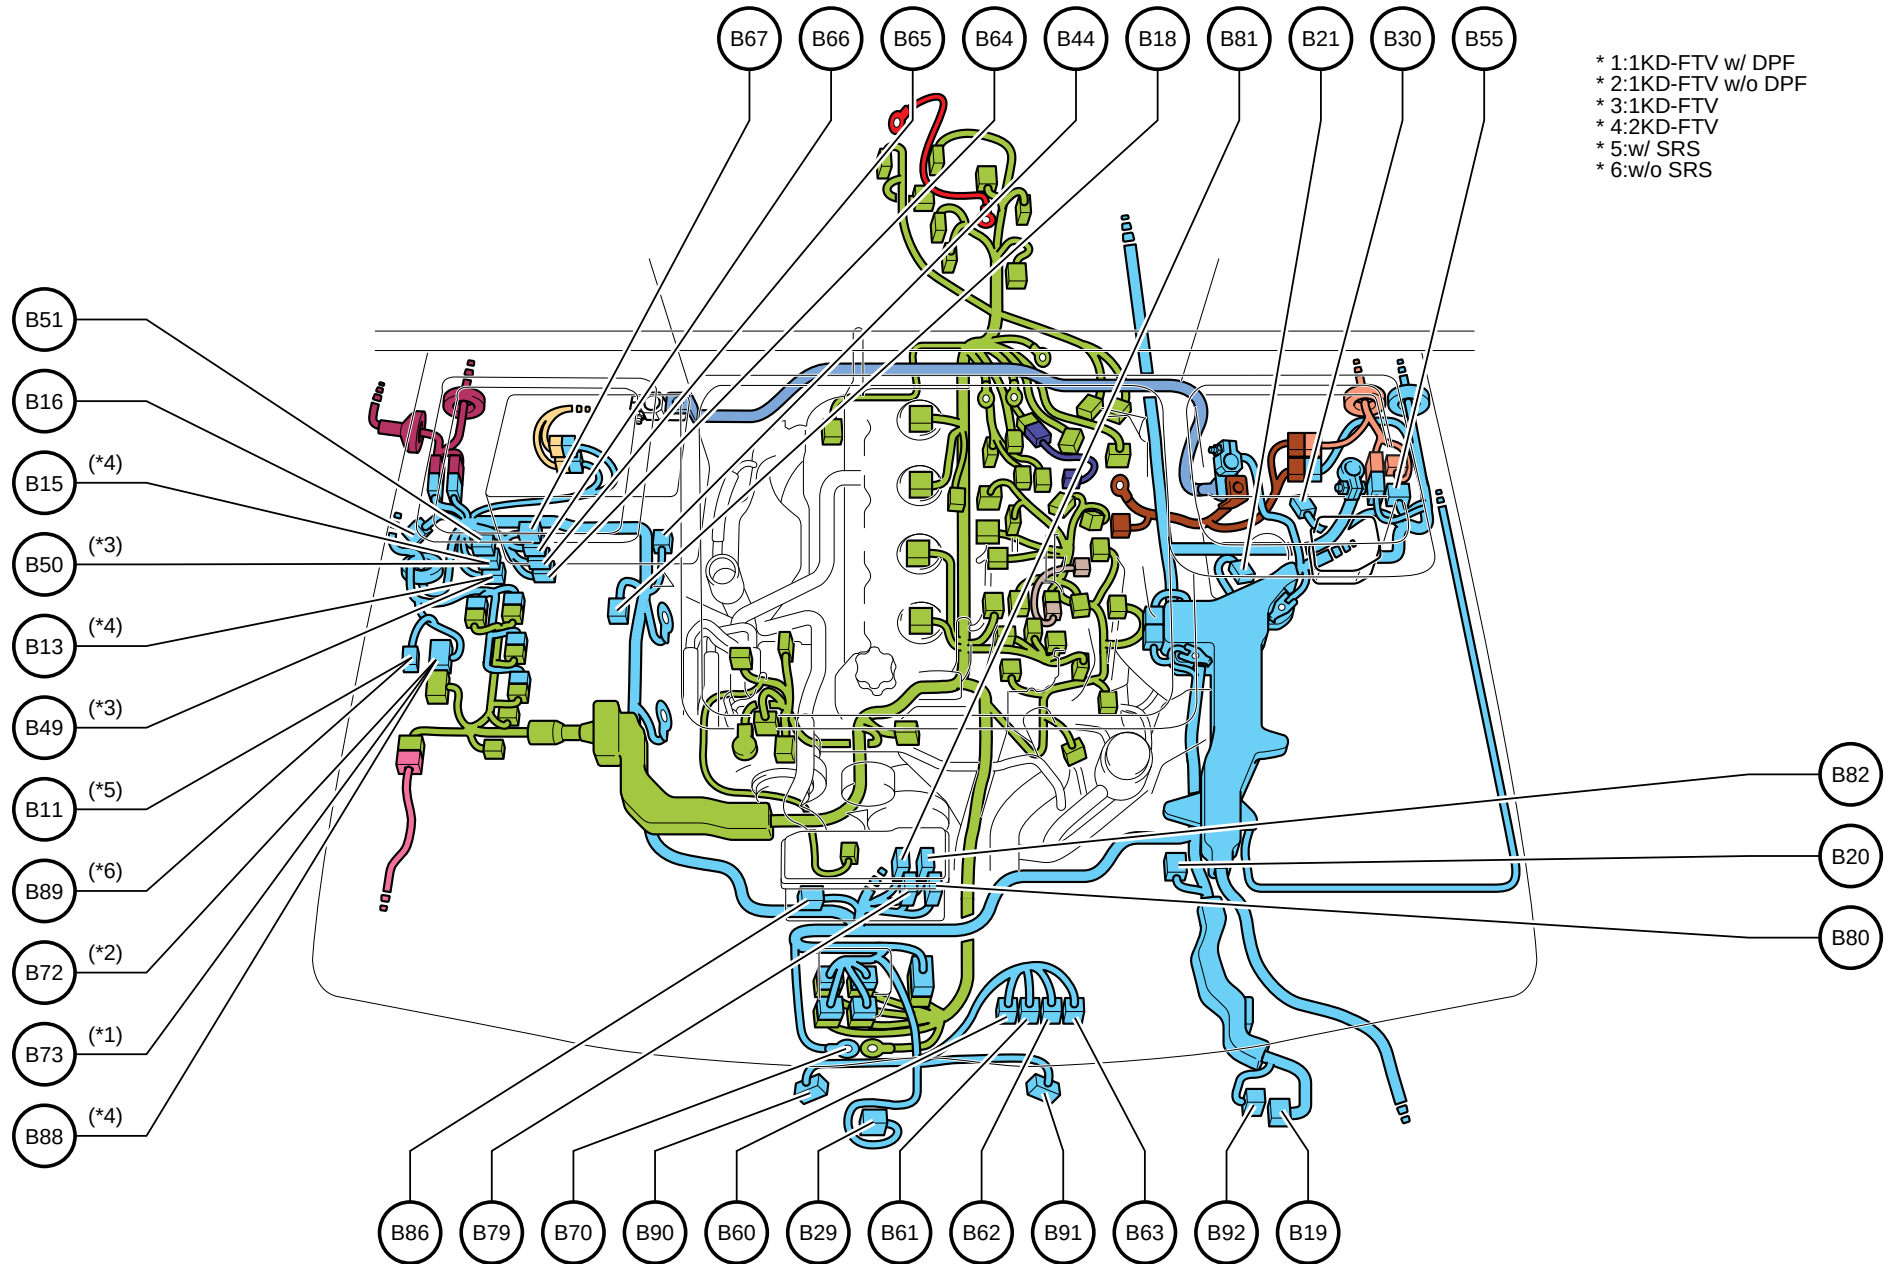

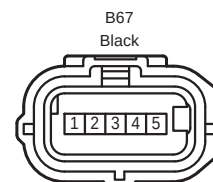
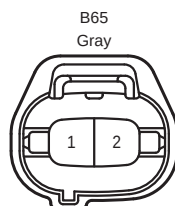
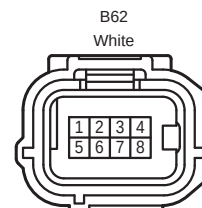
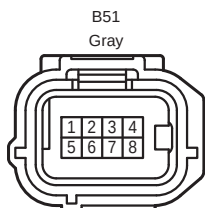
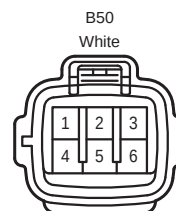
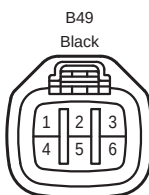
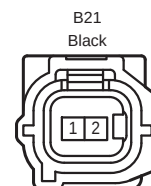
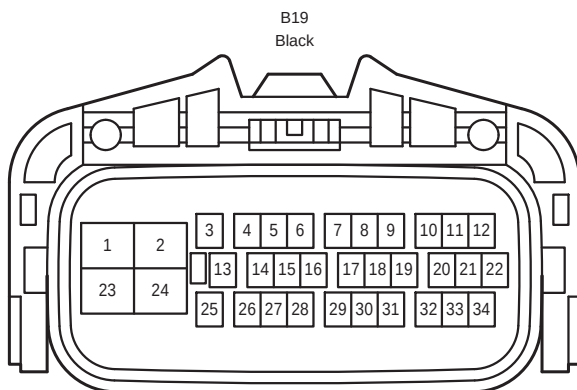
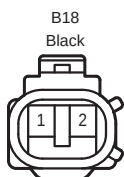
 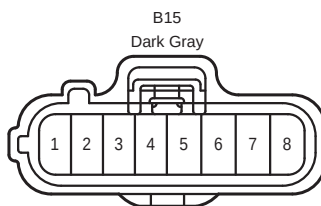


Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

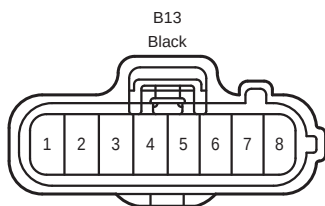


- B 11 Front Seat Inner Belt (Driver's Side)
- B 13 Injector Driver (EDU)
- B 15 Injector Driver (EDU)
- B 16 A/C Magnetic Valve (Rear A/C)
- B 18 Speed Sensor (Front RH)
- B 19 Skid Control ECU with Actuator
- B 20 Speed Sensor (Front LH)
- B 21 Fuel Filter Warning SW
- B 29 Water Temp. Sensor (Radiator)
- B 30 Fuel Sedimentary Level Warning SW
- B 44 Option Connector (TVSS Siren)
- B 49 Injector Driver (EDU)
- B 50 Injector Driver (EDU)
- B 51 Injector Driver (EDU)
- B 55 Slide Door Control Junction (Male LH)
- B 60 Injector Driver (EDU)
- B 61 Injector Driver (EDU)
- B 62 Injector Driver (EDU)
- B 63 Injector Driver (EDU)
- B 64 Glow Plug Controller
- B 65 Glow Plug Controller
- B 66 Glow Plug Controller
- B 67 Glow Plug Controller
- B 70 Connector Holder NO.2
- B 72 Engine ECU
- B 73 Engine ECU
- B 79 Junction Connector
- B 80 Junction Connector
- B 81 Junction Connector
- B 82 Junction Connector
- B 86 Junction Connector
- B 88 Engine ECU
- B 89 Short Pin (Seat Belt SW)
- B 90 Cooling Fan Motor (No.1)
- B 91 Cooling Fan Motor (No.2)
- B 92 Brake Actuator Assembly

Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>




Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>


B72
Black

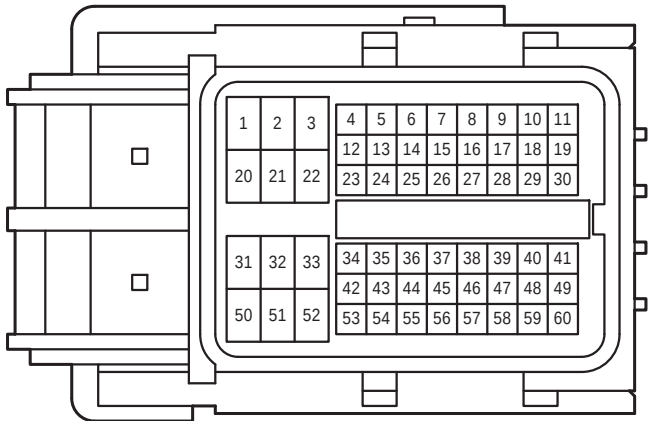


B73
Black

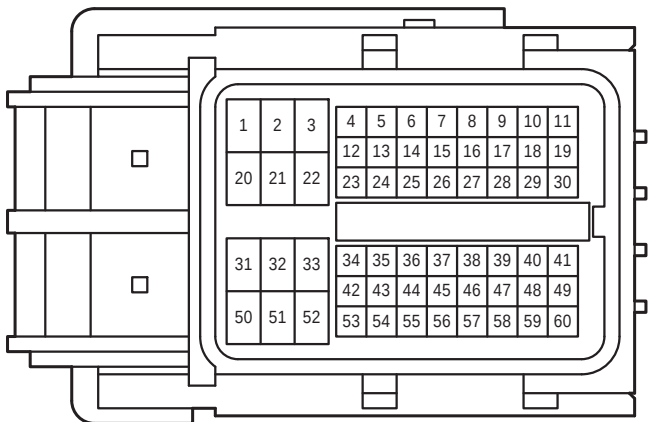


B79
Black

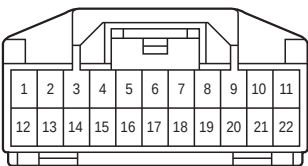


B80
White

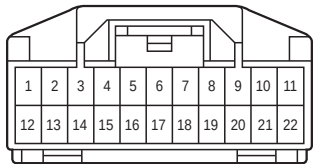


B81
Black

 

B82
Black

 

B86
White

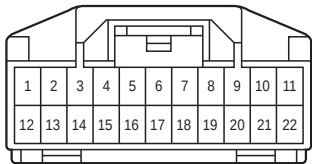

Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

