



Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>








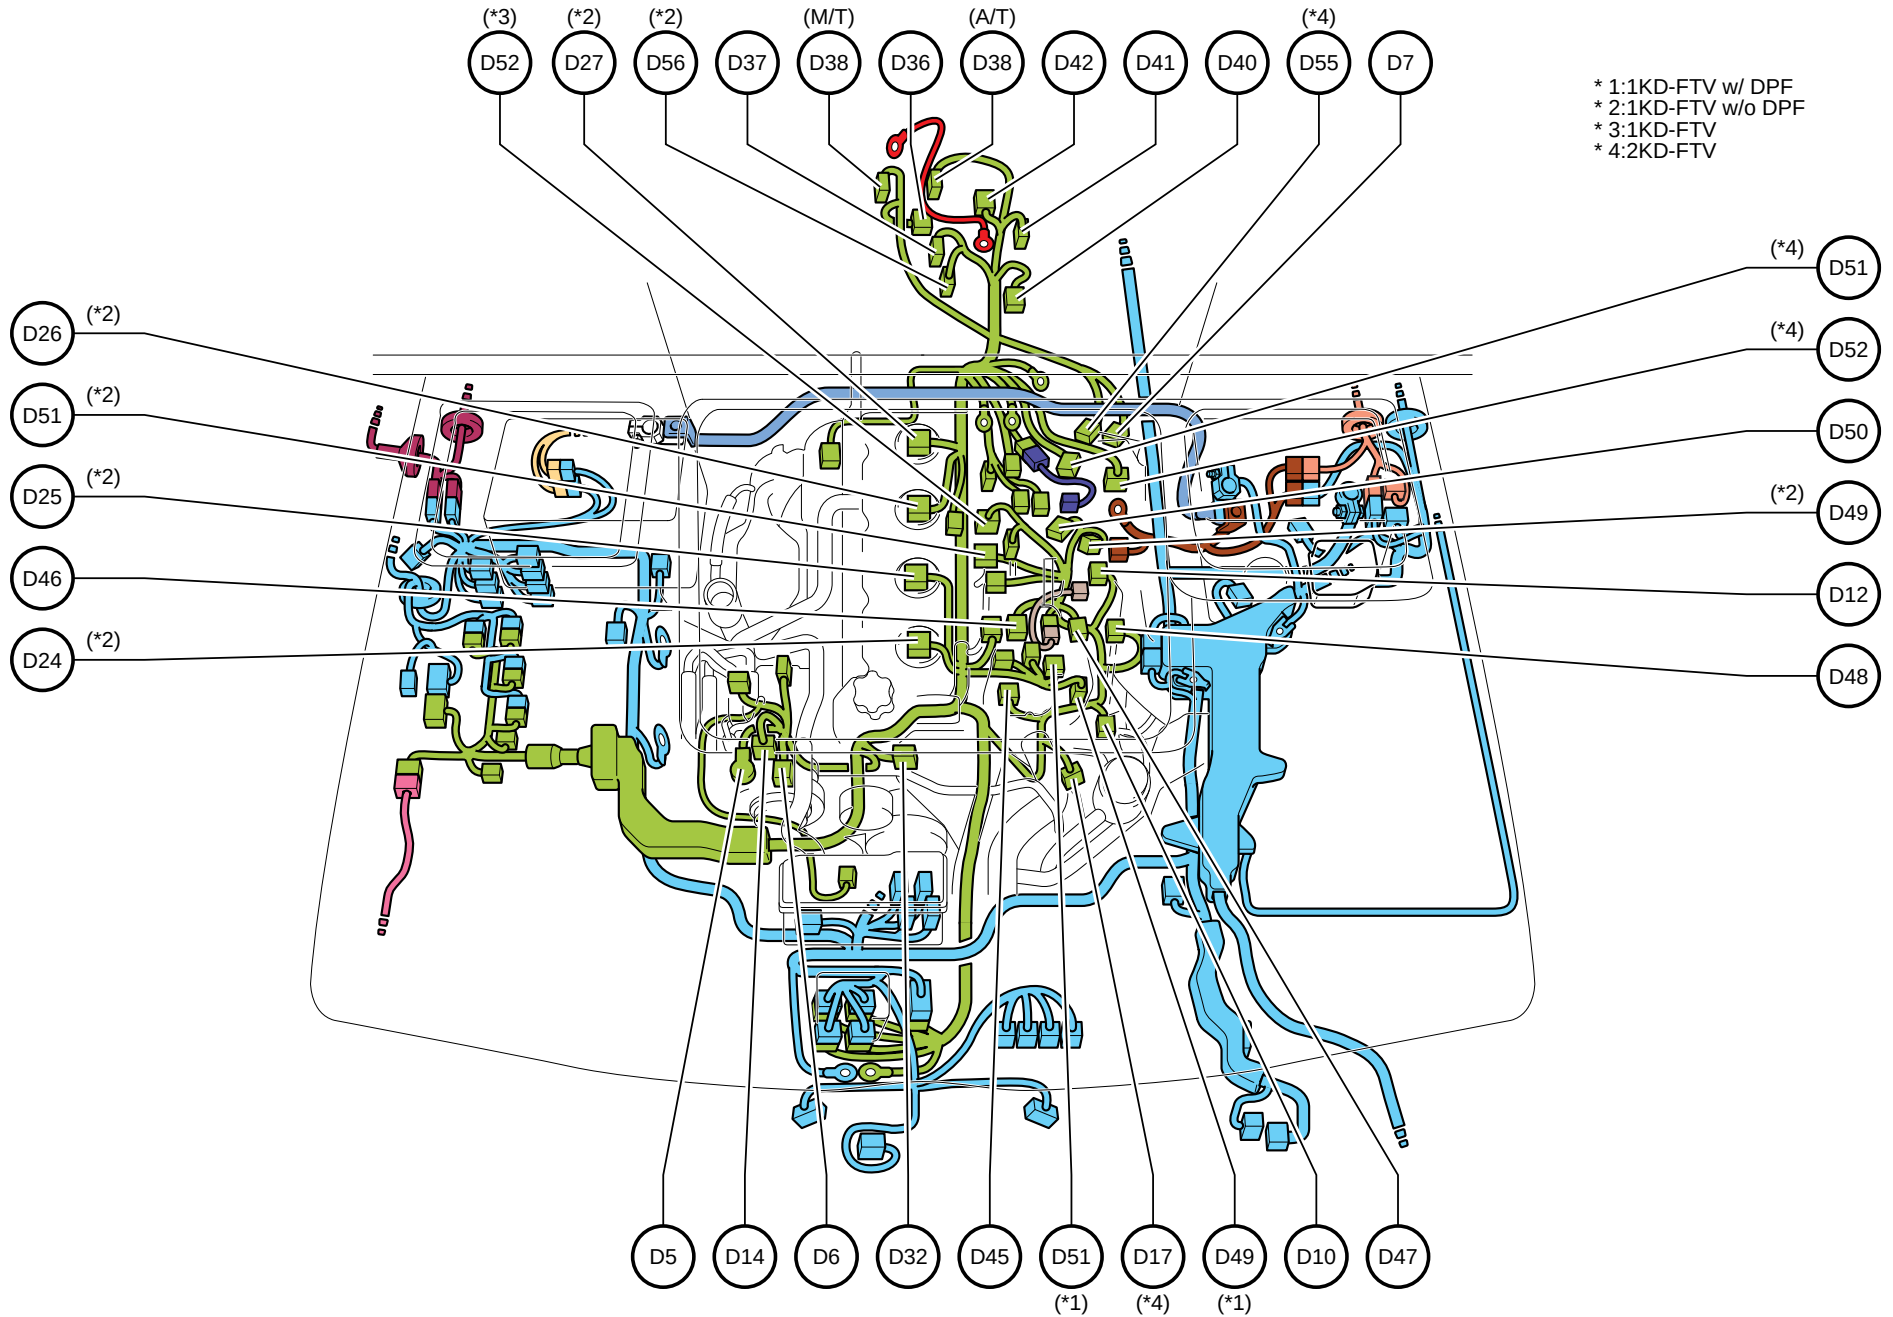


- D 5 Alternator
- D 6 Alternator
- D 7 Engine Oil Pressure SW
- D 10 Camshaft Position Sensor
- D 12 Engine Oil Level Sensor
- D 14 A/C Compressor
- D 17 Crankshaft Position Sensor
- D 24 Fuel Injector (No.1)
- D 25 Fuel Injector (No.2)
- D 26 Fuel Injector (No.3)
- D 27 Fuel Injector (No.4)
- D 32 Water Temp. Sensor (Engine Coolant)
- D 36 Back-Up Lamp SW
- D 37 Park/Neutral Position SW
- D 37 Park/Neutral Position SW
- D 38 Speed Sensor
- D 40 Transmission Revolution Sensor (Input)
- D 41 ECT Solenoid
- D 42 Transmission Revolution Sensor (Output)
- D 45 Fuel Pressure Sensor
- D 46 Fuel Temp. Sensor
- D 46 Fuel Temp. Sensor
- D 47 Suction Control Valve
- D 48 Throttle Body Assembly
- D 49 Inlet Air Temp. Sensor (Intake Manifold)
- D 50 Throttle Body Assembly
- D 51 Turbo Pressure Sensor
- D 52 EGR Valve Position Sensor
- D 55 VRV (EGR)
- D 56 A/T Fluid Temp. Sensor



Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

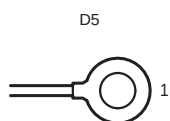



(Before Sep. 2007 Production/From Sep. 2007 Production)

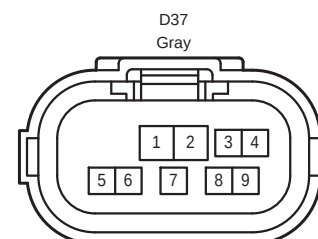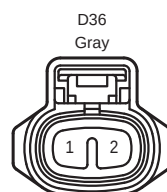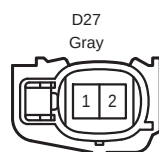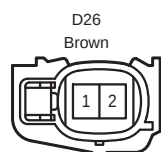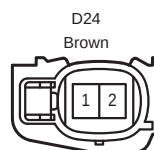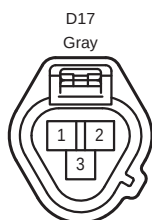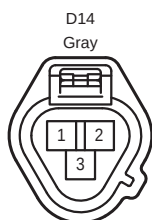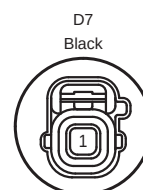

(Before Dec. 2013 Production)

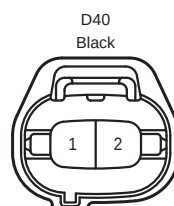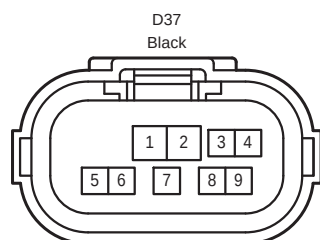

(From Dec. 2013 Production)

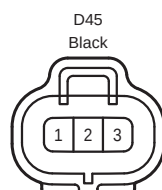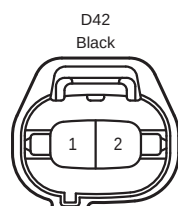

(1KD-FTV Before Dec. 2013 Production, 2KD-FTV Before Dec. 2013 Production, 5L-E)

Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

D46
Gray



D47
Gray



D48
Black



(1KD-FTV From Dec. 2013 Production, 2KD-FTV From Dec. 2013 Production)

D49
Gray



D50
Black



D51
Black



D52
Black



D55
Brown



D56
White

