


Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

- * 1:1KD-FTV w/ DPF
- * 2:1KD-FTV w/o DPF
- * 3:1KD-FTV
- * 4:2KD-FTV
- * 7:2KD-FTV 2.2KW type
- * 8:1KD-FTV 2.2KW type, 2KD-FTV 2.0KW type
- * 9:1KD-FTV 2.7KW type, 2KD-FTV 2.7KW type
- * 10:1KD-FTV, 2KD-FTV 2.0KW or 2.7KW type

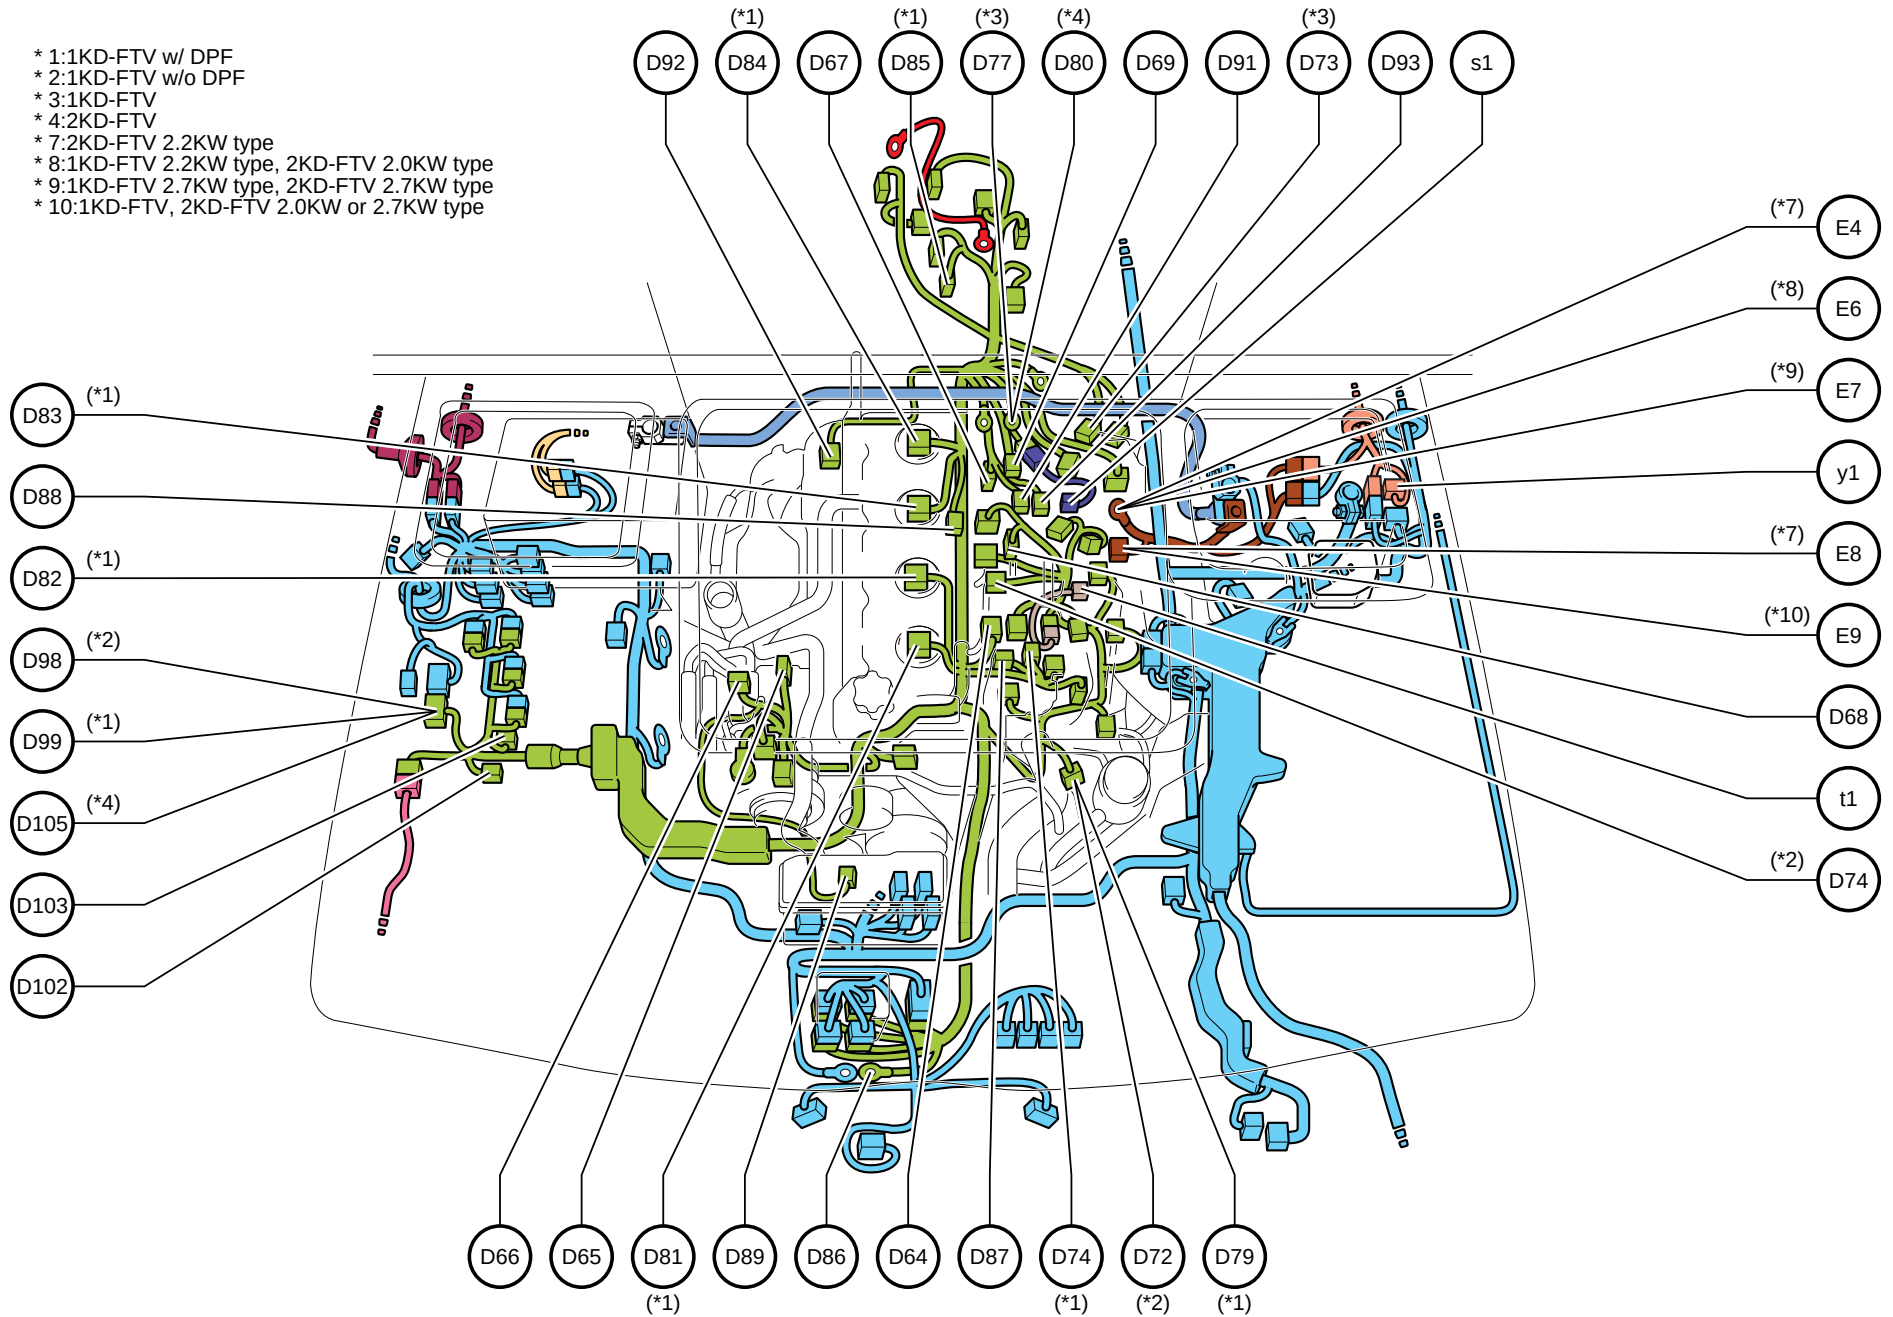

D 64 Pressure Discharge Valve
 D 65 Turbocharger Variable Nozzle Motor Assembly
 D 66 Turbocharger Variable Nozzle Motor Assembly
 D 67 Swirl Control Valve
 D 68 VSV (EGR Cut)
 D 69 Fuel Pressure Sensor
 D 72 Crankshaft Position Sensor
 D 73 VRV (EGR)
 D 74 VSV (EGR)
 D 77 Glow Plug
 D 79 Crankshaft Position Sensor
 D 80 Glow Plug
 D 81 Fuel Injector Assembly (No.1)
 D 82 Fuel Injector Assembly (No.2)
 D 83 Fuel Injector Assembly (No.3)
 D 84 Fuel Injector Assembly (No.4)
 D 85 A/T Fluid Temp. Sensor
 D 86 Connector Holder NO.2
 D 87 Pressure Discharge Valve
 D 88 Glow Plug
 D 89 Oil Pressure Switching Valve Assembly
 D 91 Suction Control Valve Assembly
 D 92 Exhaust Fuel Addition Injector Assembly
 D 93 Oil Pressure Sender Gauge Assembly
 D 98 Engine ECU
 D 99 Engine ECU
 D 102 Junction Connector
 D 103 Junction Connector
 D 105 Engine ECU


E 4 Starter
 E 6 Starter
 E 7 Starter
 E 8 Starter
 E 9 Starter

s 1 Electric EGR Control Valve Assembly









t 1 Diesel Throttle Body Assembly

y 1 Slide Door Control Junction (Male LH)

Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

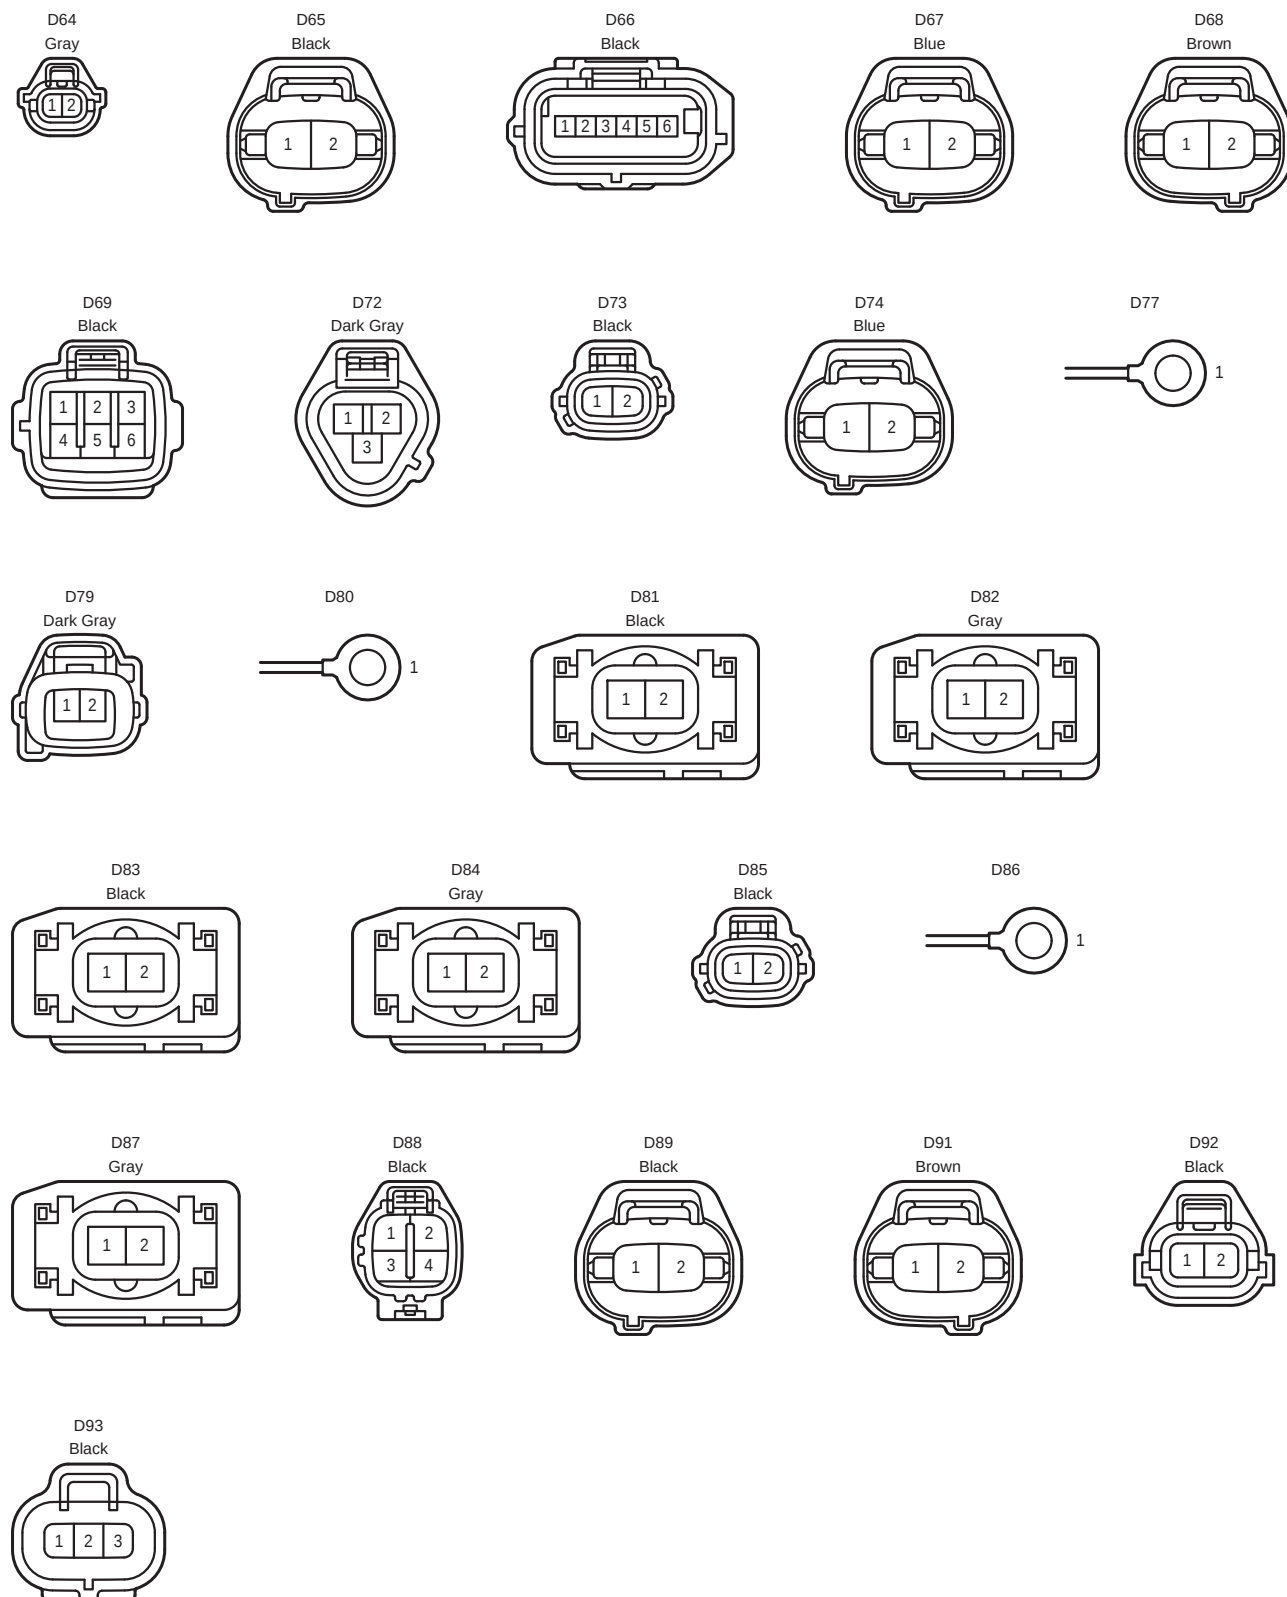

   Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

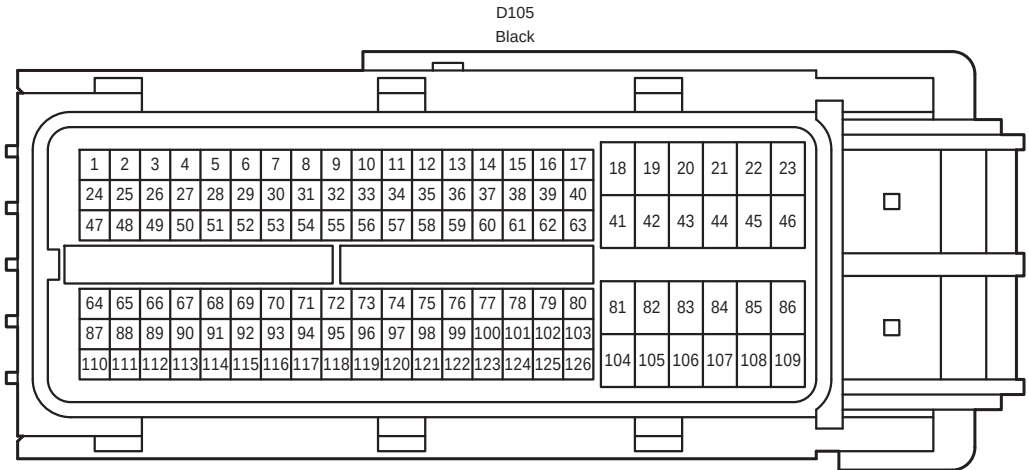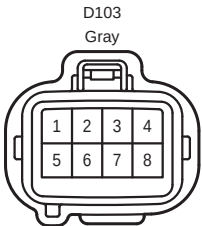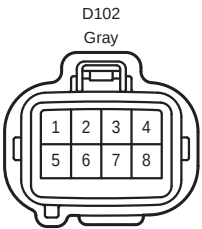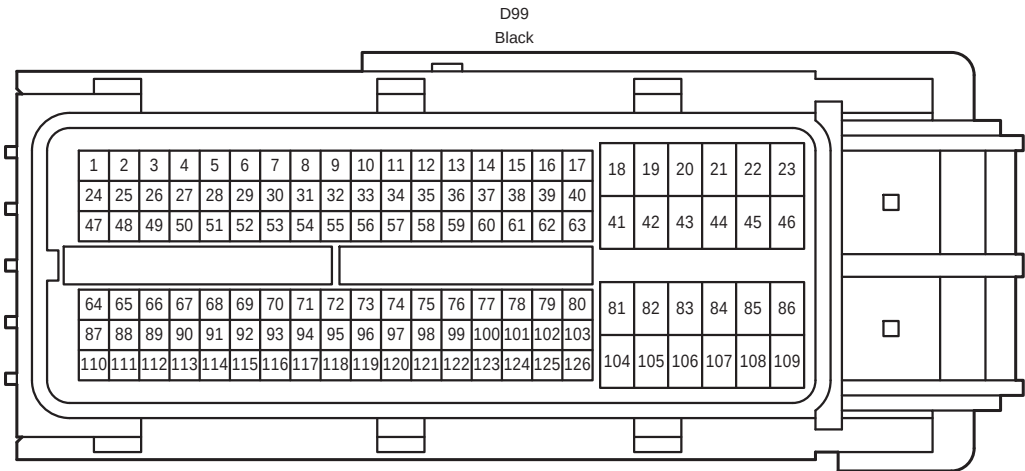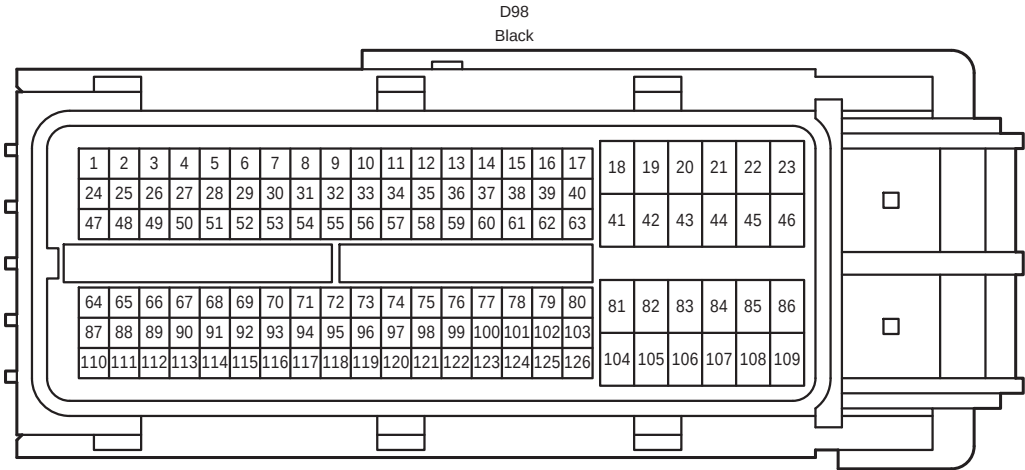

Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

