


Position of Parts in Engine Compartment <RHD 1TR-FE, 2TR-FE>

- * 1:w/ SRS
- * 2:w/o SRS
- * 3:1TR-FE
- * 4:2TR-FE
- * 8:w/ VVTI
- * 9:w/o VVTI

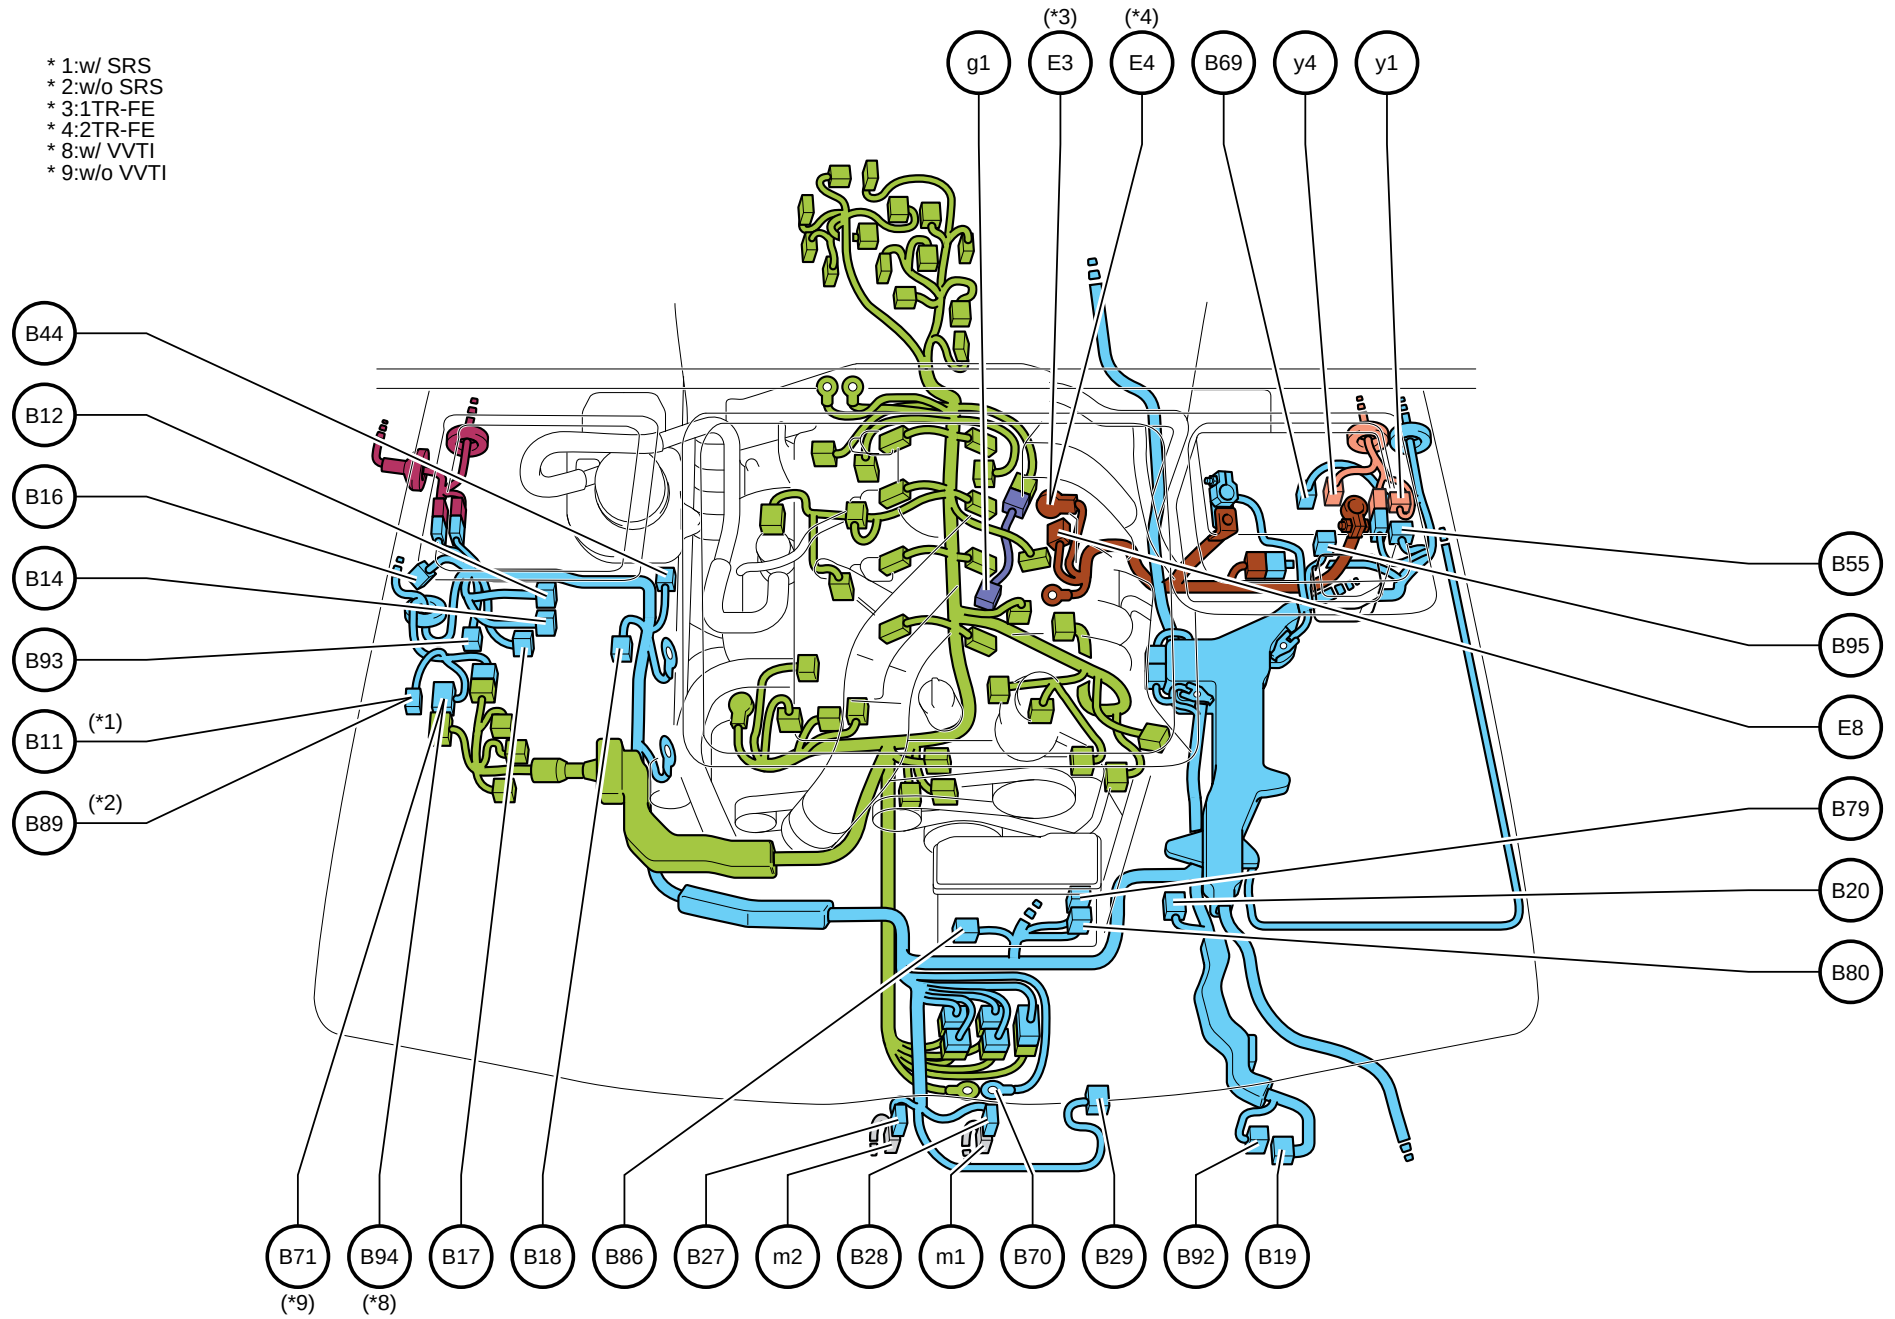

B 11 Front Seat Inner Belt (Driver's Side)
 B 12 Air Injection Control Driver
 B 14 Air Injection Control Driver
 B 16 A/C Magnetic Valve (Rear A/C)
 B 17 Air Pump
 B 18 Speed Sensor (Front RH)
 B 19 Skid Control ECU with Actuator
 B 20 Speed Sensor (Front LH)
 B 27 Cooling Fan ECU No.1
 B 28 Cooling Fan ECU No.2
 B 29 Water Temp. Sensor (Radiator)
 B 44 Option Connector (TVSS Siren)
 B 55 Slide Door Control Junction (Male LH)
 B 69 Battery Thermometer Sensor
 B 70 Connector Holder NO.2
 B 71 Engine ECU
 B 79 Junction Connector
 B 80 Junction Connector
 B 86 Junction Connector
 B 89 Short Pin (Seat Belt SW)
 B 92 Brake Actuator Assembly
 B 93 Air Pump Assenbly
 B 94 Engine ECU
 B 95 Battery Current Sensor



 







 
E 3 Starter
 E 4 Starter
 E 8 Starter

g 1 Knock Control Sensor (Bank 1)

m 1 Cooling Fan ECU No.1 , Cooling Fan Motor No.1
 m 2 Cooling Fan ECU No.2 , Cooling Fan Motor No.1

y 1 Slide Door Control Junction (Male LH)
 y 4 Battery Thermometer Sensor

Position of Parts in Engine Compartment <RHD 1TR-FE, 2TR-FE>

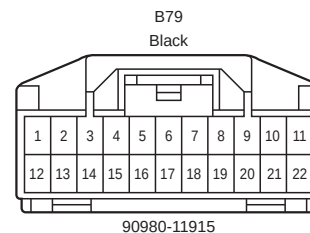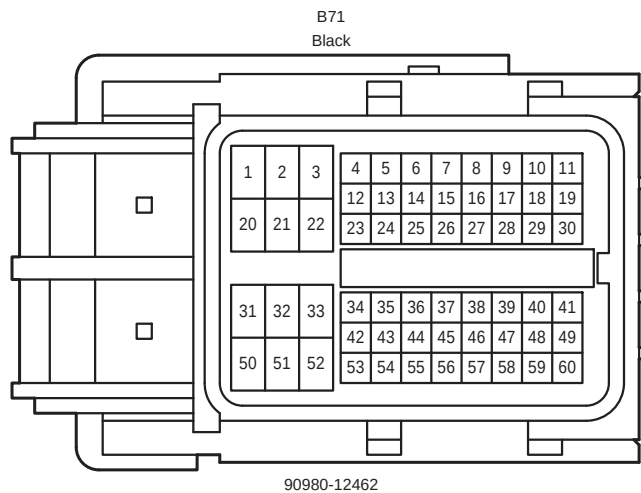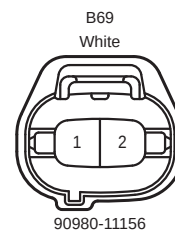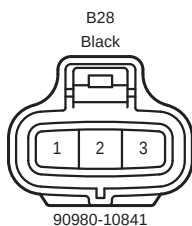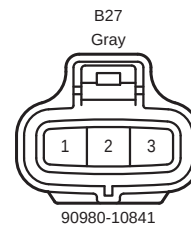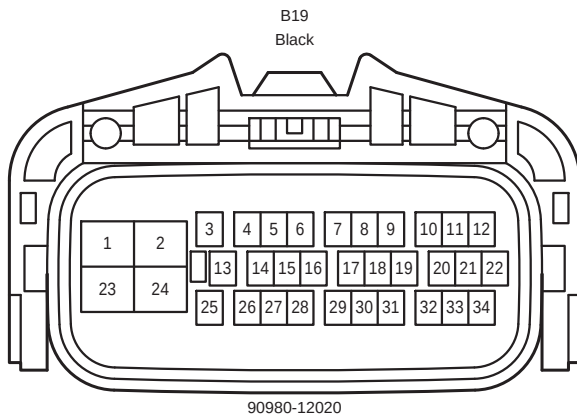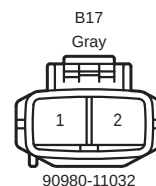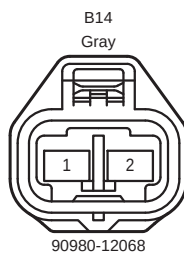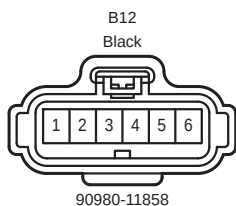

Position of Parts in Engine Compartment <RHD 1TR-FE, 2TR-FE>

