

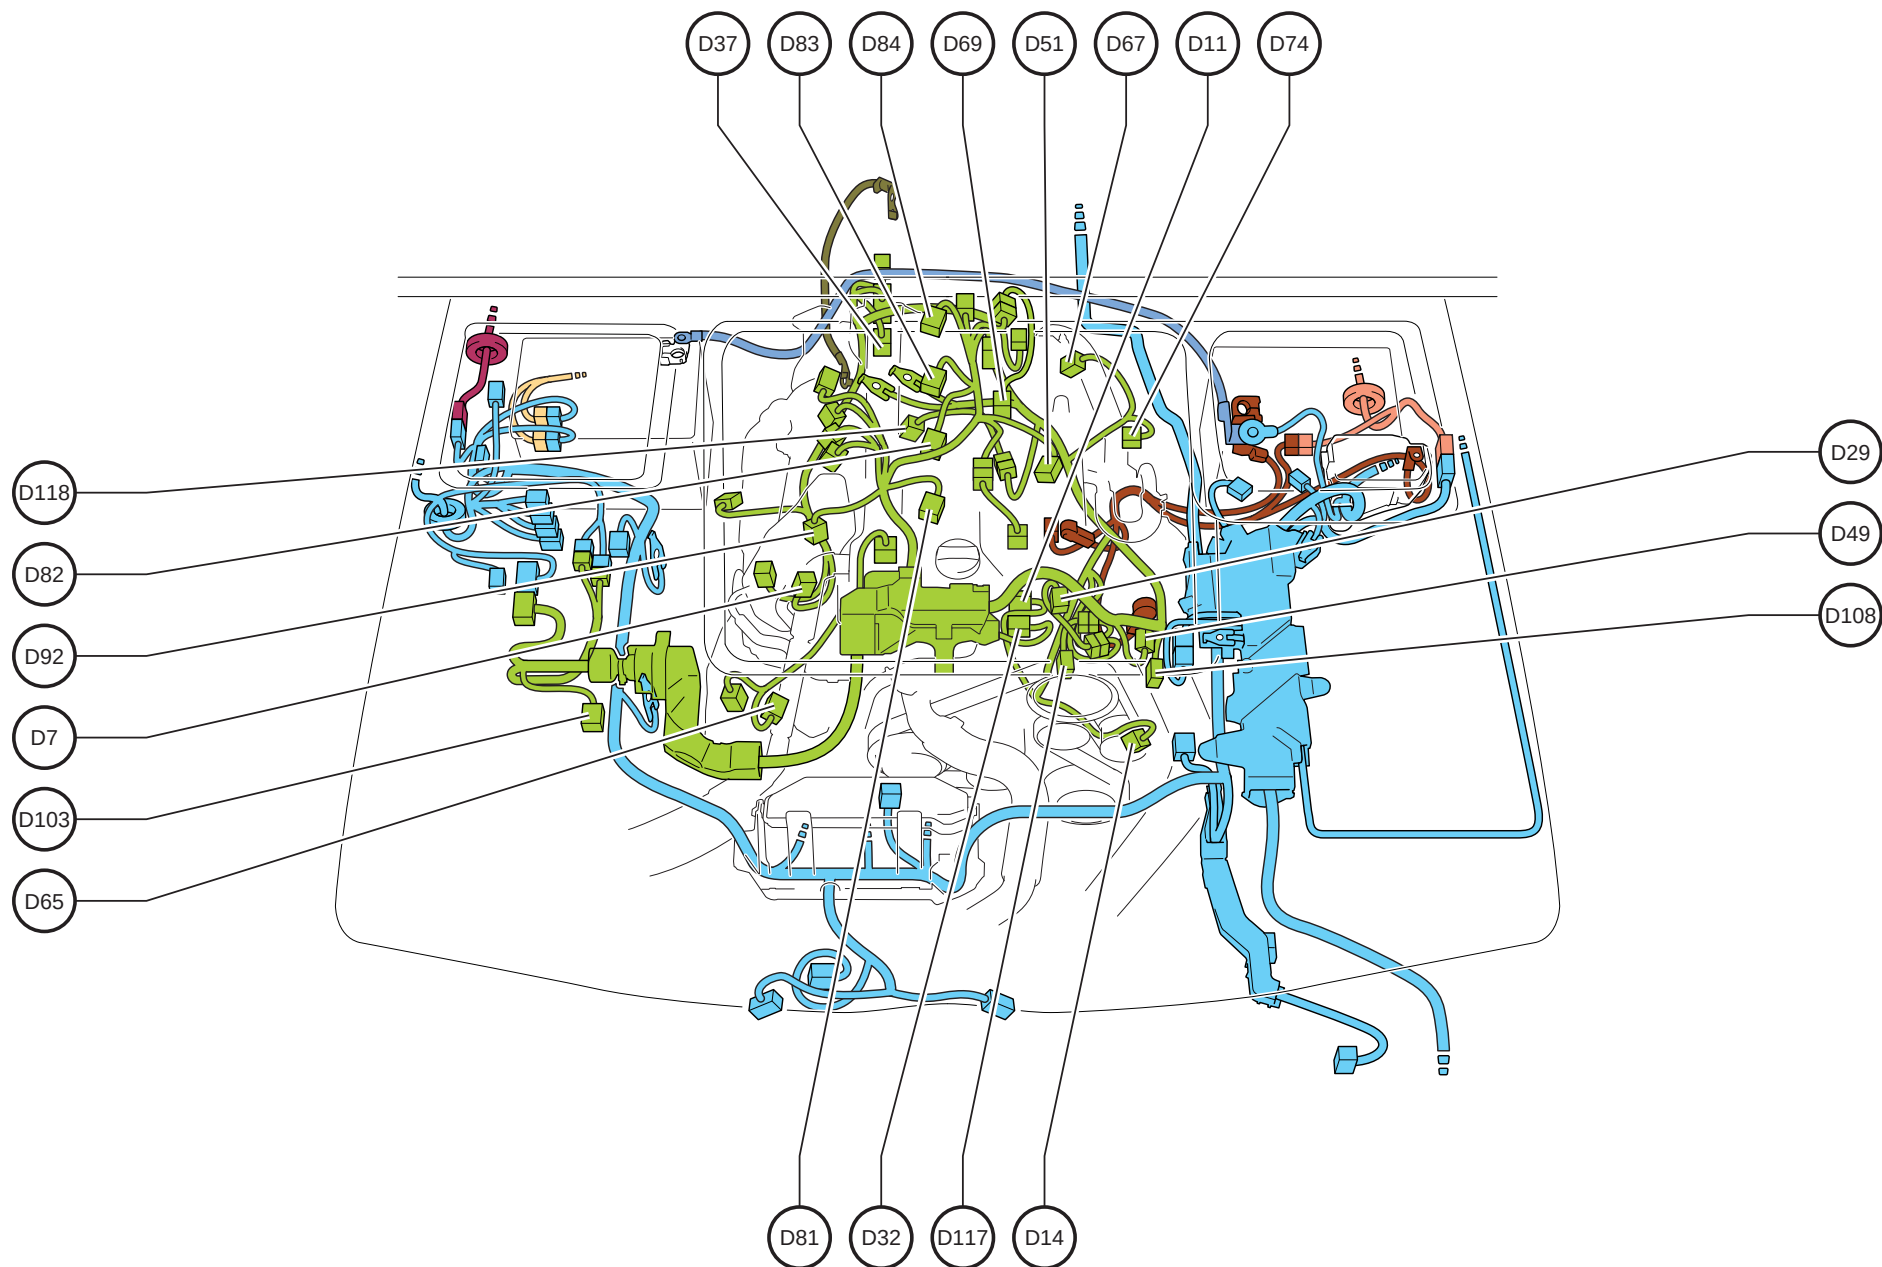
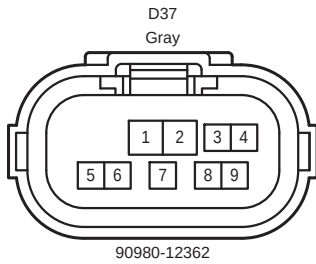


Position of Parts in Engine Compartment <RHD 1GD-FTV>

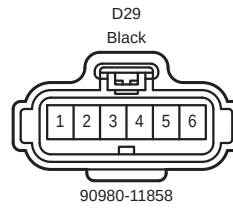


- D 7 Engine Oil Pressure SW
- D 11 Engine Oil Level Sensor
- D 14 A/C Compressor
- D 29 Throttle Body Assembly
- D 32 Water Temp. Sensor (Engine Coolant)
- D 37 Park/Neutral Position SW
- D 49 Inlet Air Temp. Sensor (Intake Manifold)
- D 51 Turbo Pressure Sensor
- D 65 Turbocharger Variable Nozzle Motor Assembly
- D 67 Swirl Control Valve
- D 69 Fuel Pressure Sensor
- D 74 VSV (EGR)
- D 81 Fuel Injector Assembly (No.1)
- D 82 Fuel Injector Assembly (No.2)
- D 83 Fuel Injector Assembly (No.3)
- D 84 Fuel Injector Assembly (No.4)
- D 92 Exhaust Fuel Addition Injector Assembly
- D 103 Junction Connector
- D 108 Alternator
- D 117 PCV Valve (Injection or Supply Pump Assembly)
- D 118 Crankshaft Position Sensor

Position of Parts in Engine Compartment <RHD 1GD-FTV>

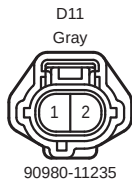

(Before Dec. 2013 Production)

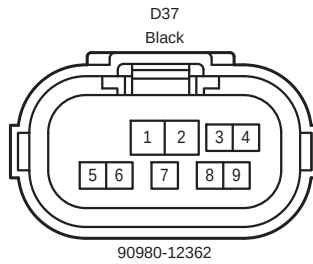

(From Dec. 2013 Production)

