


Position of Parts in Engine Compartment <RHD 1GD-FTV>

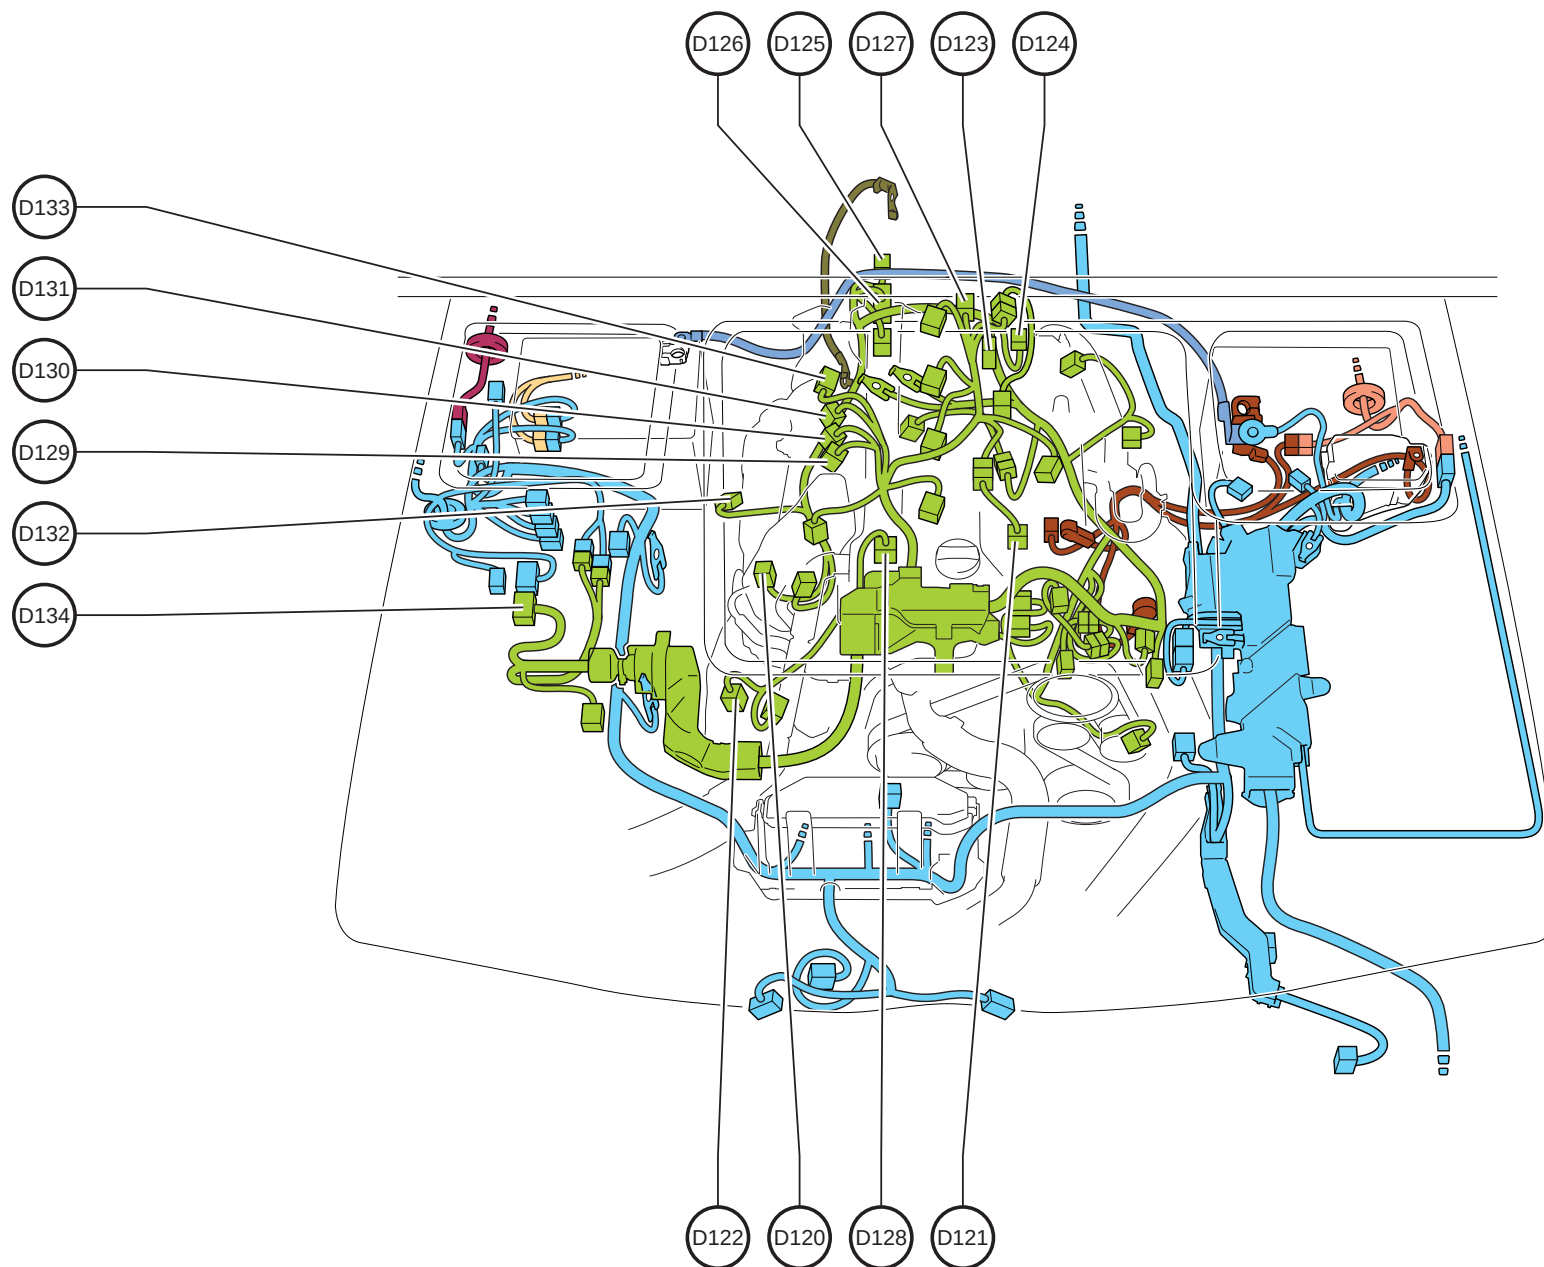

- D 120 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 121 Fuel Pressure Sensor (Common Rail Assembly)
- D 122 Turbocharger Sub-Assembly
- D 123 Electric EGR Control Valve Assembly
- D 124 Transmission Revolution Sensor (NT)
- D 125 Transmission Revolution Sensor (SP2)
- D 126 ECT Solenoid (Transmission Wire)
- D 127 Glow Plug Assembly
- D 128 Cam Position Sensor (Crank Position Sensor)
- D 129 Exhaust Gas Temperature Sensor
- D 130 No. 2 Exhaust Gas Temperature Sensor
- D 131 No. 3 Exhaust Gas Temperature Sensor
- D 132 Urea Injector Set
- D 133 Differential Pressure Sensor
- D 134 Engine ECU

Position of Parts in Engine Compartment <RHD 1GD-FTV>

