










Position of Parts in Engine Compartment <RHD 1GD-FTV>

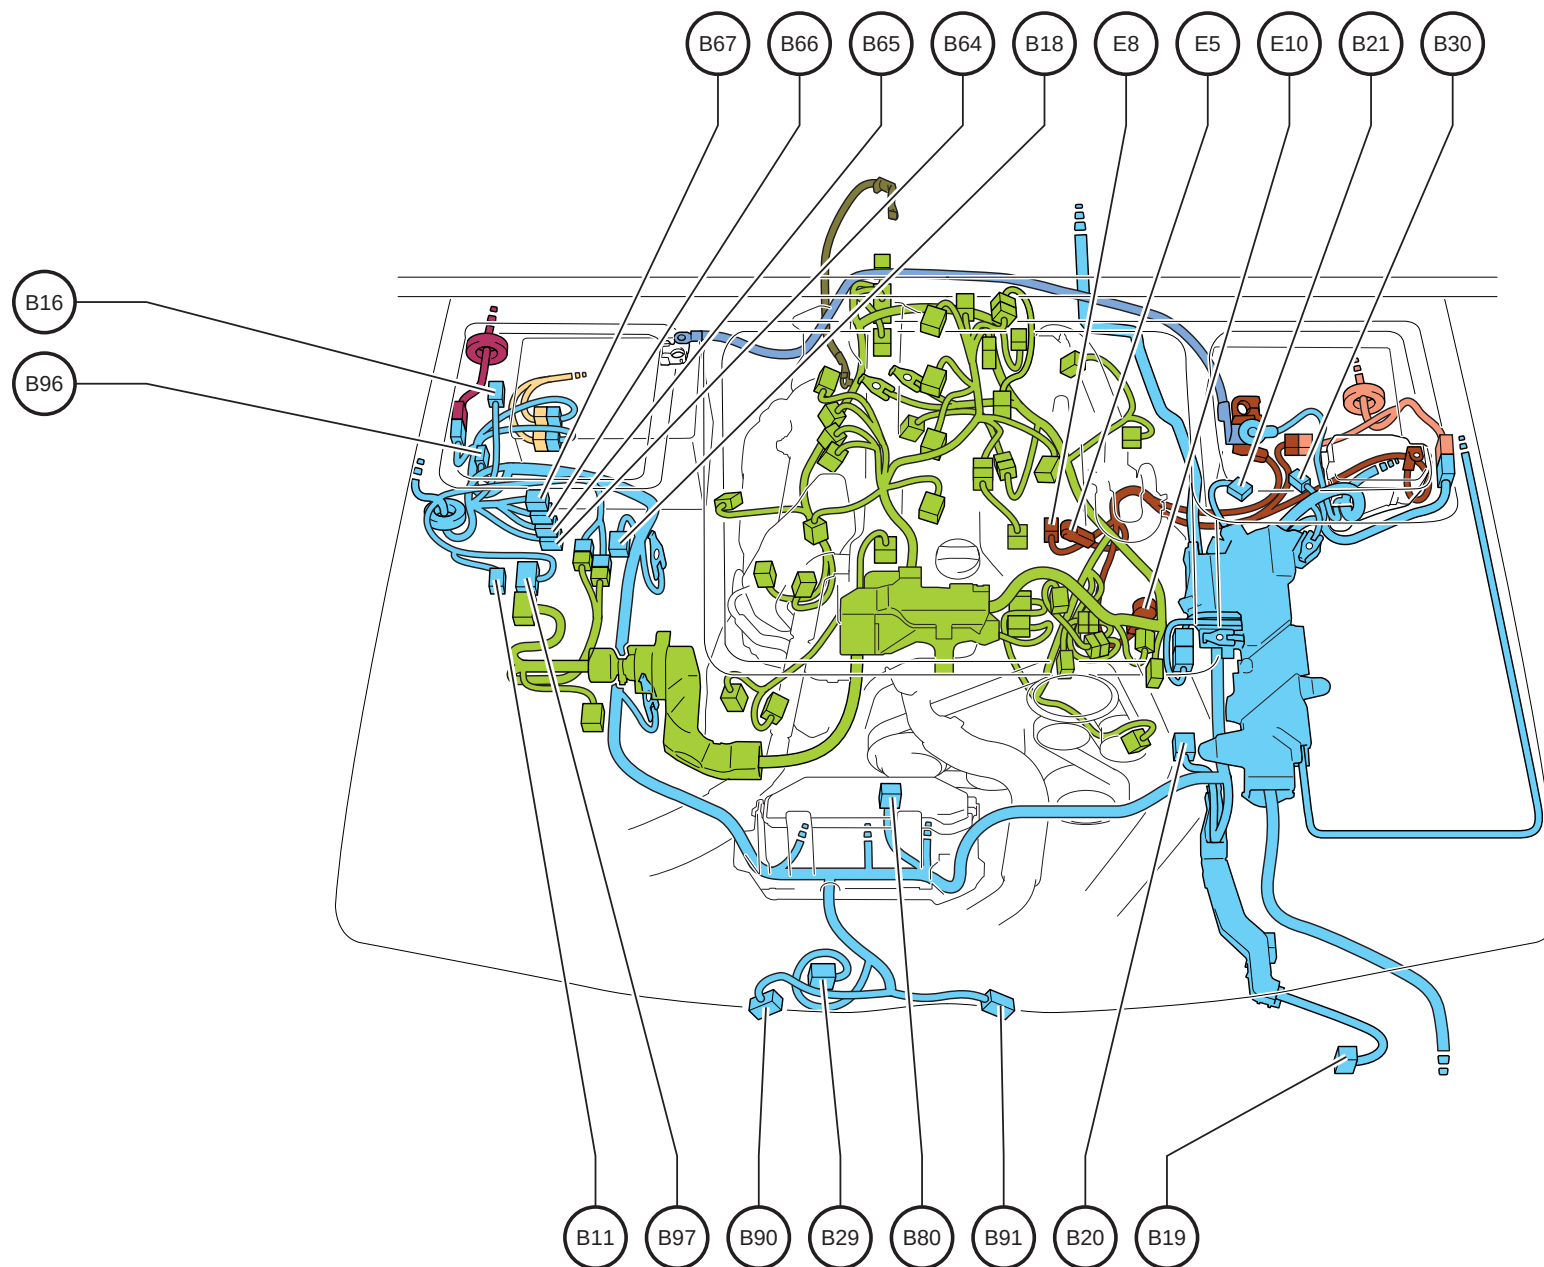

B 11 Front Seat Inner Belt (Driver's Side)
B 16 A/C Magnetic Valve (Rear A/C)
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 21 Fuel Filter Warning SW
B 29 Water Temp. Sensor (Radiator)
B 30 Fuel Sedimentary Level Warning SW
B 64 Glow Plug Controller
B 65 Glow Plug Controller
B 66 Glow Plug Controller
B 67 Glow Plug Controller
B 80 Junction Connector
B 90 Cooling Fan Motor (No.1)
B 91 Cooling Fan Motor (No.2)
B 96 Junction Connector
B 97 Engine ECU

E 5 Starter
E 8 Starter
E 10 Alternator

 Position of Parts in Engine Compartment <RHD 1GD-FTV>

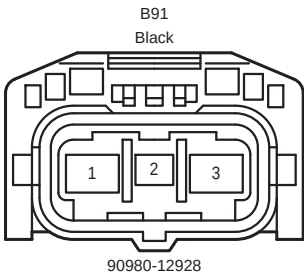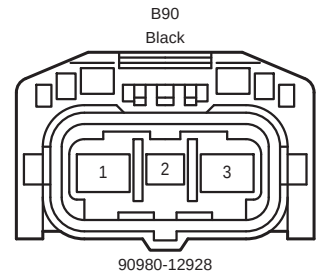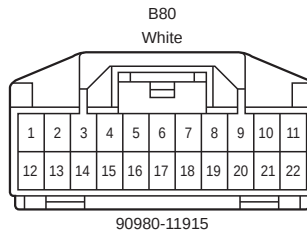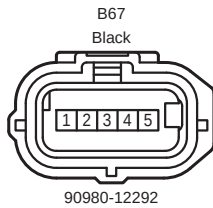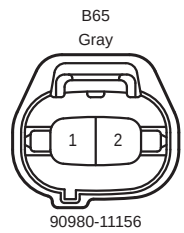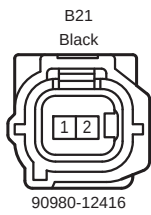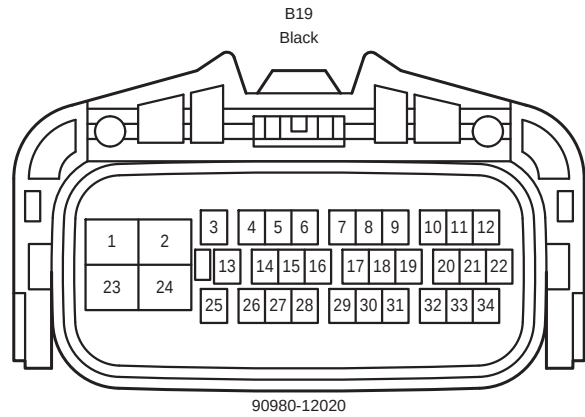

Position of Parts in Engine Compartment <RHD 1GD-FTV>

