


Position of Parts in Engine Compartment <RHD 5L-E>

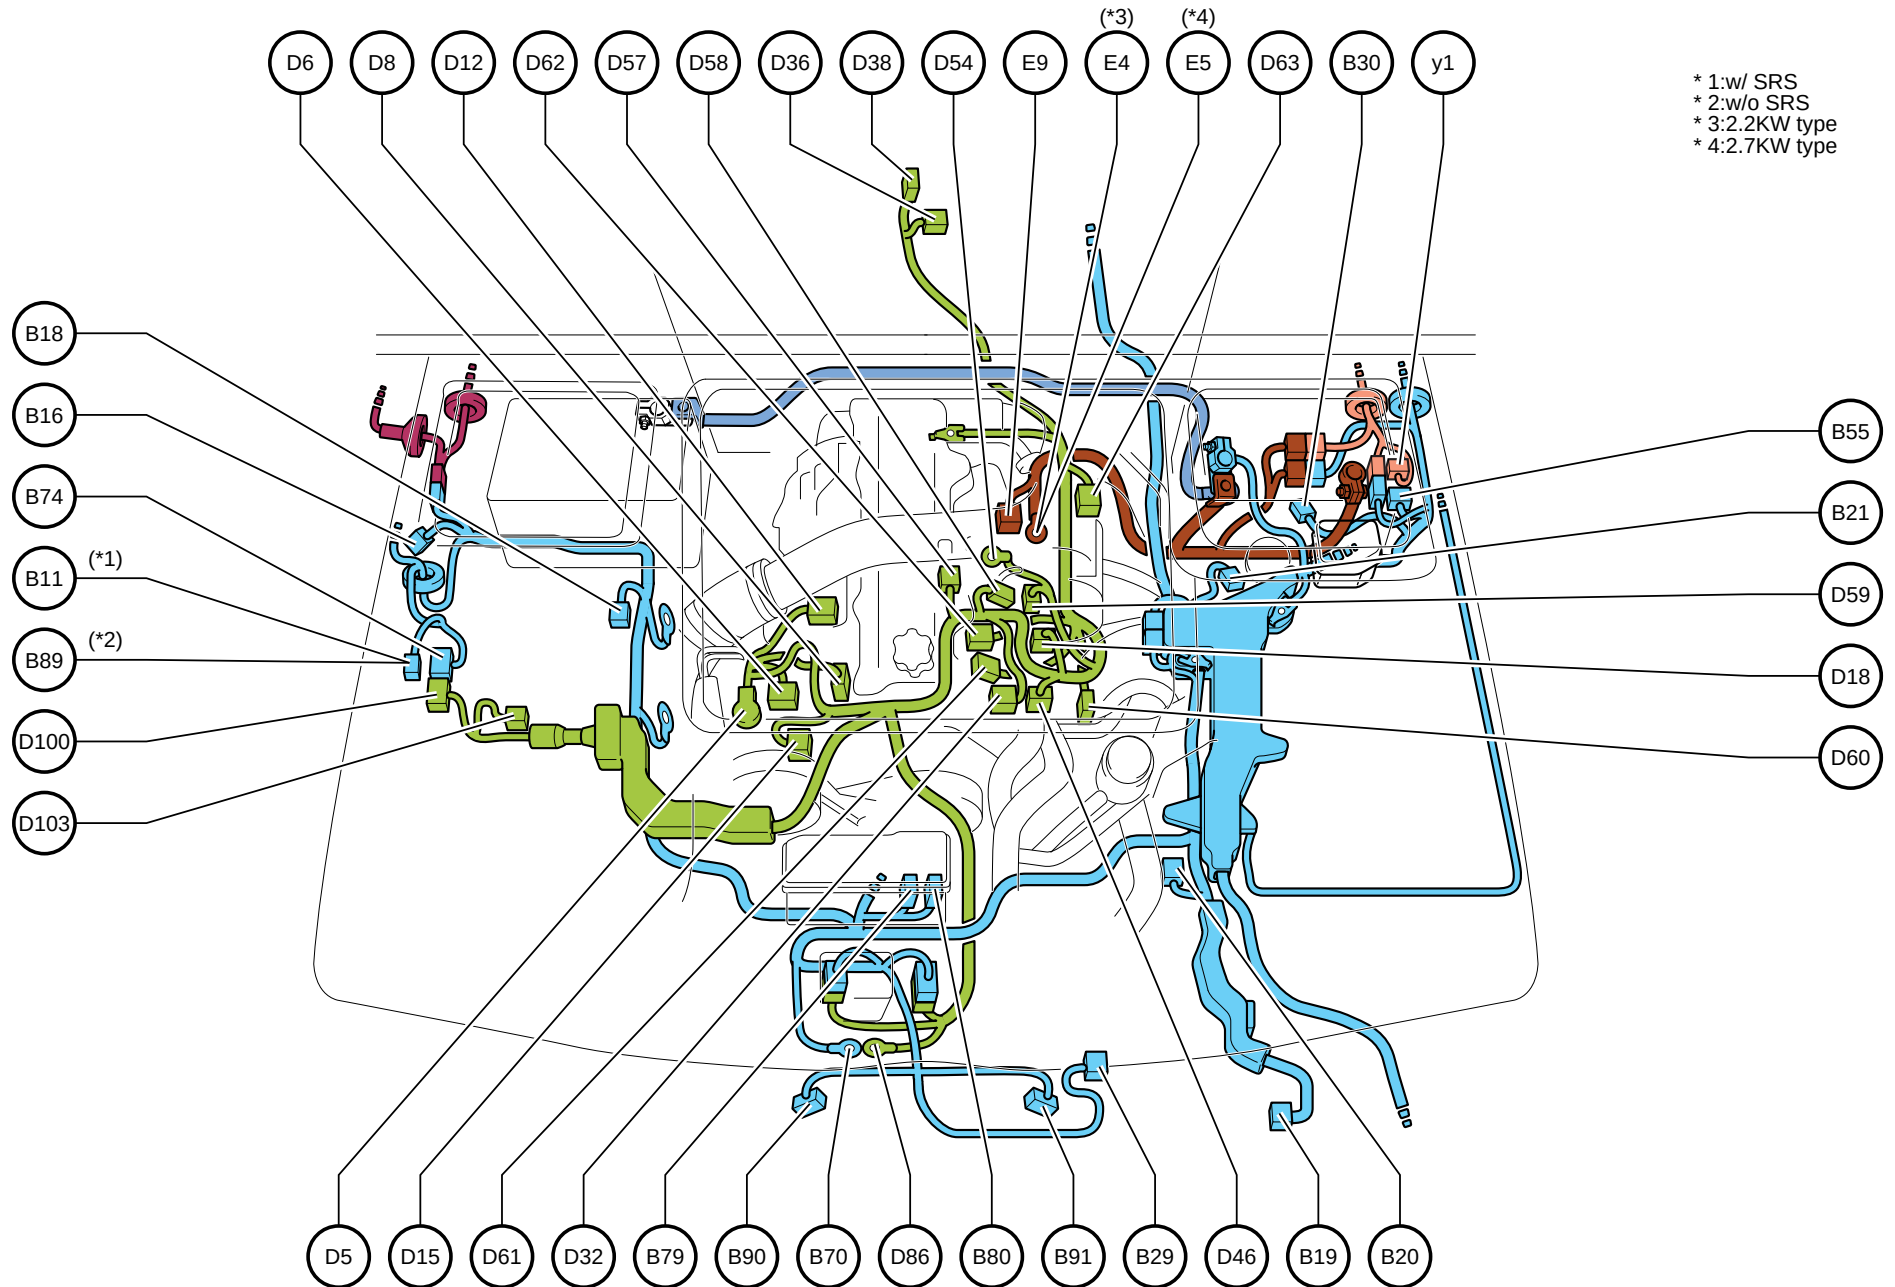








 



B 11 Front Seat Inner Belt (Driver's Side)
 B 16 A/C Magnetic Valve (Rear A/C)
 B 18 Speed Sensor (Front RH)
 B 19 Skid Control ECU with Actuator
 B 20 Speed Sensor (Front LH)
 B 21 Fuel Filter Warning SW
 B 29 Water Temp. Sensor (Radiator)
 B 30 Fuel Sedimentary Level Warning SW
 B 55 Slide Door Control Junction (Male LH)
 B 70 Connector Holder NO.2
 B 74 Engine ECU
 B 79 Junction Connector
 B 80 Junction Connector
 B 89 Short Pin (Seat Belt SW)
 B 90 Cooling Fan Motor (No.1)
 B 91 Cooling Fan Motor (No.2)

D 5 Alternator
 D 6 Alternator
 D 8 Engine Oil Pressure SW
 D 12 Engine Oil Level Sensor
 D 15 A/C Compressor
 D 18 Engine Speed Sensor
 D 32 Water Temp. Sensor (Engine Coolant)
 D 36 Back-Up Lamp SW
 D 38 Speed Sensor
 D 46 Fuel Temp. Sensor
 D 54 Glow Plug
 D 57 Manifold Absolute Pressure Sensor
 D 58 Throttle Body Assembly
 D 59 Spill Control Valve
 D 60 Injection Pump Assembly
 D 61 Timer Control Valve
 D 62 Crankshaft Position Sensor
 D 63 Throttle Position SW
 D 86 Connector Holder NO.2
 D 100 Engine ECU
 D 103 Junction Connector




E 4 Starter
 E 5 Starter
 E 9 Starter

y 1 Slide Door Control Junction (Male LH)

Position of Parts in Engine Compartment <RHD 5L-E>

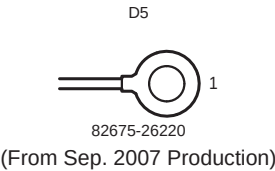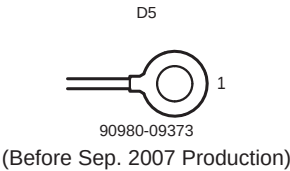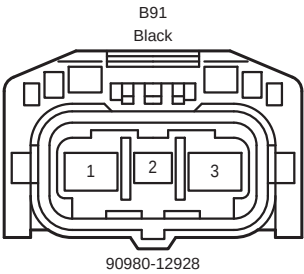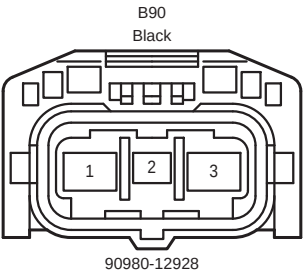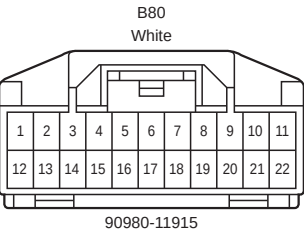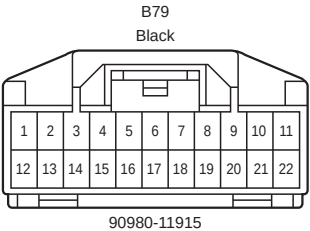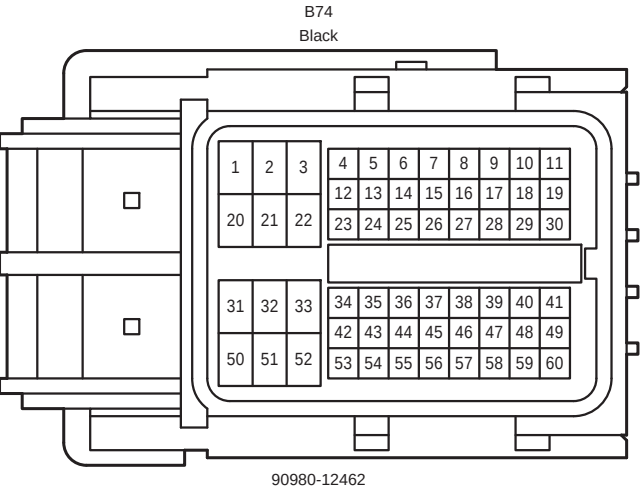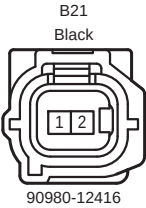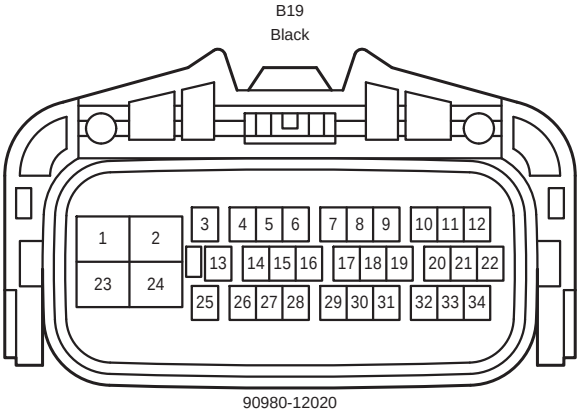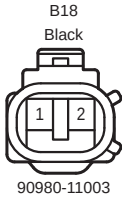







Position of Parts in Engine Compartment <RHD 5L-E>

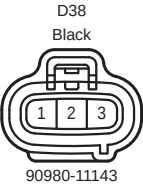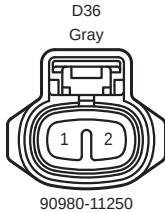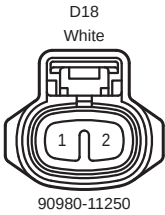

(1KD-FTV Before Dec. 2013 Production, 2KD-FTV Before Dec. 2013 Production, 5L-E)



 (1KD-FTV From Dec. 2013 Production, 2KD-FTV From Dec. 2013 Production)

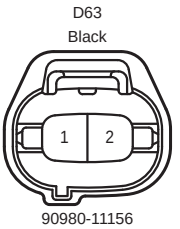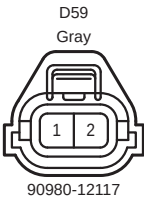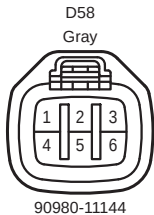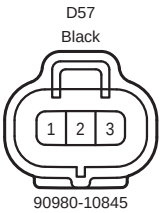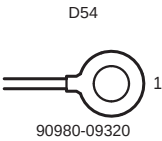

D100
Black

