


Position of Parts in Body <RHD>

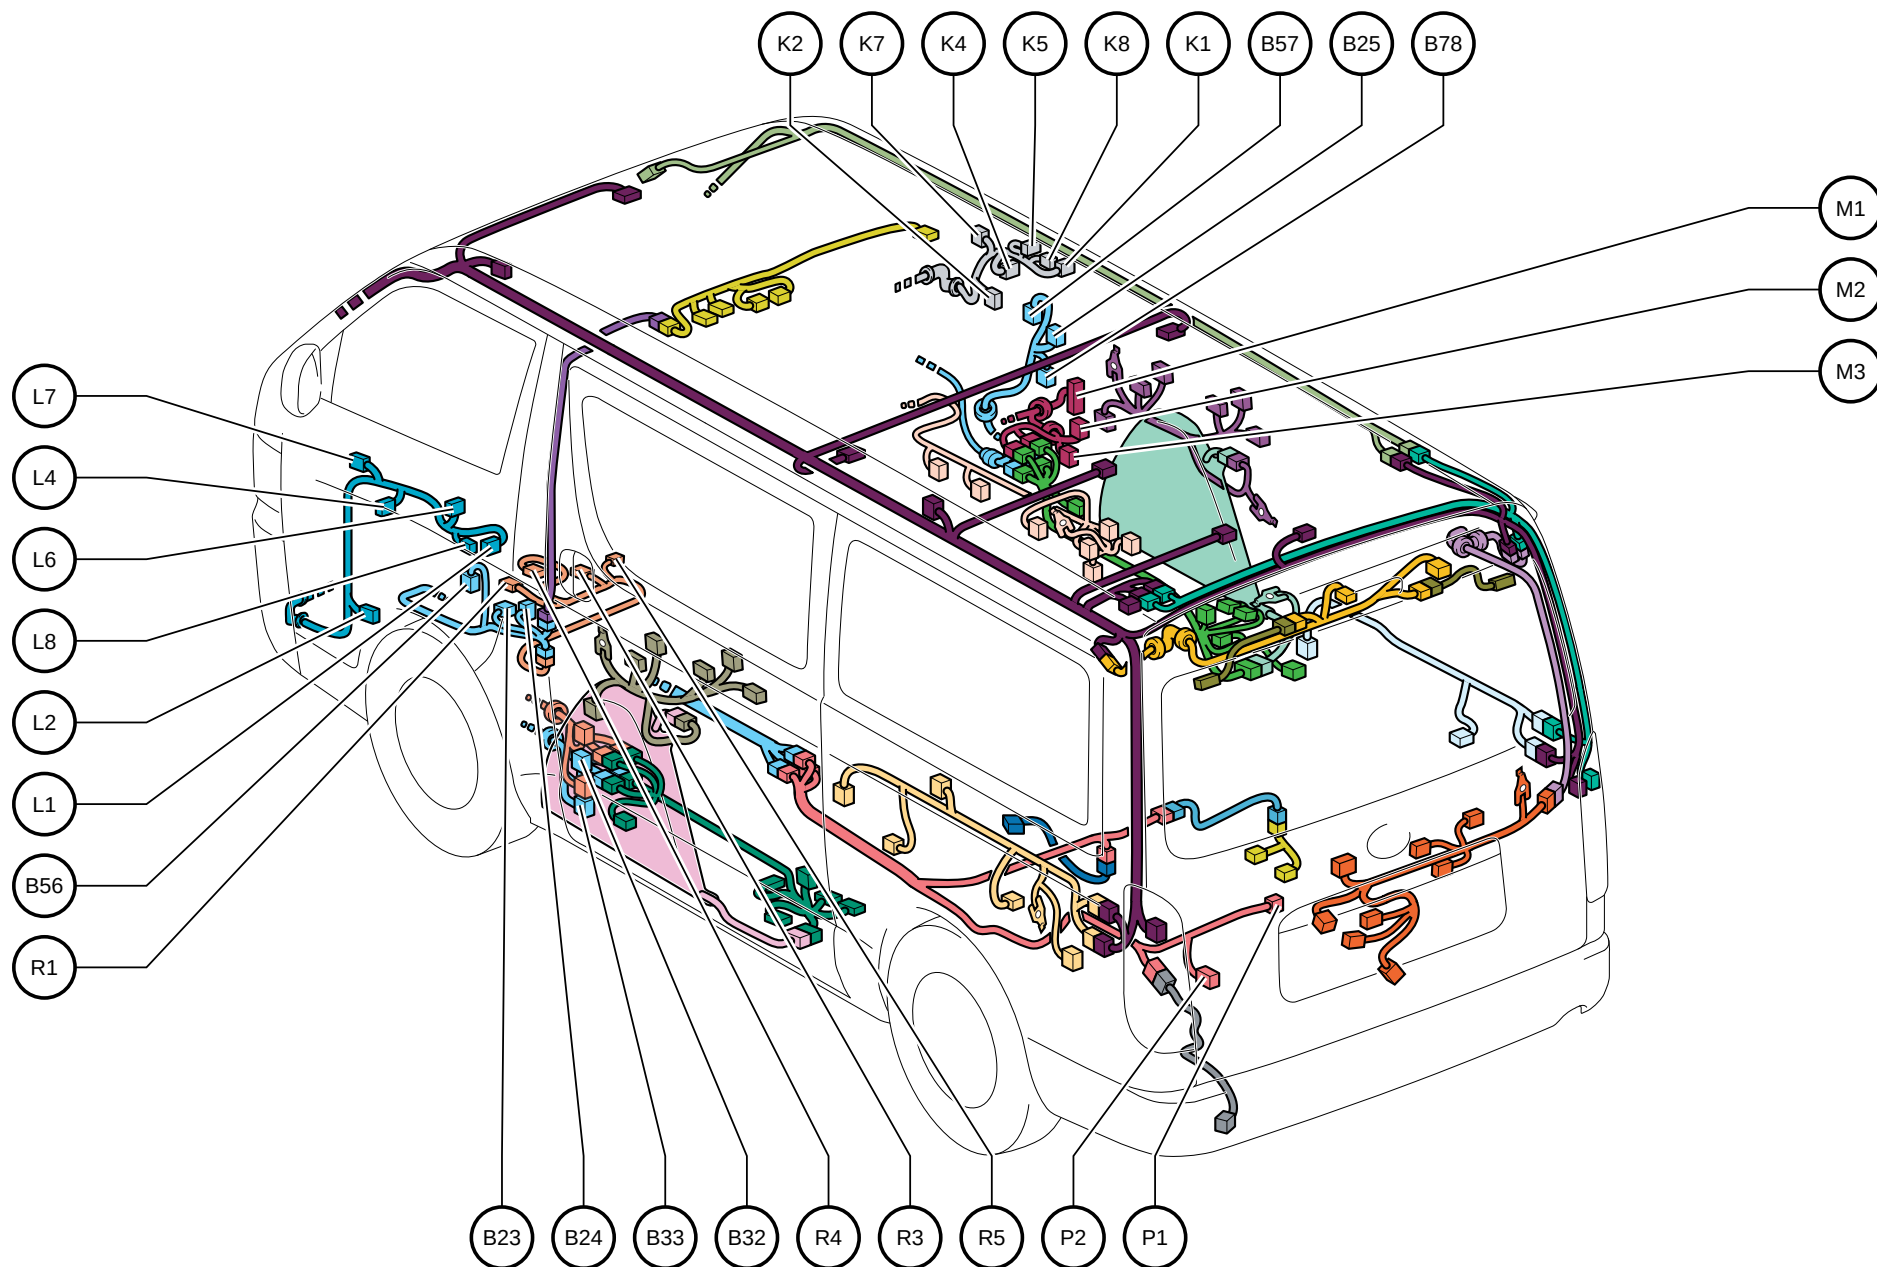

- B 23 Front Seat Outer Belt (LH)
- B 24 Blower SW (Rear Heater)
- B 25 Front Seat Outer Belt (RH)
- B 32 Door Control Relay (LH)
- B 33 Step Lamp (LH)
- B 56 Door Courtesy SW (Front LH)
- B 57 Door Courtesy SW (Front RH)
- B 78 Option Connector

- K 1 Door Lock Assembly (Front RH)
- K 2 Speaker (Front Door RH)
- K 4 Power Window Regulator Motor (Front RH)
- K 5 Power Window Master SW
- K 7 Outer Rear View Mirror (RH)
- K 8 FR Door Outside Handle Assembly RH

- L 1 Door Lock Assembly (Front LH)
- L 2 Speaker (Front Door LH)
- L 4 Power Window Regulator Motor (Front LH)
- L 6 Power Window SW (Front LH)
- L 7 Outer Rear View Mirror (LH)
- L 8 FR Door Outside Handle Assembly LH

- M 1 Slide Door Control Junction (Male RH)
- M 2 Door Control Relay (RH)
- M 3 Step Lamp (RH)

- P 1 Rear Speed Sensor (Rear Speed Sensor RH)
- P 2 Rear Height Control Sensor Sub-Assembly LH

- R 1 Front Seat Inner Belt (Front Passenger's Side)
- R 3 Front Seat Inner Belt (Front Passenger's Side)
- R 4 Belt Warning Occupant Detection Sensor
- R 5 Indoor Electrical Key Antenna Assembly (FR)

Position of Parts in Body <RHD>

