


Position of Parts in Instrument Panel <RHD>

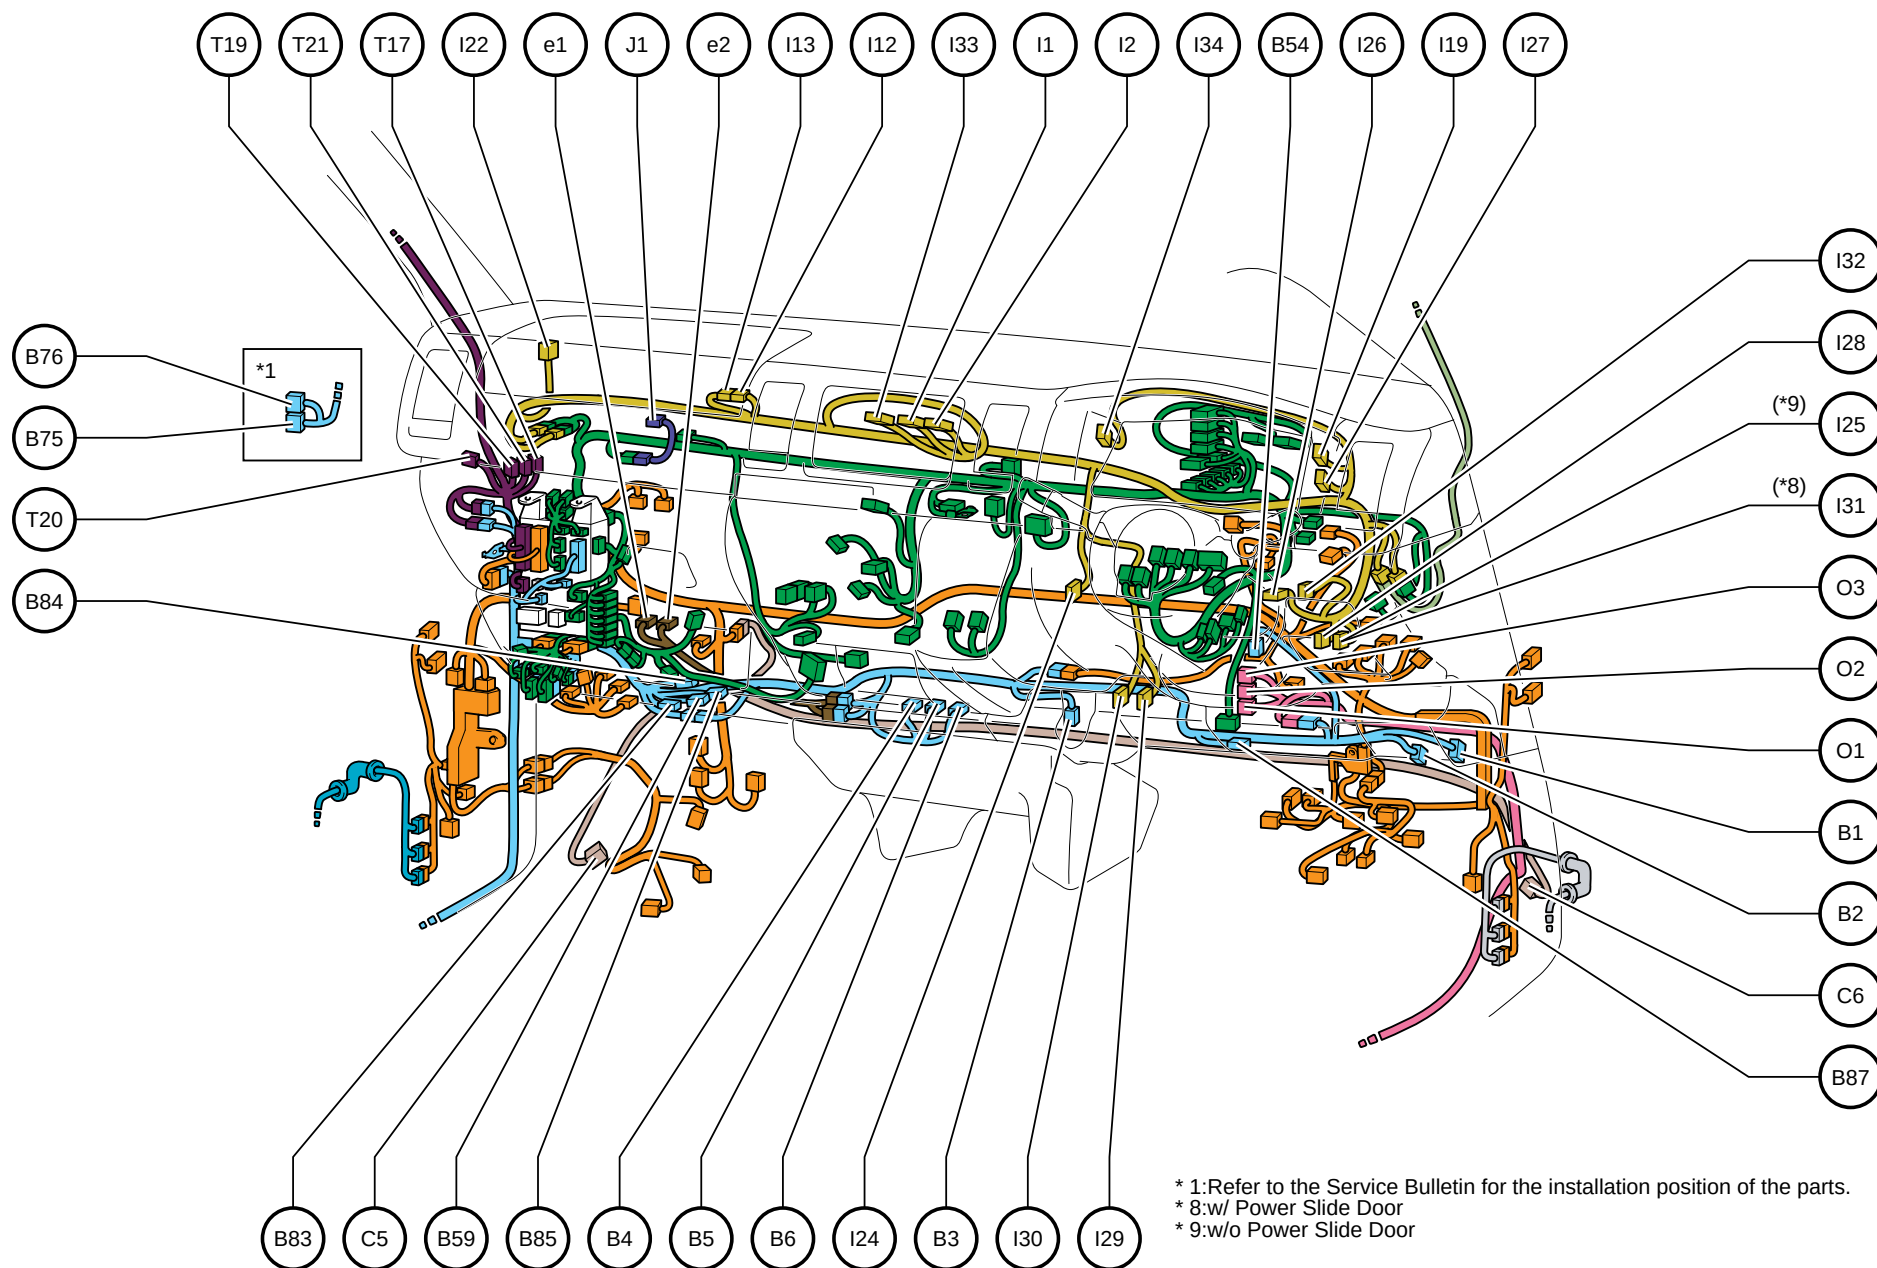

- * 1: Refer to the Service Bulletin for the installation position of the parts.
- * 8: w/ Power Slide Door
- * 9: w/o Power Slide Door

- B 1 Accelerator Position Sensor
- B 2 Stop Lamp SW
- B 3 Parking Brake SW
- B 4 Airbag Sensor Assembly Center
- B 5 Airbag Sensor Assembly Center
- B 6 Airbag Sensor Assembly Center
- B 54 Clutch Switch Assembly
- B 59 Diode (Magnet Clutch)
- B 75 Smart Key Computer Assembly
- B 76 Smart Key Computer Assembly
- B 83 Junction Connector
- B 84 Junction Connector
- B 85 Junction Connector
- B 87 Junction Connector

- C 5 Fog Lamp (Front LH)
- C 6 Fog Lamp (Front RH)

- I 1 Radio Receiver Assembly
- I 2 Radio Receiver Assembly
- I 12 Junction Connector
- I 13 Junction Connector
- I 19 Option Connector (TVSS Indicator Lamp)
- I 22 Automatic Light Control Sensor
- I 24 Idle-Up SW
- I 25 Door Lock Control SW
- I 26 Outer Mirror SW
- I 27 Headlamp Leveling SW
- I 28 Power Slide Door Control SW (LH)
- I 29 Power Slide Door Main SW
- I 30 DPF Switch Assembly
- I 31 Power Slide Door Control SW (RH)
- I 32 Push Start Switch
- I 33 Option Connector
- I 34 VSC Off Switch




 





 



 


- J 1 Airbag Squib (Front Passenger's Airbag Assembly)

- O 1 Transmission Control ECU
- O 2 Transmission Control ECU
- O 3 Transmission Control ECU

- T 17 Diode (Door Courtesy No.6)
- T 19 Diode (Door Courtesy No.9)
- T 20 Diode (Door Courtesy No.10)
- T 21 Diode (Door Courtesy No.11)

- e 1 PTC Heater
- e 2 PTC Heater

Position of Parts in Instrument Panel <RHD>

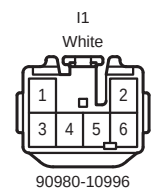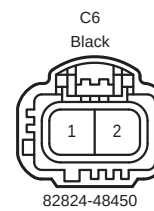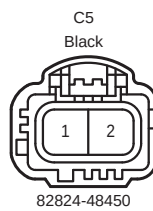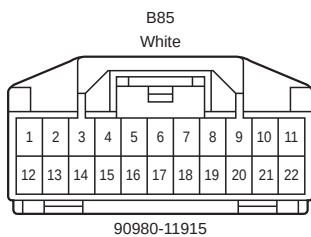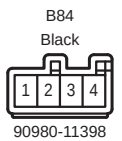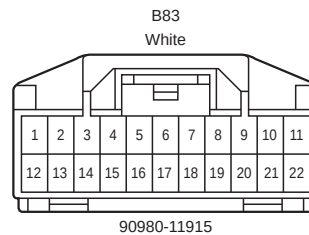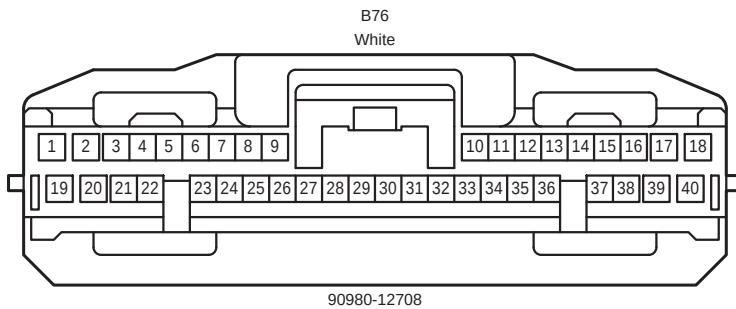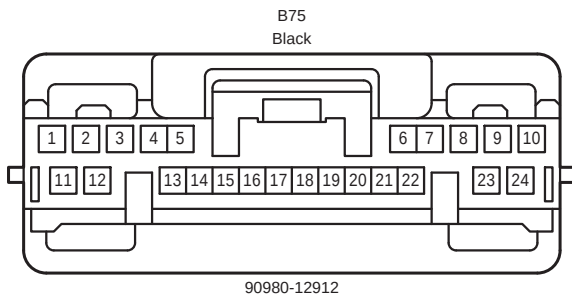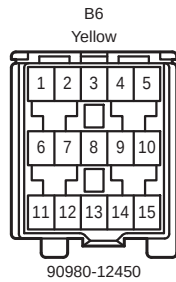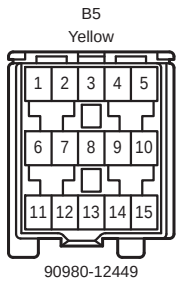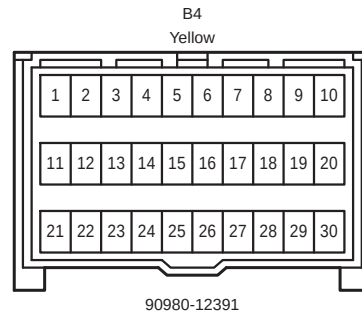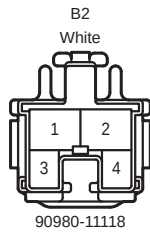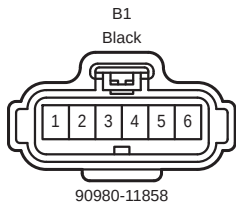

Position of Parts in Instrument Panel <RHD>

