



Position of Parts in Engine Compartment (LHD 1AR-FE)

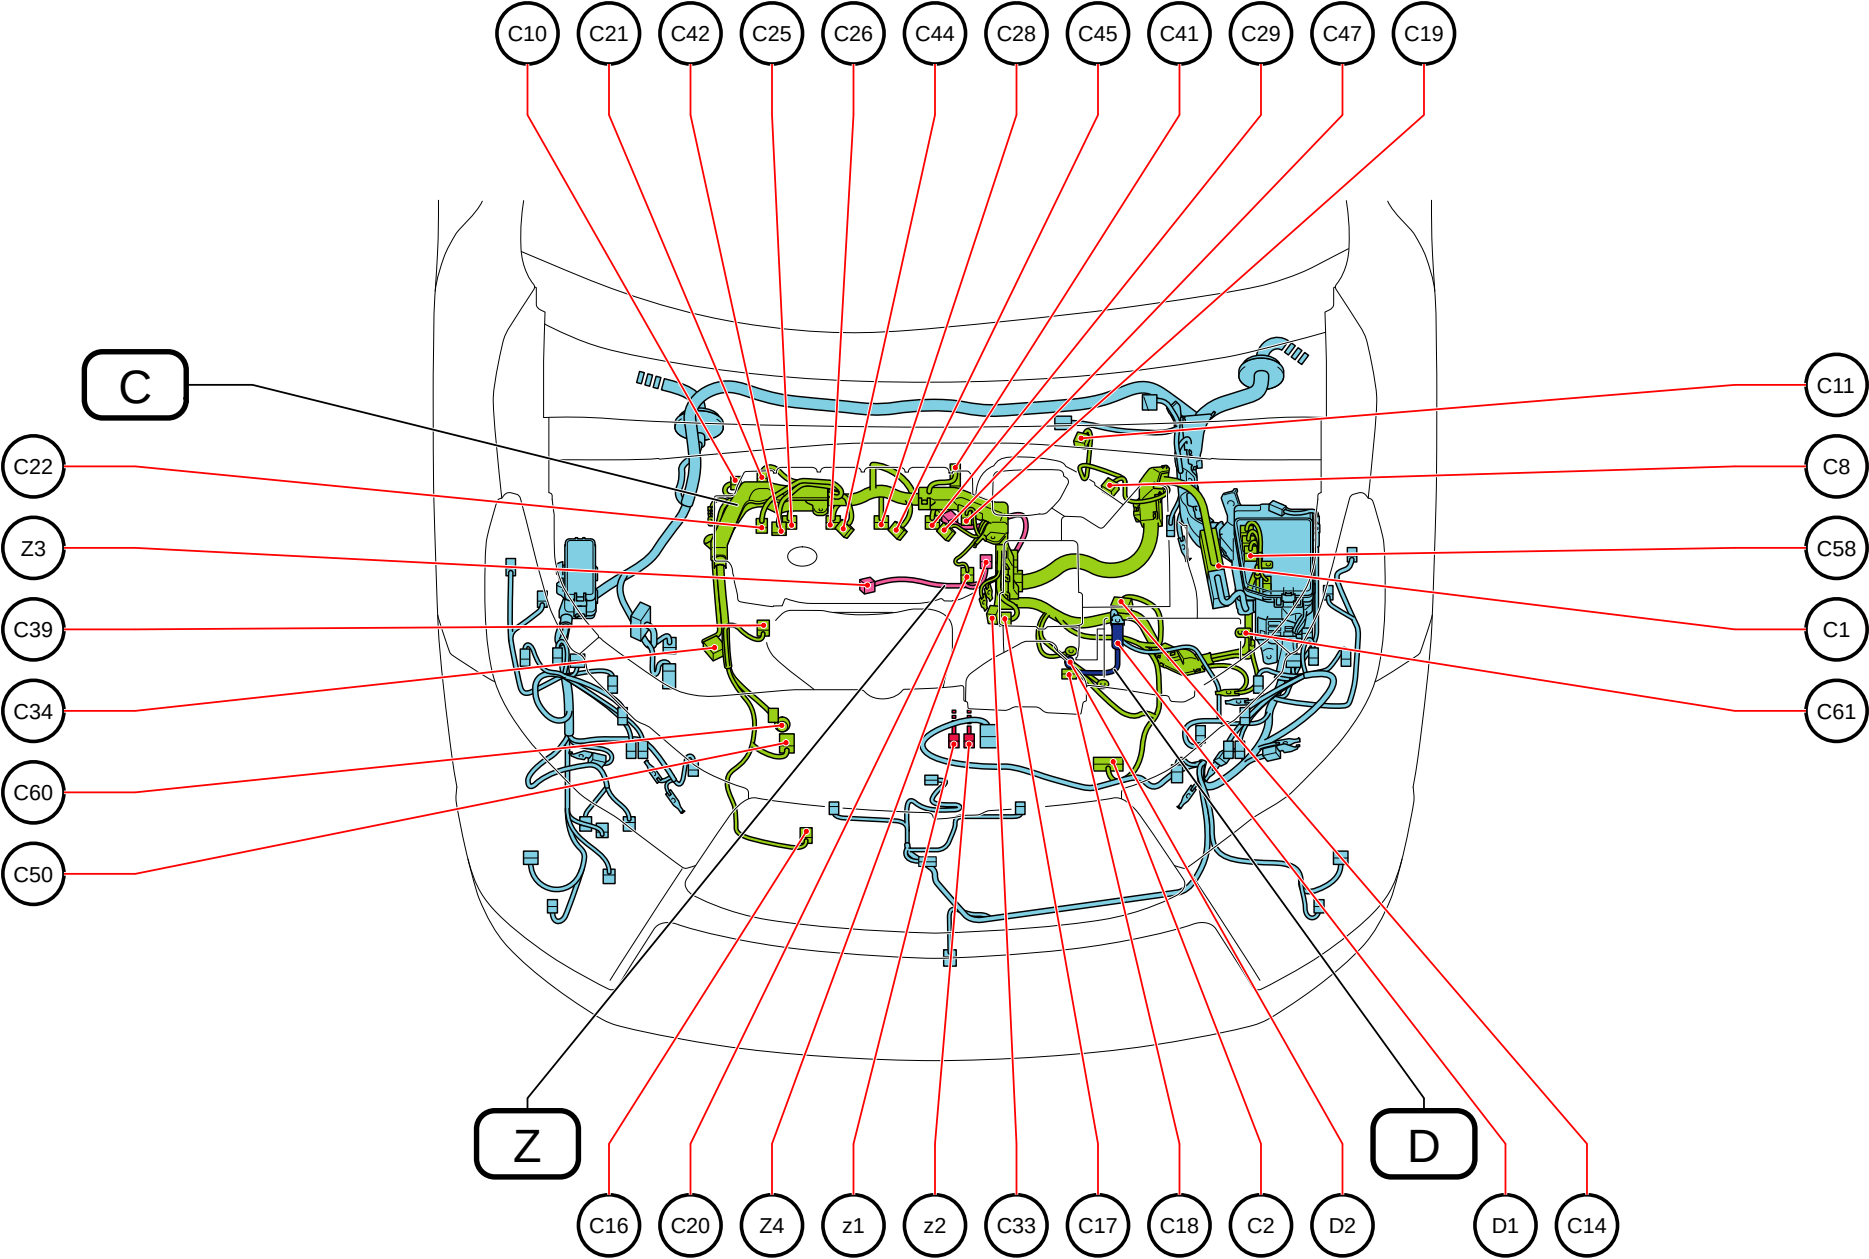


C1	ECM
C2	ECT Solenoid (Transmission Wire)
C8	Intake Mass Air Flow Meter Sub-Assembly
C10	VSV (ACIS)
C11	Purge VSV
C14	Park/Neutral Position Switch Assembly
C16	Compressor with Pulley Assembly
C17	E.F.I. Engine Coolant Temperature Sensor
C18	Starter Assembly
C19	VVT Sensor (Bank 1 Intake Side)
C20	VVT Sensor (Bank 1 Exhaust Side)
C21	Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
C22	Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
C25	Fuel Injector Assembly No. 1
C26	Fuel Injector Assembly No. 2
C28	Fuel Injector Assembly No. 3
C29	Fuel Injector Assembly No. 4
C33	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C34	Crank Position Sensor
C39	Engine Oil Pressure Switch Assembly
C41	Throttle Body with Motor Assembly
C42	Ignition Coil Assembly No. 1
C44	Ignition Coil Assembly No. 2
C45	Ignition Coil Assembly No. 3
C47	Ignition Coil Assembly No. 4
C50	Generator Assembly
C58	No. 2 Junction Connector
C60	Generator Assembly
C61	Battery
D1	Battery
D2	Starter Assembly
Z3	Knock Control Sensor (Bank 1)
Z4	Intake Air Control Valve Actuator
z1	Cooling Fan ECU , No. 2 Cooling Fan Motor
z2	Cooling Fan ECU , Cooling Fan Motor


Position of Parts in Engine Compartment (LHD 1AR-FE)

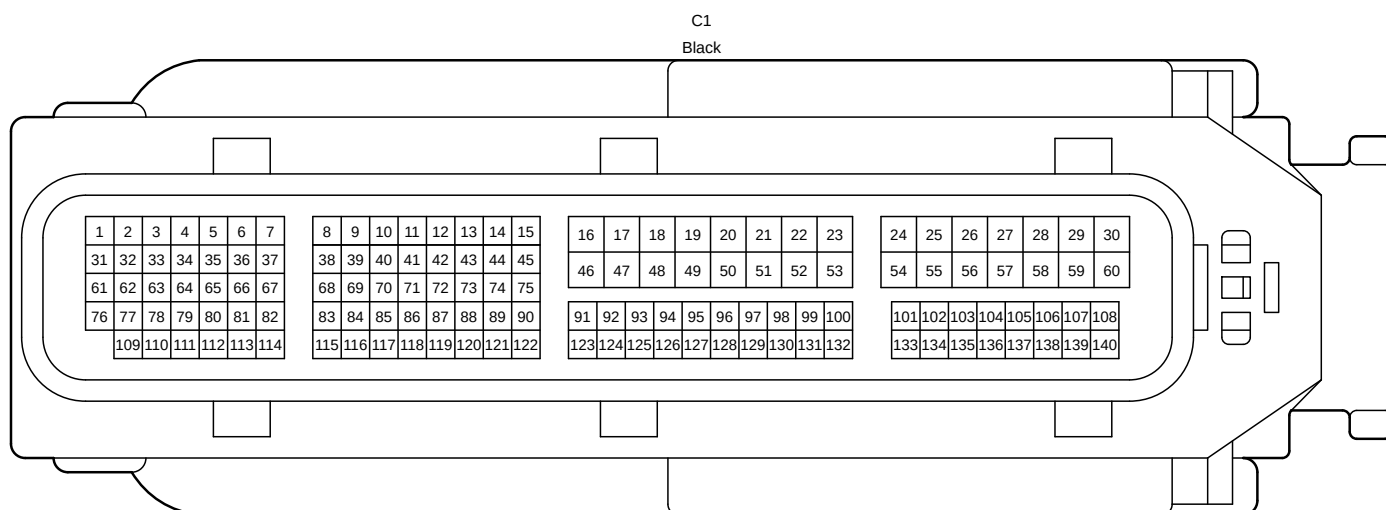


90980-12966

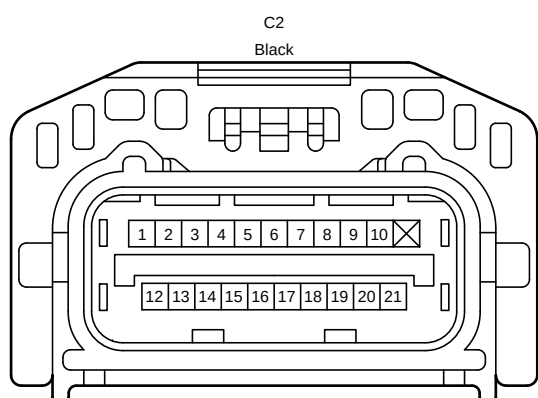


82824-33490

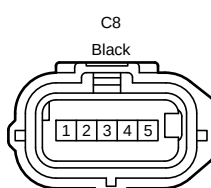


90980-12292

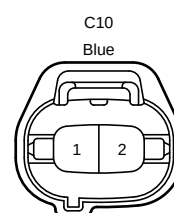


90980-11156

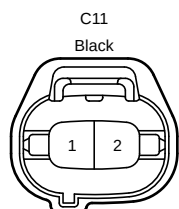

90980-11156

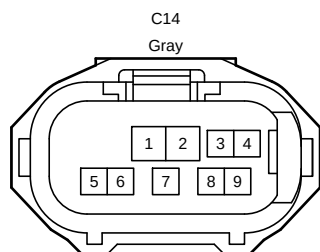


90980-12A23

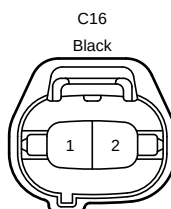


90980-11156



 
90980-10735




90980-11400

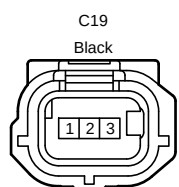

90980-12353

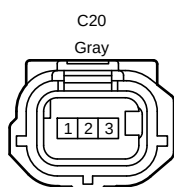


90980-12353

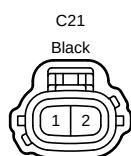

90980-11162



90980-11162

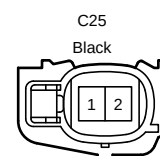

90980-11875

Position of Parts in Engine Compartment (LHD 1AR-FE)

