 
 


Position of Parts in Engine Compartment (LHD 2GR-FKS)

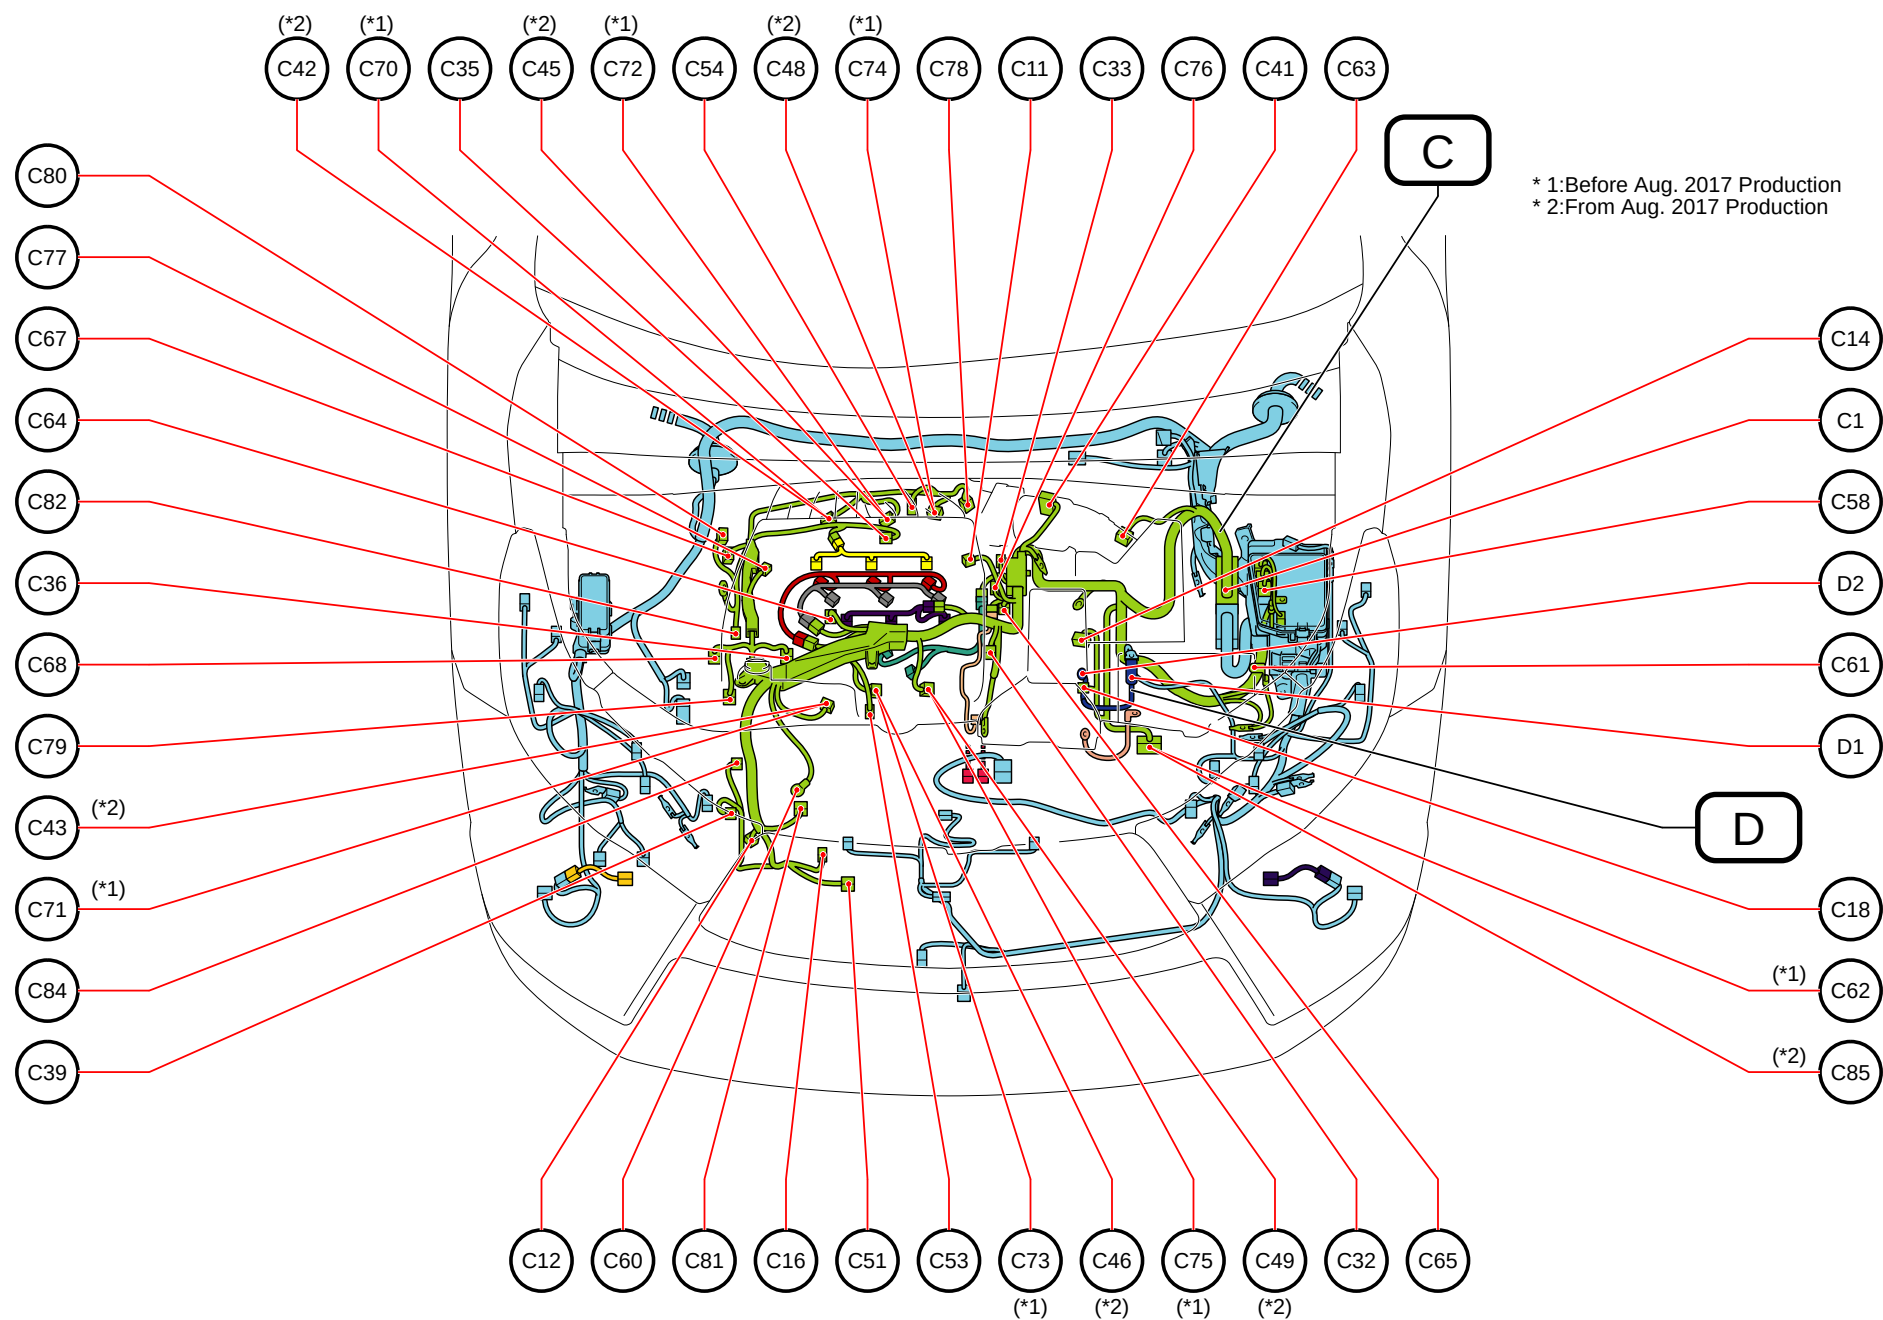


C1	ECM
C11	Purge VSV
C12	Compressor with Pulley Assembly
C14	Park/Neutral Position Switch Assembly
C16	Compressor with Pulley Assembly
C18	Starter Assembly
C32	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C33	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C35	VVT Sensor (Bank 1 Intake Side)
C36	VVT Sensor (Bank 2 Intake Side)
C39	Engine Oil Pressure Switch Assembly
C41	Throttle Body with Motor Assembly
C42	Ignition Coil Assembly No. 1
C43	Ignition Coil Assembly No. 2
C45	Ignition Coil Assembly No. 3
C46	Ignition Coil Assembly No. 4
C48	Ignition Coil Assembly No. 5
C49	Ignition Coil Assembly No. 6
C51	Oxygen Sensor (Bank 2 Sensor 2)
C53	VVT Sensor (Bank 2 Exhaust Side)
C54	VVT Sensor (Bank 1 Exhaust Side)
C58	No. 2 Junction Connector
C60	Generator Assembly
C61	Battery
C62	ECT Solenoid (Transmission Wire)
C63	Intake Mass Air Flow Meter Sub-Assembly
C64	VSV (ACIS)
C65	E.F.I. Engine Coolant Temperature Sensor
C67	Cam Timing Oil Control Valve Assembly RH (Bank 1 Intake Side)
C68	Cam Timing Oil Control Valve Assembly LH (Bank 2 Intake Side)
C70	Ignition Coil Assembly No. 1
C71	Ignition Coil Assembly No. 2
C72	Ignition Coil Assembly No. 3
C73	Ignition Coil Assembly No. 4
C74	Ignition Coil Assembly No. 5
C75	Ignition Coil Assembly No. 6
C76	Fuel Pressure Sensor (High) (Fuel Delivery Pipe w/ Sensor Assembly)
C77	Fuel Pressure Sensor (Low) (Fuel Delivery Pipe w/ Sensor Assembly)
C78	Fuel Pump Assembly
C79	Cam Timing Oil Control Valve Assembly LH (Bank 2 Exhaust Side)
C80	Cam Timing Oil Control Valve Assembly RH (Bank 1 Exhaust Side)
C81	Generator Assembly
C82	Water Inlet with Thermostat Sub-Assembly
C84	Engine Oil Level Sensor
C85	ECT Solenoid (Transmission Wire)
D1	Battery
D2	Starter Assembly


Position of Parts in Engine Compartment (LHD 2GR-FKS)

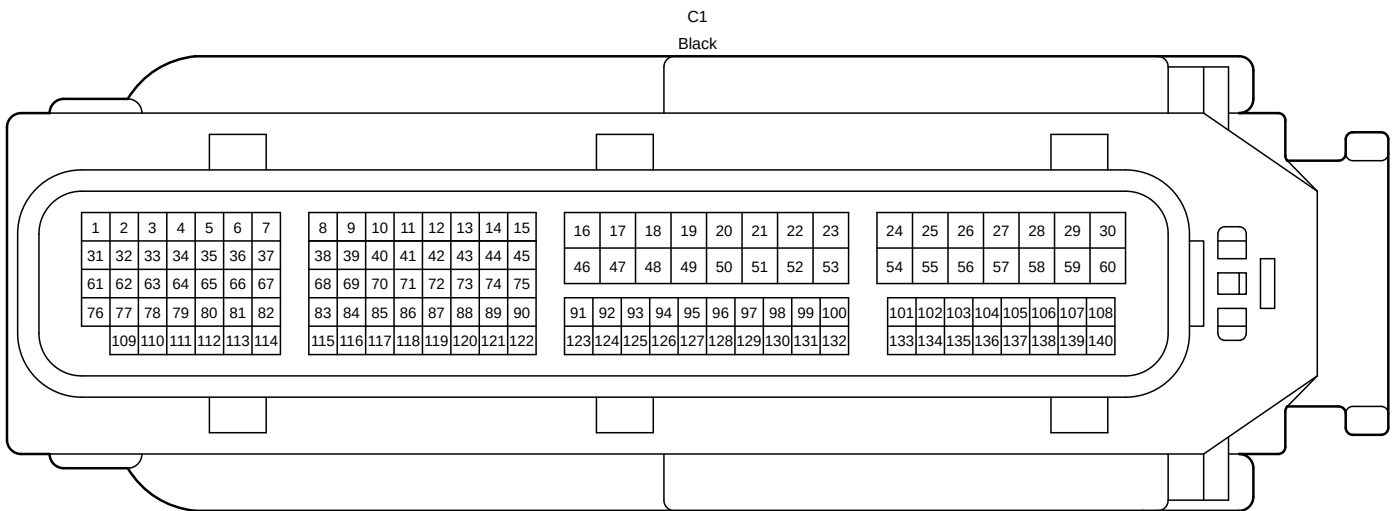

 
90980-12966

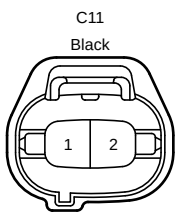


90980-11156

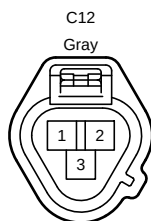 


90980-11016

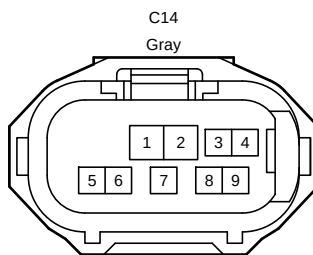 

90980-12A23

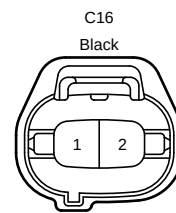 

90980-11156

 


90980-11400




90980-11178



 
90980-11178

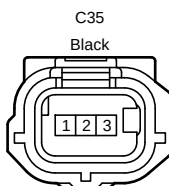


90980-12353

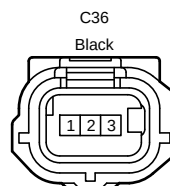 


90980-12353

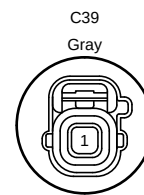 


90980-11363

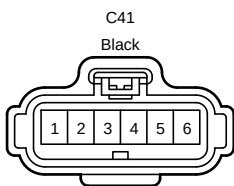 


90980-11858

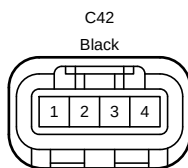 


90980-12A37

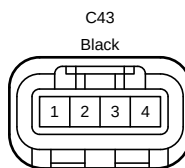 


90980-12A37

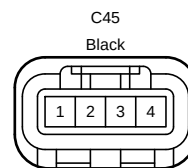 


90980-12A37

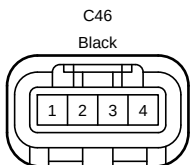 

90980-12A37

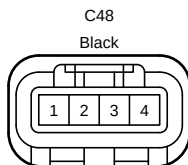 


90980-12A37

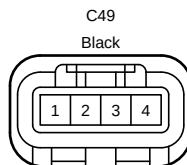 

90980-12A37























 90980-11930

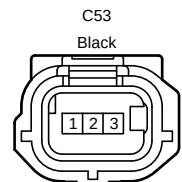

90980-12353

                    Position of Parts in Engine Compartment (LHD 2GR-FKS)

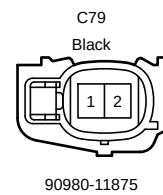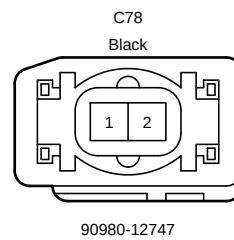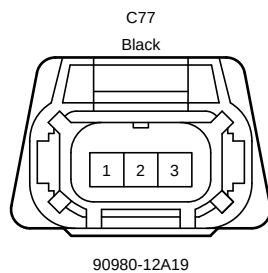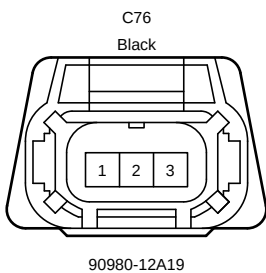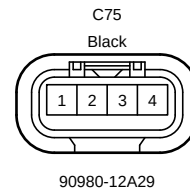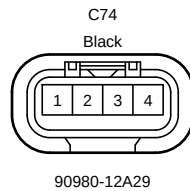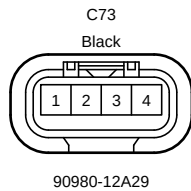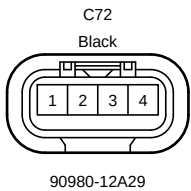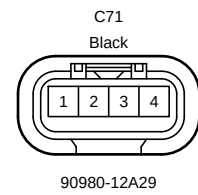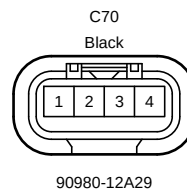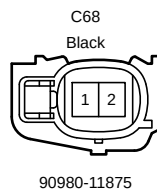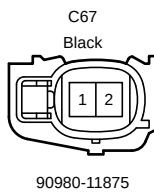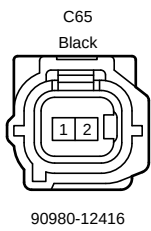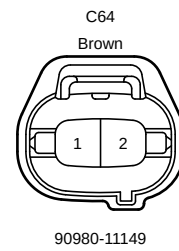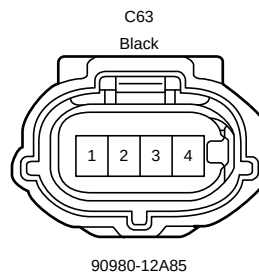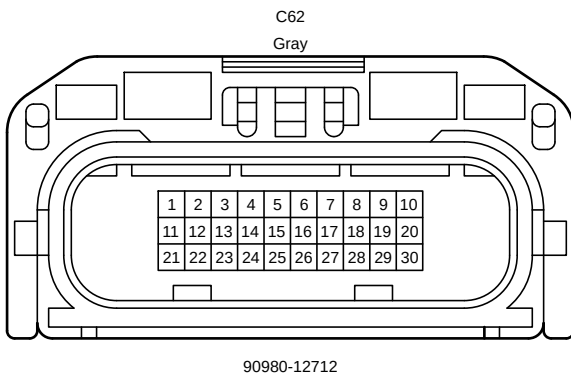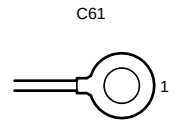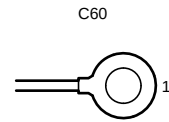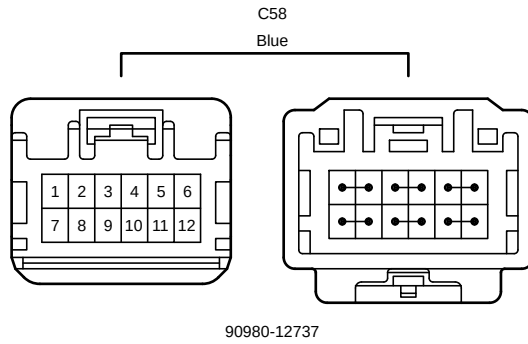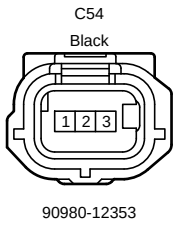

Position of Parts in Engine Compartment (LHD 2GR-FKS)

