


Position of Parts in Engine Compartment (RHD 2GR-FKS)

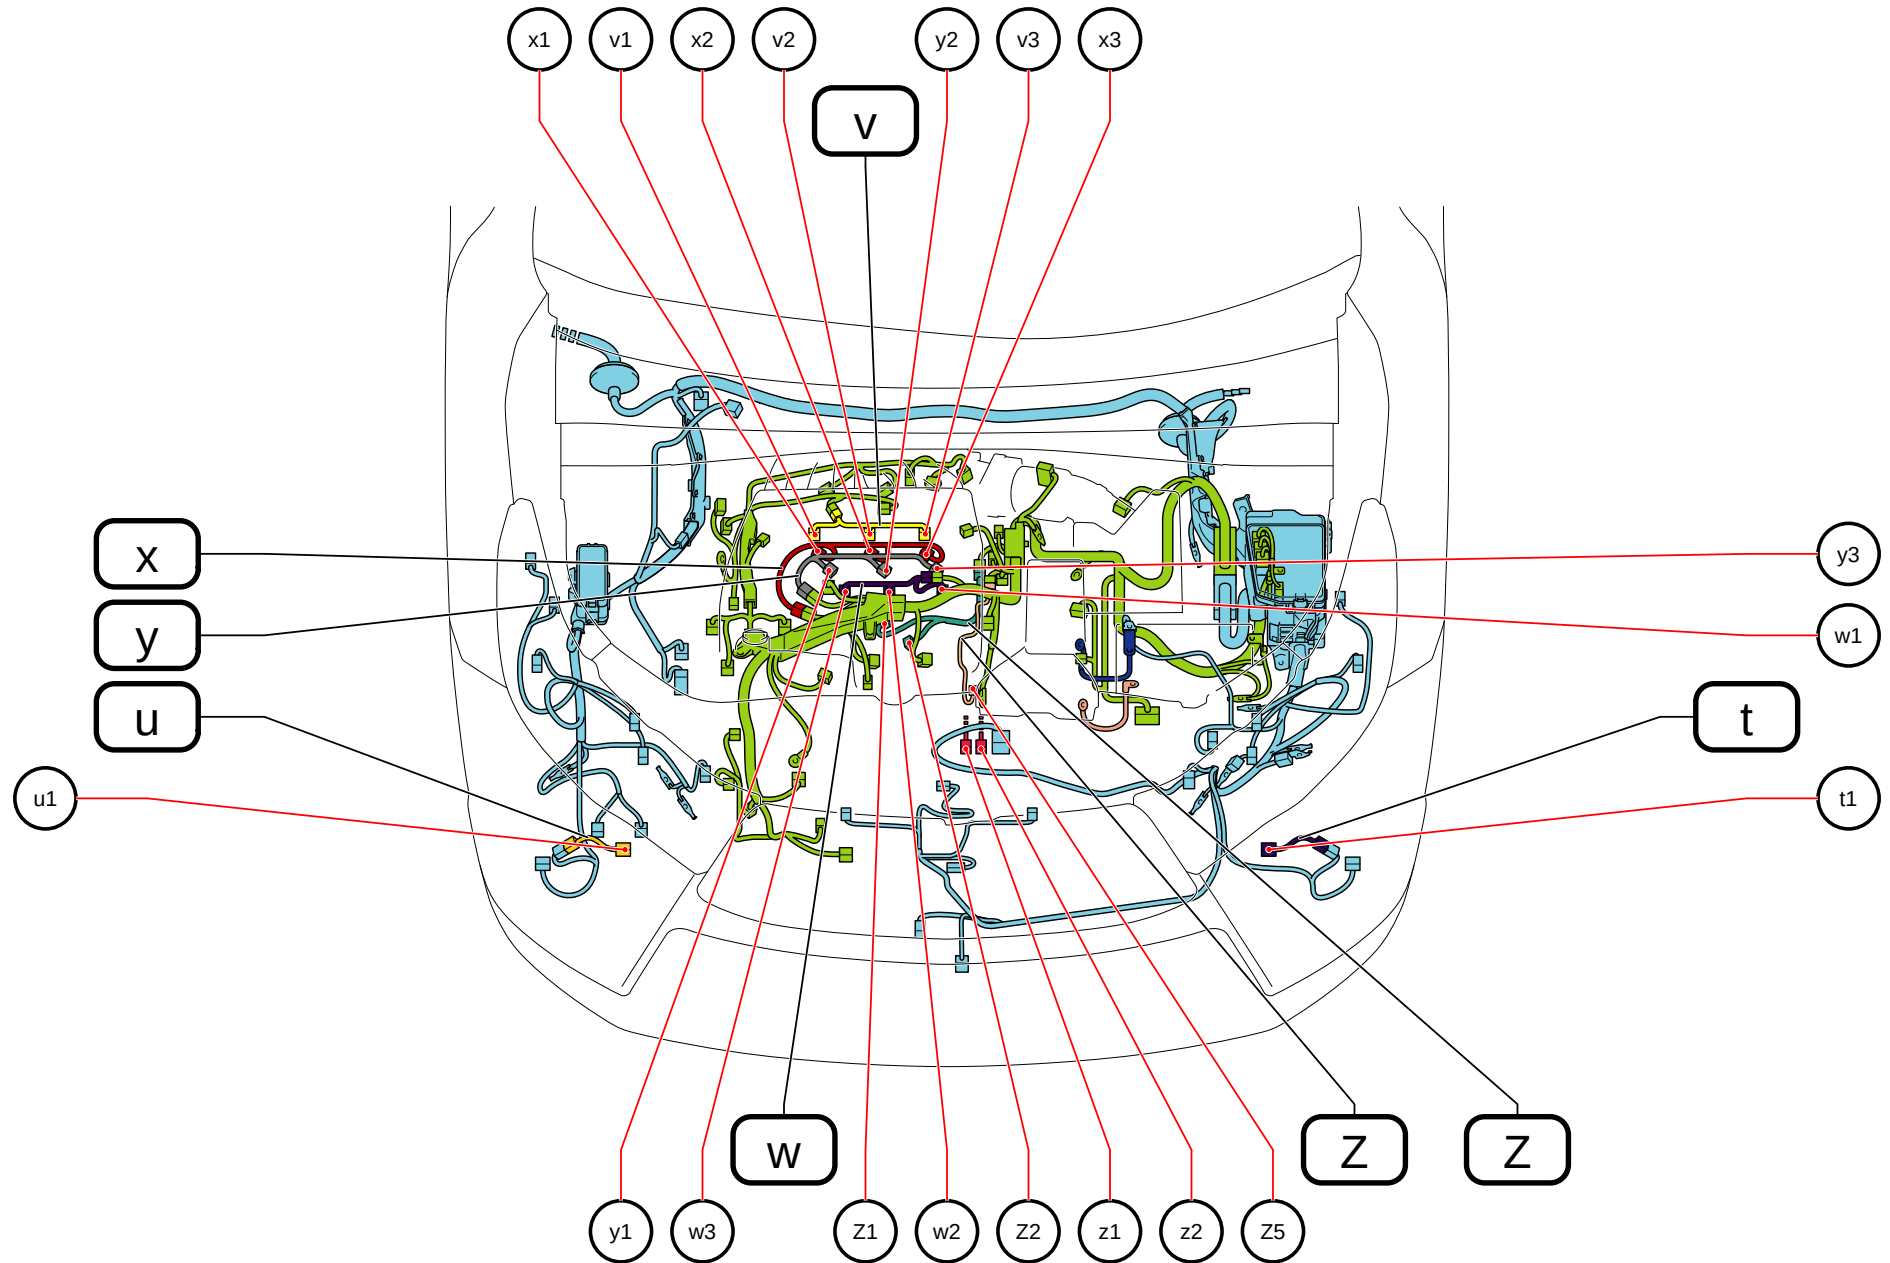

Z1	Knock Control Sensor (Bank 2)
Z2	Knock Control Sensor (Bank 1)
Z5	Crank Position Sensor
t1	Front Ultrasonic Sensor Corner LH
u1	Front Ultrasonic Sensor Corner RH
v1	Fuel Injector Assembly No. 6 (for Port Injection)
v2	Fuel Injector Assembly No. 4 (for Port Injection)
v3	Fuel Injector Assembly No. 2 (for Port Injection)
w1	Fuel Injector Assembly No. 2 (for Port Injection)
w2	Fuel Injector Assembly No. 4 (for Port Injection)
w3	Fuel Injector Assembly No. 6 (for Port Injection)
x1	Fuel Injector Assembly No. 1 (for Direct Injection)
x2	Fuel Injector Assembly No. 3 (for Direct Injection)
x3	Fuel Injector Assembly No. 5 (for Direct Injection)
y1	Fuel Injector Assembly No. 2 (for Direct Injection)
y2	Fuel Injector Assembly No. 4 (for Direct Injection)
y3	Fuel Injector Assembly No. 6 (for Direct Injection)
z1	Cooling Fan ECU , No. 2 Cooling Fan Motor
z2	Cooling Fan ECU , Cooling Fan Motor

Position of Parts in Engine Compartment (RHD 2GR-FKS)

