



Position of Parts in Instrument Panel (LHD)

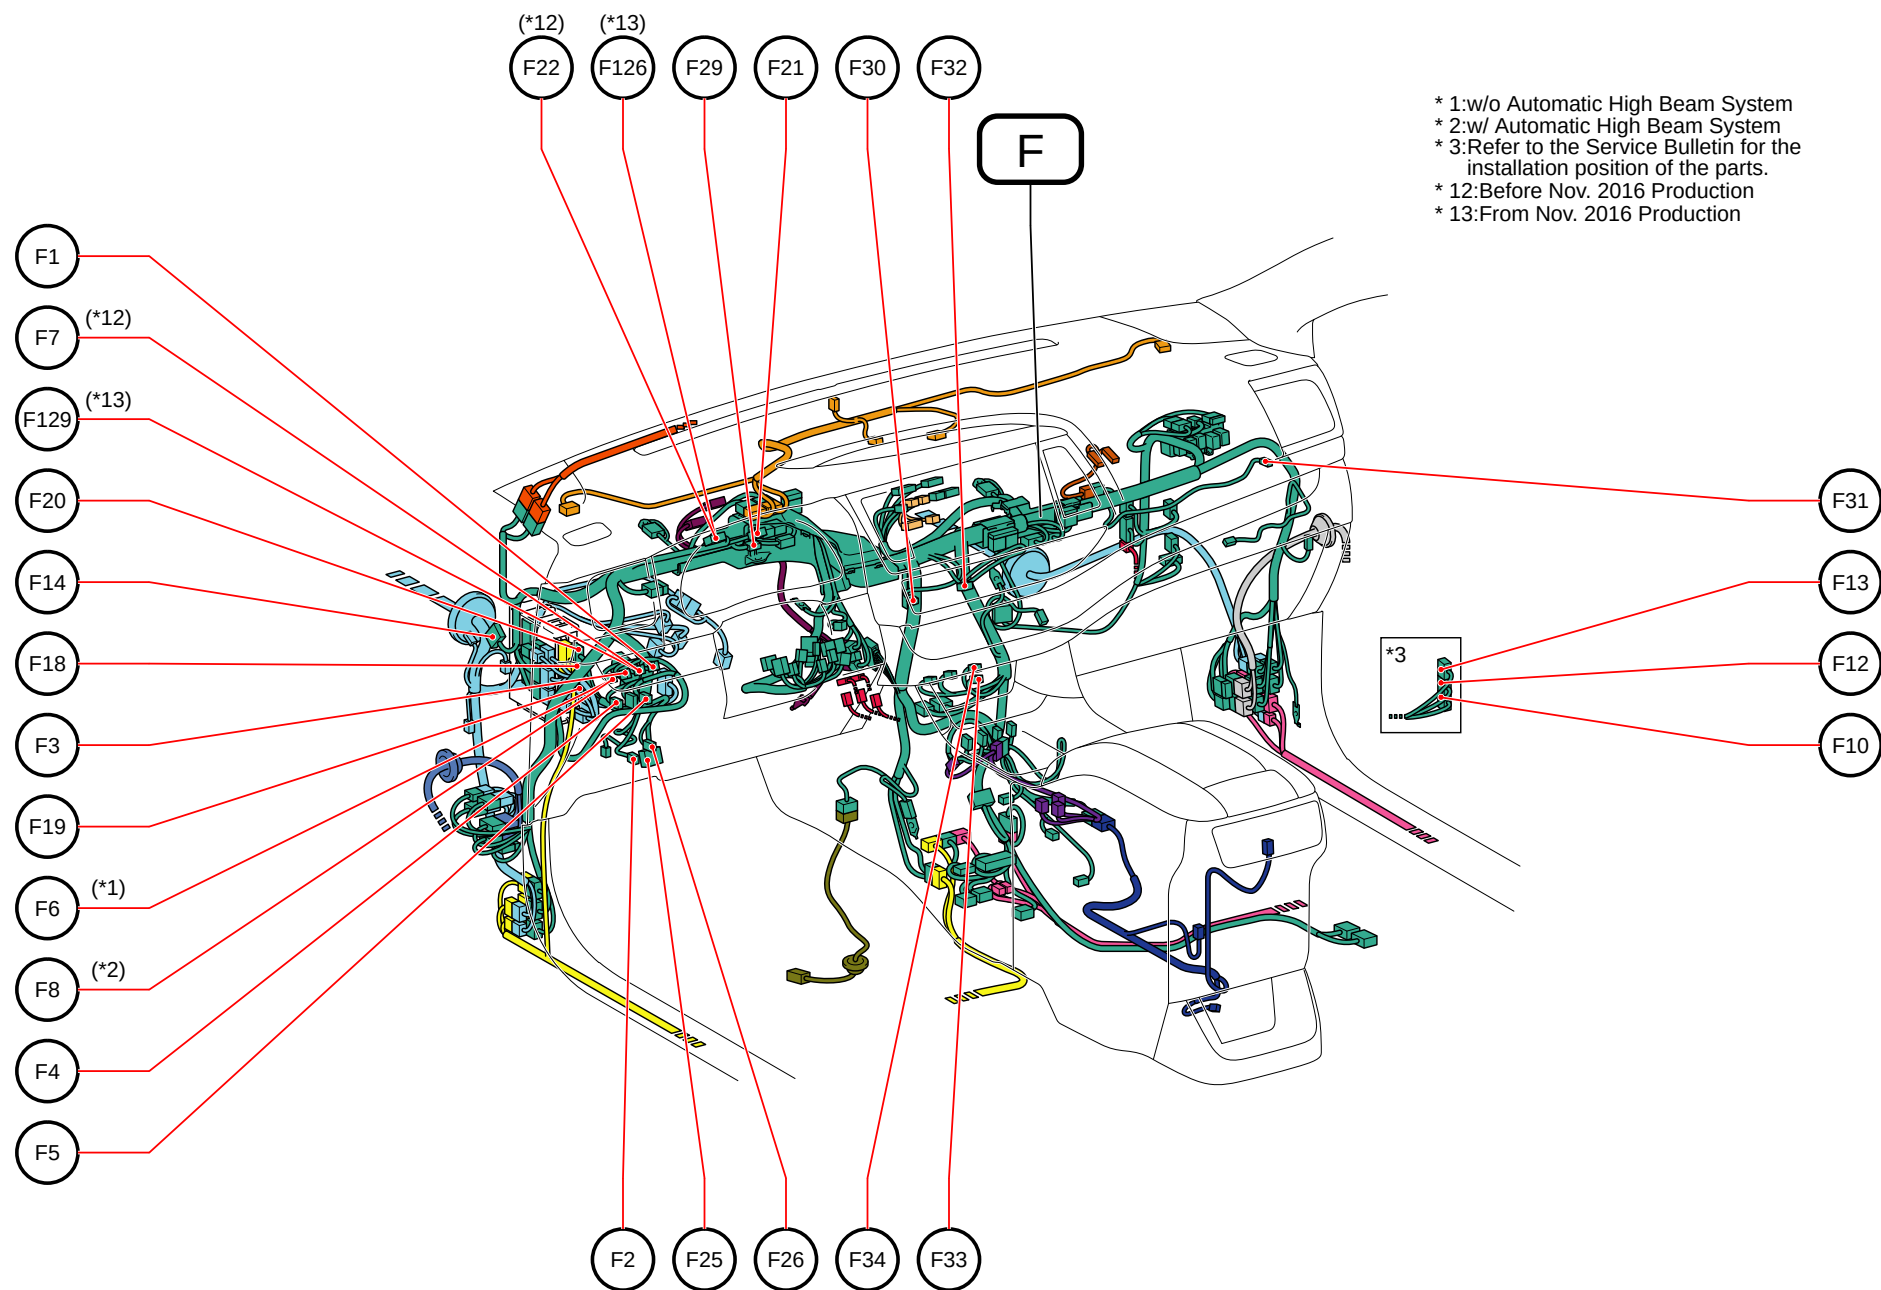


Position of Parts in Instrument Panel (LHD)

F1	Door Control Switch Assembly
F2	Fuel Lid Opener Switch
F3	Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
F4	Outer Mirror Heater Switch Assembly
F5	Back Sonar or Clearance Sonar Switch Assembly
F6	Headlight Leveling Switch
F7	Lane Departure Alert Switch (Lane-Keeping Assist Main Switch)
F8	Auto High Beam Switch
F10	Certification ECU
F12	Certification ECU
F13	Certification ECU
F14	4WD ECU Assembly
F18	Main Body ECU
F19	Main Body ECU
F20	Main Body ECU
F21	Combination Meter Assembly
F22	Combination Meter Assembly
F25	DLC3
F26	Lower No. 1 Instrument Panel Airbag Assembly
F29	No. 1 Clearance Warning Buzzer
F30	Ambient Light LH
F31	Ambient Light RH
F32	A/C Control Assembly
F33	No. 1 Power Outlet Socket Assembly
F34	Option Connector (Cigarette Lighter Illumination)
F126	Combination Meter Assembly
F129	Pattern Select Switch Assembly


Position of Parts in Instrument Panel (LHD)

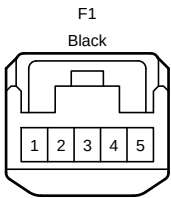


90980-12366

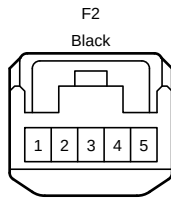


90980-12366

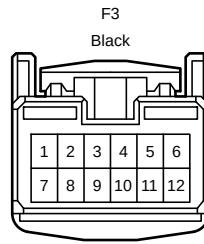


90980-12614

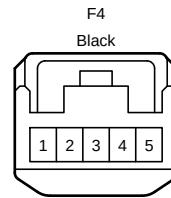


90980-12366

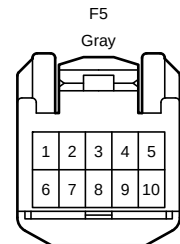


90980-12361

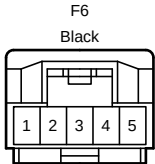


90980-11909

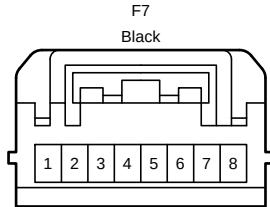


90980-12550

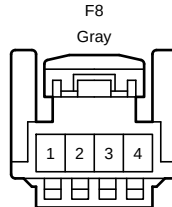


90980-12876

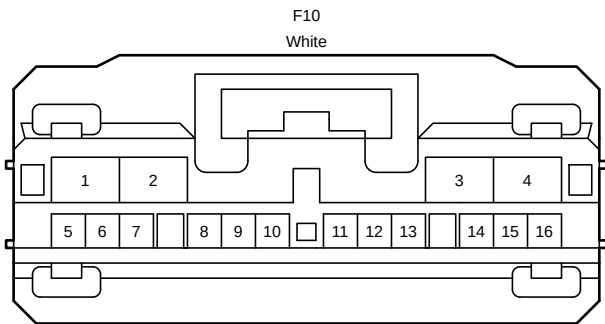


90980-12763

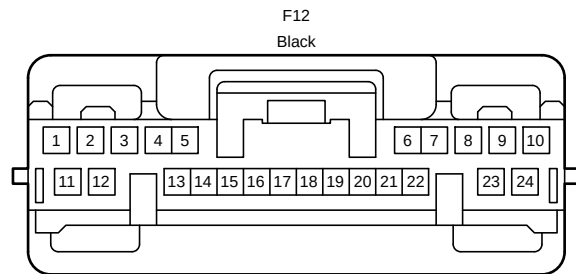

90980-12912

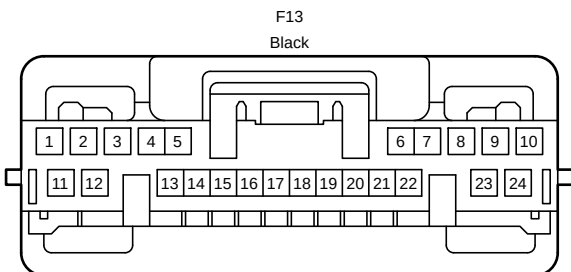


90980-12A42

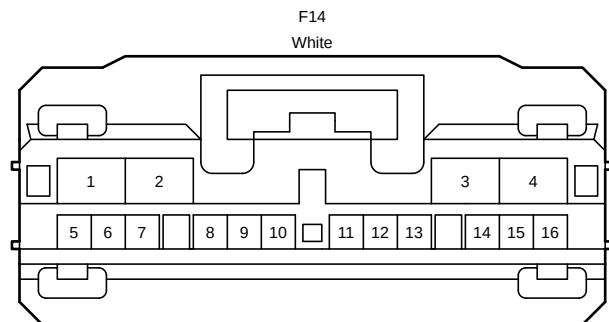

90980-12763


Position of Parts in Instrument Panel (LHD)

F18
White

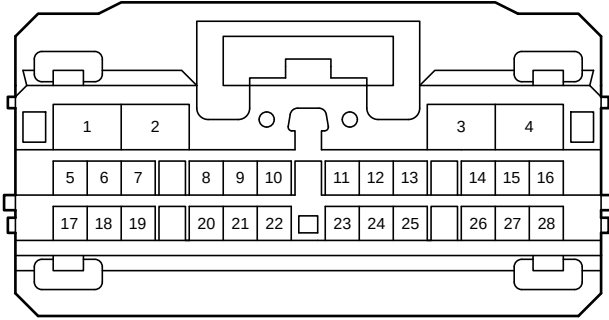


90980-12908

F19
White

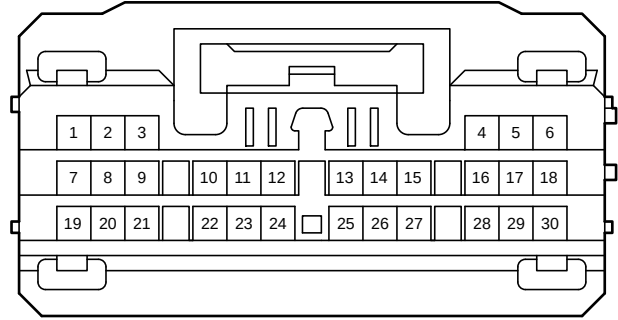


90980-12909

F20
White

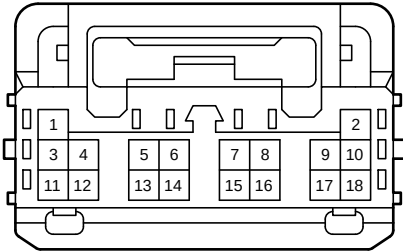


82824-33350

F21
Black

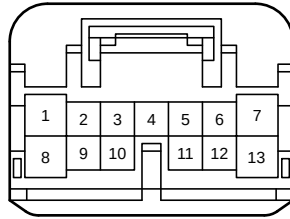


90980-12767

F22
Black

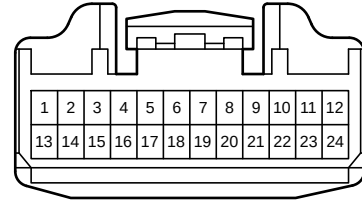


90980-12554

F25
White

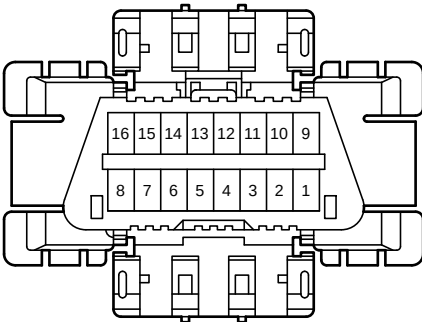


90980-11665

 F26
Black



90980-12452

 F29
Black



90980-10825

F30
Gray




90980-11918

F31
Gray




90980-11918

F32
Black

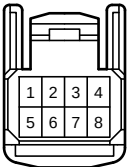

90980-12551

 F33
White




90980-12498

F34
White



90980-12063


F126
Black

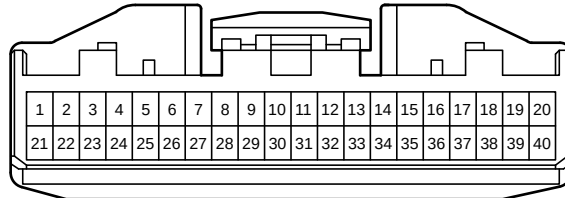

90980-12557

F129

Black

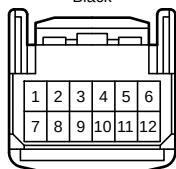

90980-12552