



Position of Parts in Instrument Panel (LHD)

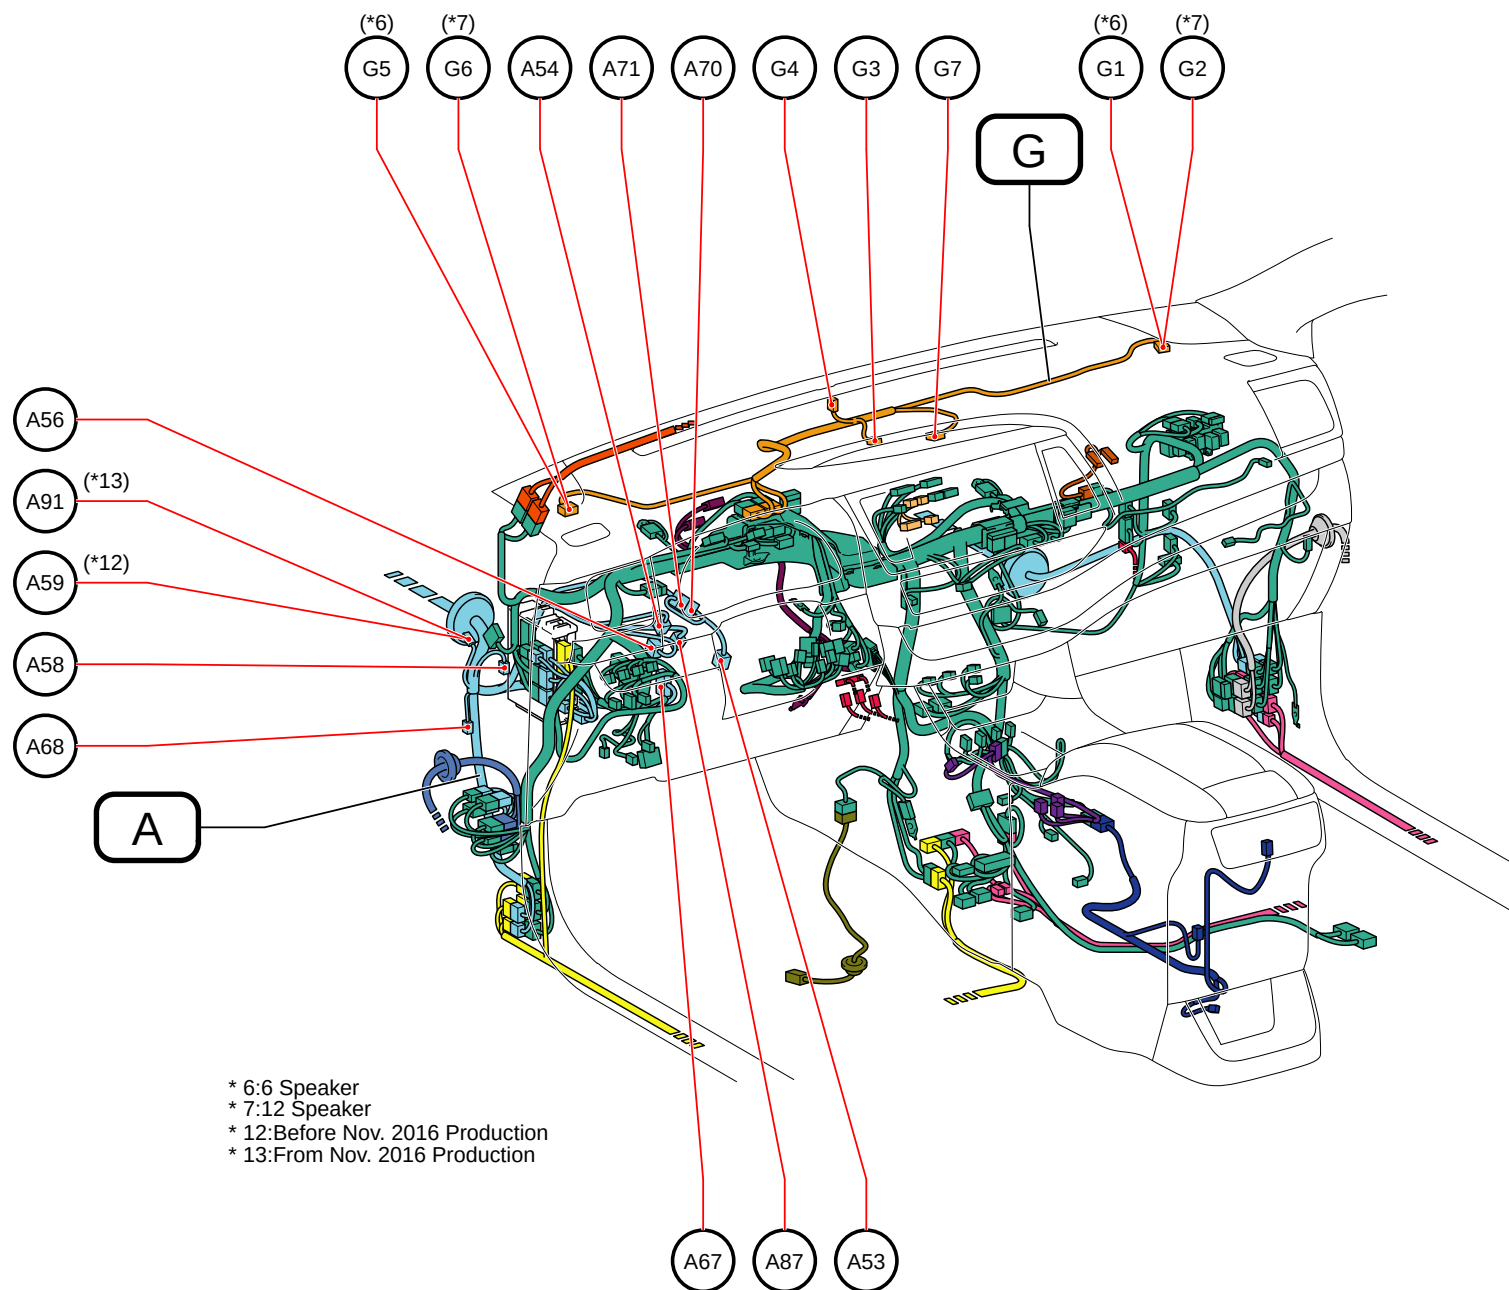


Position of Parts in Instrument Panel (LHD)

A53	Accelerator Pedal Sensor Assembly
A54	Stop Light Switch Assembly
A56	Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
A58	Parking Brake Switch Assembly
A59	Lane Departure Warning Buzzer and Skid Control Buzzer Assembly
A67	Headlight Leveling ECU Assembly
A68	Diode (Shift Position)
A70	No. 1 Junction Connector
A71	No. 1 Junction Connector
A87	Stop Light Switch Assembly
A91	Skid Control Buzzer Assembly
G1	Front No. 2 Speaker Assembly RH
G2	Front No. 2 Speaker Assembly RH
G3	Front No. 3 Speaker Assembly
G4	Automatic Light Control Sensor
G5	Front No. 2 Speaker Assembly LH
G6	Front No. 2 Speaker Assembly LH
G7	Clock Assembly


Position of Parts in Instrument Panel (LHD)

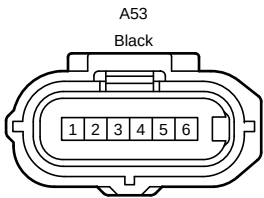

90980-12831

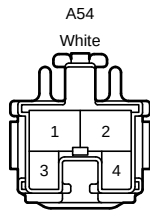


90980-11118

 


90980-10860



 
90980-10871




90980-10860

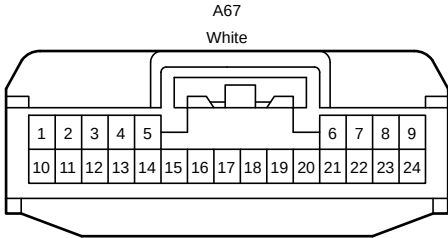


90980-12404

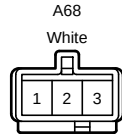


90980-11071

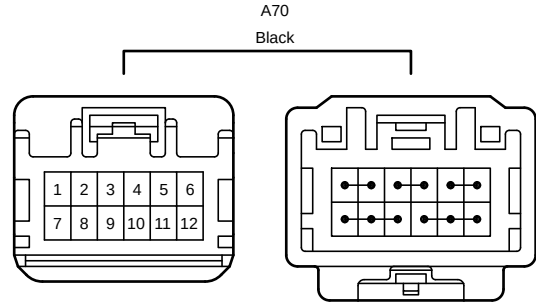


90980-12737

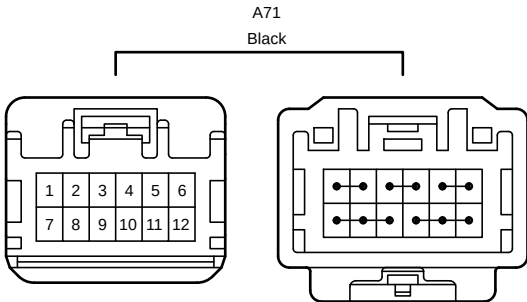


90980-12737

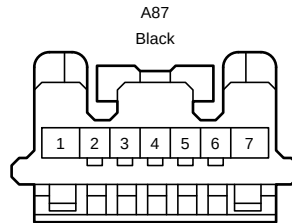


90980-12092

 


90980-10860

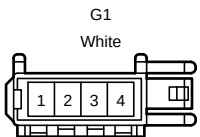


90980-12304

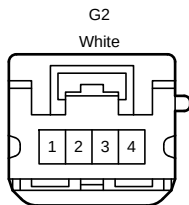


90980-12733

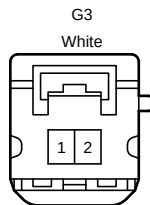


90980-12808

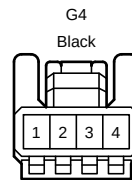


82824-50130

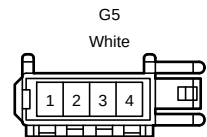

90980-12304

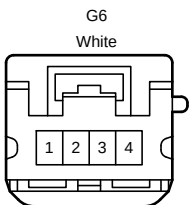

90980-12733

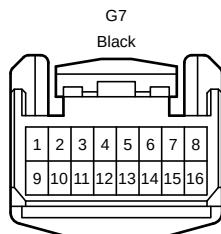

90980-12553