


Position of Parts in Instrument Panel (LHD)

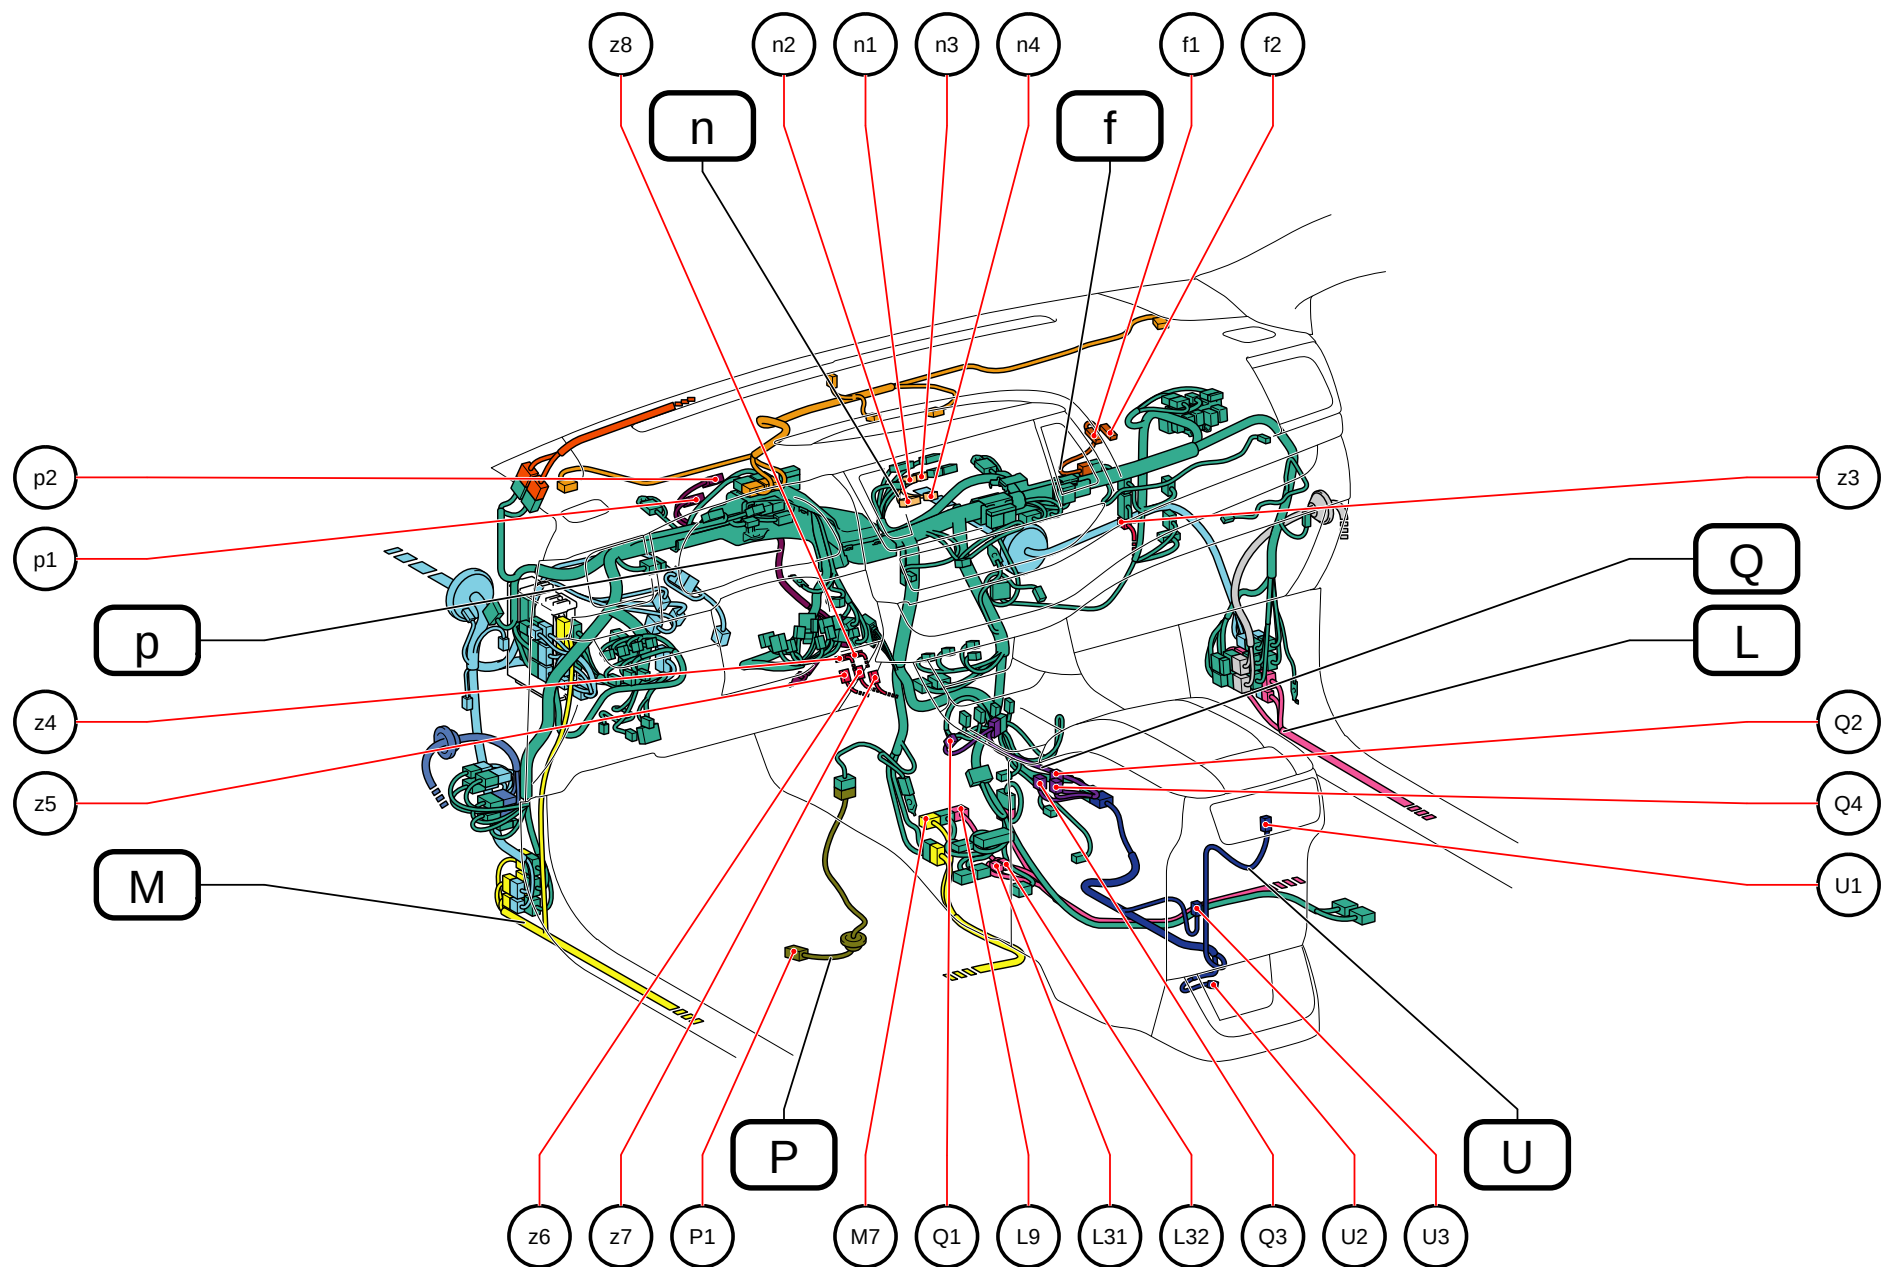

Position of Parts in Instrument Panel (LHD)

L9	Airbag Sensor Assembly
L31	Mayday ECU Assembly
L32	Mayday ECU Assembly
M7	Airbag Sensor Assembly
P1	Oxygen Sensor (Bank 1 Sensor 2)
Q1	Shift Position Indicator
Q2	Seat Heater Switch RH
Q3	Seat Heater Switch LH
Q4	Seat Heater Switch
U1	No. 2 A/C Control Assembly
U2	Rear No. 1 Power Outlet Socket Assembly
U3	Center Power Outlet Socket Assembly
f1	Instrument Panel Passenger Airbag without Door Assembly
f2	Instrument Panel Passenger Airbag without Door Assembly
n1	Radio & Display Receiver Assembly
n2	Extension Module
n3	Radio & Display Receiver Assembly
n4	Extension Module
p1	Power Steering ECU Assembly
p2	Power Steering ECU Assembly
z3	A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
z4	Spiral Cable with Sensor Sub-Assembly , Steering Pad Switch Assembly
z5	Driver Side Squib (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z6	Driver Side Squib (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z7	Spiral Cable with Sensor Sub-Assembly , Steering Wheel Heater Control Assembly
z8	Cruise Control Main Switch , Spiral Cable with Sensor Sub-Assembly

Position of Parts in Instrument Panel (LHD)

