


■ LIGHT REMINDER SYSTEM

- This system is used as standard equipment on the SR grade model.
- This system sounds the buzzer in the combination meter to warn the driver that the lights remain ON if the driver's door is opened while the headlights or taillights are ON when the ignition key is turned from the ON to ACC or LOCK positions. The buzzer is located inside the combination meter.
- This system is controlled by the meter ECU.

► System Diagram ◀

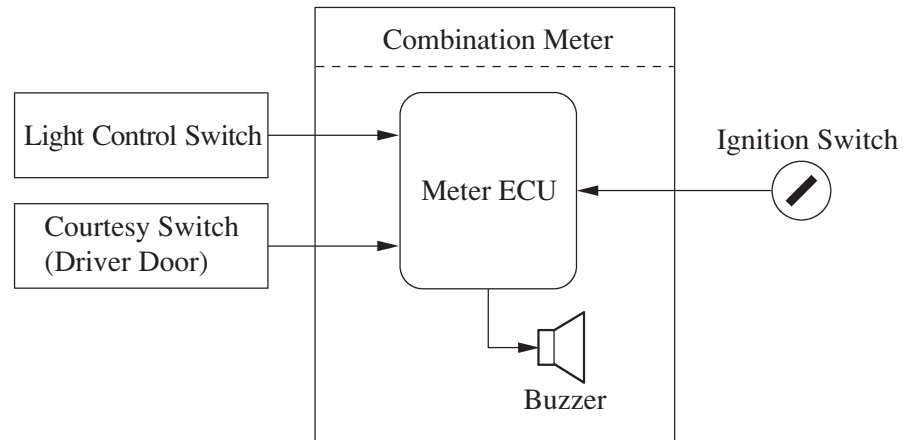

271BE64