

POWER WINDOW SYSTEM

DESCRIPTION

This system has the following functions:

Function	Outline
Manual up-and-down	This function causes the window to open or close while the power window switch is being pulled halfway down. The window stops as soon as the switch is released.
Driver's door one-touch auto down	The driver's door one-touch auto down function enables the window of driver's door to be fully opened at a touch of the power window switch.
Remote control	The up-and-down operations of the front passenger door window and the rear door window* can be controlled by power window master switch.

*: Only for Double Cab Model

► System Diagram ◀

