

## ■ FUNCTION

### 1. General

The wireless door lock remote control system in the new Hilux has the following functions.

| Function                                           | Outline                                                                                                                                                                                                                                                                                                                                                                    | Without Theft Deterrent System | With Theft Deterrent System |
|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|-----------------------------|
| All Doors Lock Operation                           | When the all doors are closed, pressing the door lock switch of the transmitter locks all the doors.                                                                                                                                                                                                                                                                       | ○                              | ○                           |
| All Doors Unlock Operation                         | When the all doors are locked, pressing the door unlock switch of the transmitter unlocks all the doors.                                                                                                                                                                                                                                                                   | ○                              | ○                           |
| Automatic Lock Function                            | If none of the doors are opened within 30 seconds of them being unlocked by the wireless door lock remote control, all the doors are locked again automatically.                                                                                                                                                                                                           | ○                              | ○                           |
| Answer Back Operation                              | <ul style="list-style-type: none"> <li>● The hazard lights flash once during locking, and flash twice during unlocking, to inform the driver that the operation has been completed.</li> <li>● This function can be enabled and disabled according to the user's preference. For details, refer to the Hilux Repair Manual.</li> </ul>                                     | —                              | ○                           |
|                                                    | The hazard lights flash once during locking, and flash twice during unlocking, to inform the driver that the operation has been completed.                                                                                                                                                                                                                                 | ○                              | —                           |
|                                                    | <ul style="list-style-type: none"> <li>● The security horn is sounded once when locking, and twice when unlocking, to inform that the operation has been completed. This function is not active in the default setting.</li> <li>● This function can be enabled and disabled according to the user's preference. For details, refer to the Hilux Repair Manual.</li> </ul> | —                              | ○                           |
| Panic Alarm Operation                              | Pressing the PANIC switch on the transmitter for 1.5 seconds or more, operates the theft deterrent system alarm for 30 seconds. The alarm can be cancelled by pressing any button other than the PANIC switch.                                                                                                                                                             | —                              | ○                           |
| Door Ajar warning Function                         | <ul style="list-style-type: none"> <li>● If any door is open or ajar, pressing the door lock button on the transmitter will cause the security hone to sound for about 1 second.</li> <li>● This function can be enabled and disabled according to the user's preference. For details, refer to the Hilux Repair Manual.</li> </ul>                                        | —                              | ○                           |
| Illuminated Entry Function                         | When the all doors are closed, pressing the door lock button on the transmitter causes the key illumination to be turned off simultaneously with the lock operation.                                                                                                                                                                                                       | ○                              | —                           |
| Security Function                                  | Sends an operation signal as a rolling code.                                                                                                                                                                                                                                                                                                                               | ○                              | ○                           |
| Transmitter Recognition Code Registration Function | A maximum of 4 types of transmitter recognition codes can be registered in the wireless door control receiver.                                                                                                                                                                                                                                                             | ○                              | ○                           |

## 2. Transmitter Recognition Code Registration Function

Four different codes can be rewritten through the use of the registration function modes described in the table below. The codes are electronically registered (written to and stored) in the EEPROM. To register the codes correctly, refer to the detailed recognition code registration procedure in the Hilux Repair Manual.

| Mode                       | Function                                                                                                                                                                                                       |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rewrite Mode               | Erases all previously registered codes and registers only the newly received codes. This mode is used whenever a transmitter, the Body ECU* <sup>1</sup> or the theft deterrent ECU* <sup>2</sup> is replaced. |
| Add Mode                   | Adds a newly received code while preserving any previously registered codes. This mode is used when adding a new transmitter. If the number of codes exceeds 4, the oldest registered code is erased first.    |
| Confirm Mode* <sup>1</sup> | Confirms how many codes are currently registered. When adding a new code, this mode is used to check how many codes already exist.                                                                             |
| Prohibit Mode              | To delete all the registered codes and to prohibit the wireless door lock function. This mode is used when the transmitter is lost.                                                                            |

\*<sup>1</sup>: Only for Models without Theft Deterrent System

\*<sup>2</sup>: Only for Models with Theft Deterrent System