


CRUISE CONTROL SYSTEM

DESCRIPTION

- Once the system is set to a desired vehicle speed, the throttle valve position or injection volume is adjusted automatically to maintain the vehicle speed without depressing the accelerator pedal.
- On the models with the 1GR-FE engine, this system effects control through the ETCS-i.
- On the models with the 1KD-FTV engine, this system effects control through the diesel EFI system.
- The cruise control ECU is integrated in the engine ECU.
- This system is standard equipment on the SR grade model equipped with automatic transmission for Australia and Central and South America.

System Diagram

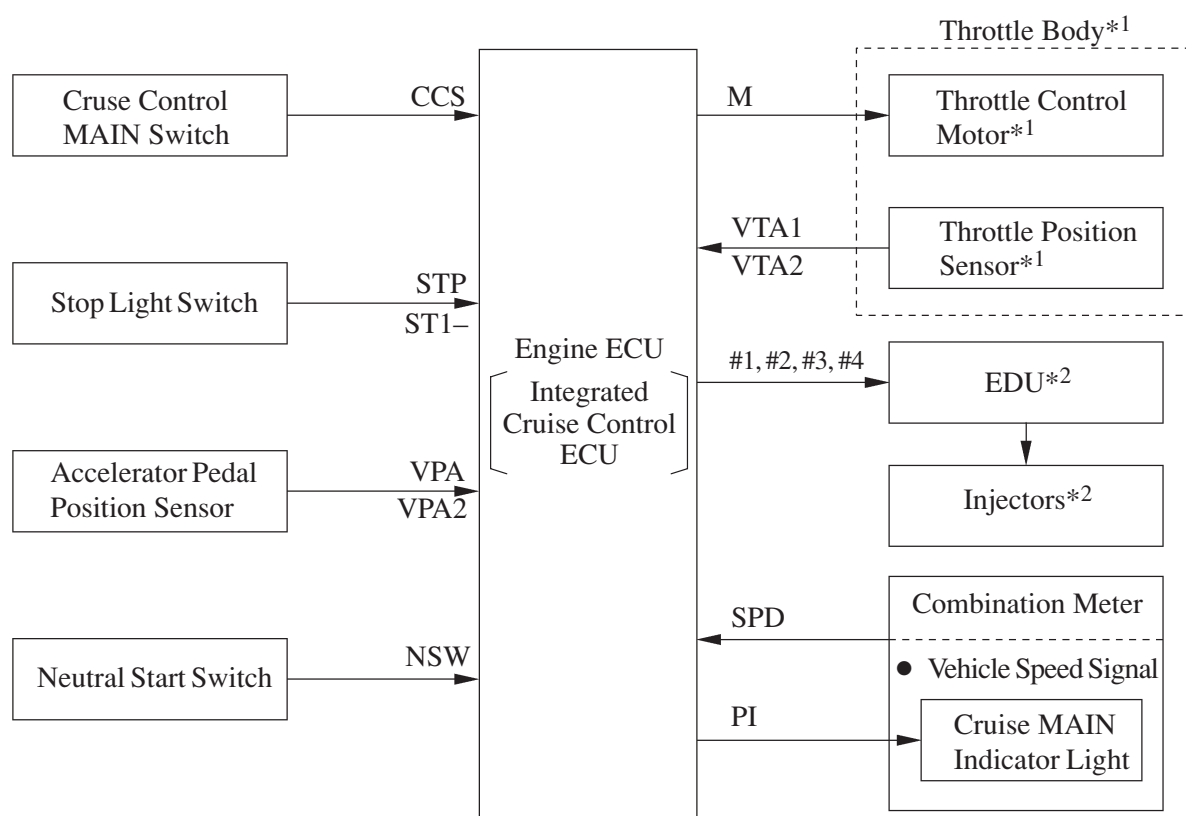

271BE55

*1: Only for Models with 1GR-FE Engine

*2: Only for Models with 1KD-FTV Engine