



# G ELECTRICAL WIRING ROUTING

## Position of Parts in Engine Compartment

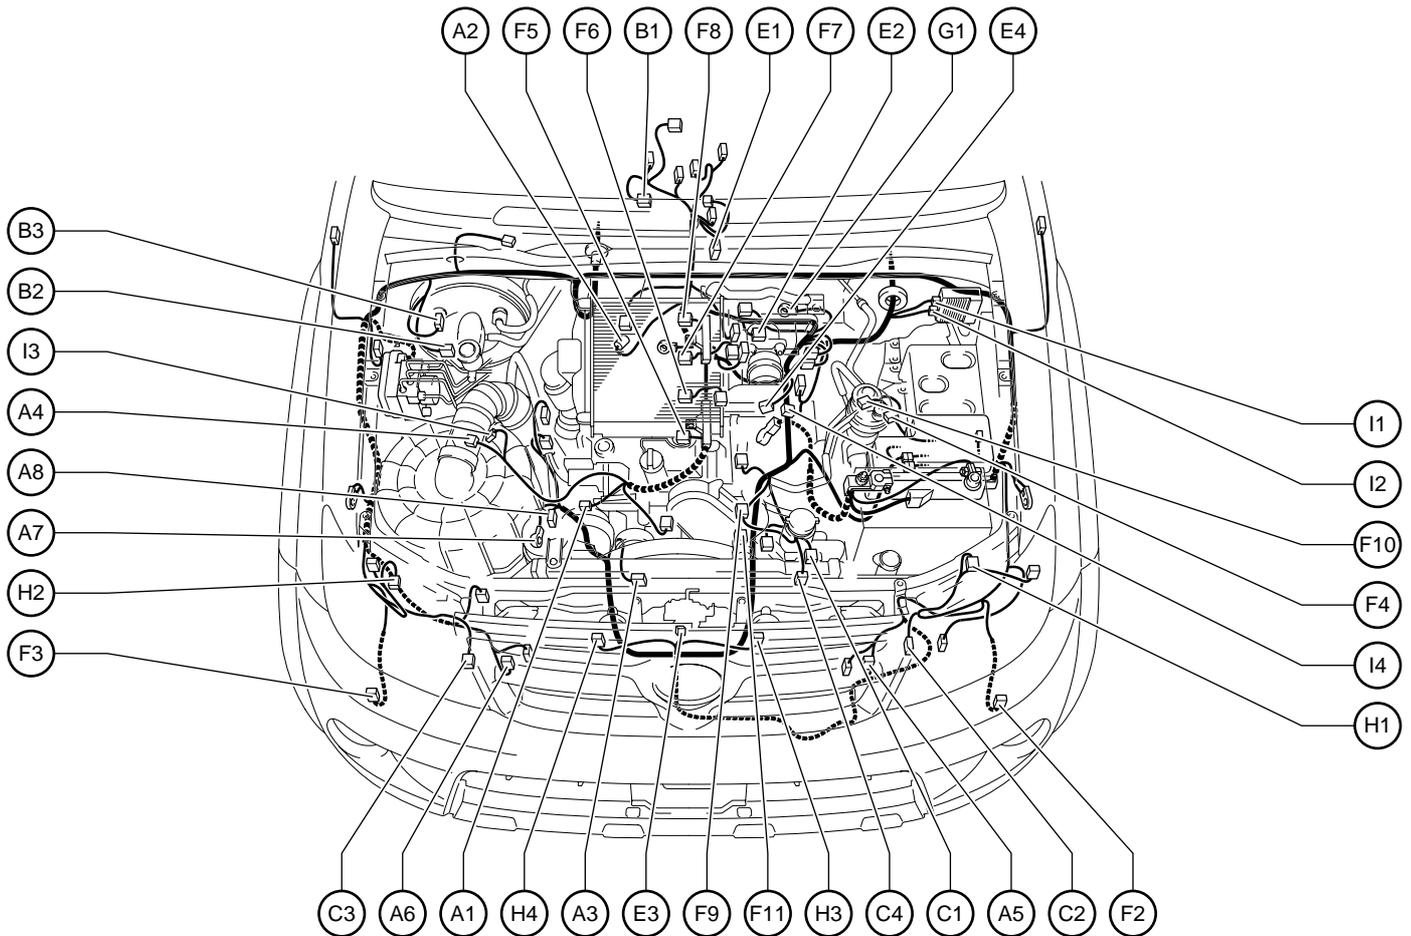

- 👁 A 1 A/C Compressor
- 👁 A 2 A/T Fluid Temp. Sensor
- 👁 A 3 ADD Actuator
- 👁 A 4 Air Flow Meter
- 👁 A 5 Airbag Sensor (Front LH)
- 👁 A 6 Airbag Sensor (Front RH)
- 👁 A 7 Alternator
- 👁 A 8 Alternator
  
- 👁 B 1 Back-Up Lamp SW
- 👁 B 2 Brake Fluid Level Warning SW
- 👁 B 3 Brake Vacuum Warning SW
  
- 👁 C 1 Camshaft Position Sensor
- 👁 C 2 Clearance Lamp (Front LH)
- 👁 C 3 Clearance Lamp (Front RH)
- 👁 C 4 Crankshaft Position Sensor
  
- 👁 E 1 ECT Solenoid
- 👁 E 2 EGR Valve Position Sensor
- 👁 E 3 Engine Hood Courtesy SW
- 👁 E 4 Engine Oil Pressure Sensor
  
- 👁 F 2 Fog Lamp (Front LH)
- 👁 F 3 Fog Lamp (Front RH)
- 👁 F 4 Fuel Filter Warning SW
- 👁 F 5 Fuel Injector (No.1)
- 👁 F 6 Fuel Injector (No.2)
- 👁 F 7 Fuel Injector (No.3)
- 👁 F 8 Fuel Injector (No.4)
- 👁 F 9 Fuel Pressure Sensor
- 👁 F 10 Fuel Sedimenter Level Warning SW
- 👁 F 11 Fuel Temp. Sensor
  
- 👁 G 1 Glow Plug
  
- 👁 H 1 Headlamp (LH)
- 👁 H 2 Headlamp (RH)
- 👁 H 3 Horn (High)
- 👁 H 4 Horn (Low)
  
- 👁 I 1 Injector Driver (EDU)
- 👁 I 2 Injector Driver (EDU)
- 👁 I 3 Inlet Air Temp. Sensor (Air Cleaner)
- 👁 I 4 Inlet Air Temp. Sensor (Inter Cooler)

**Position of Parts in Engine Compartment**

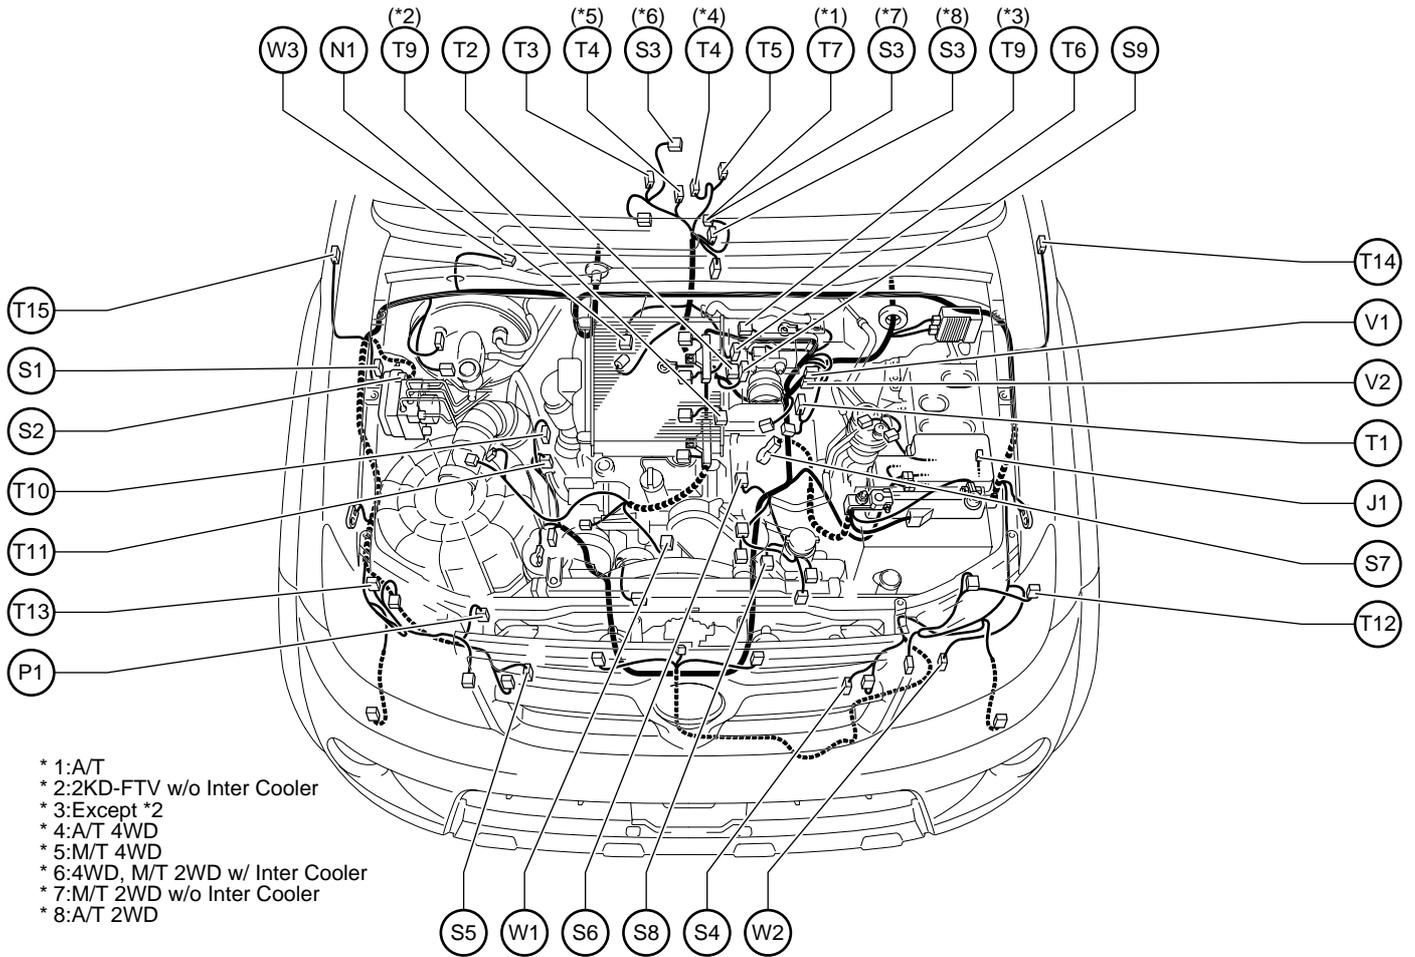

\* 1:A/T  
 \* 2:2KD-FTV w/o Inter Cooler  
 \* 3:Except \*2  
 \* 4:A/T 4WD  
 \* 5:M/T 4WD  
 \* 6:4WD, M/T 2WD w/ Inter Cooler  
 \* 7:M/T 2WD w/o Inter Cooler  
 \* 8:A/T 2WD

- 👁 J 1 Junction Connector
- 👁 N 1 Neutral Start SW
- 👁 P 1 Pressure SW
- 👁 S 1 Security Horn
- 👁 S 2 Skid Control ECU with Actuator
- 👁 S 3 Speed Sensor
- 👁 S 4 Speed Sensor (Front LH)
- 👁 S 5 Speed Sensor (Front RH)
- 👁 S 6 Starter
- 👁 S 7 Starter
- 👁 S 8 Suction Control Valve
- 👁 S 9 Swirl Control Valve
- 👁 T 1 Throttle Body Assembly
- 👁 T 2 Throttle Body Assembly
- 👁 T 3 Transfer Indicator SW (4WD Position)
- 👁 T 4 Transfer Indicator SW (L4 Position)
- 👁 T 5 Transfer Indicator SW (Neutral Position)
- 👁 T 6 Transmission Revolution Sensor (Input)
- 👁 T 7 Transmission Revolution Sensor (Output)
- 👁 T 9 Turbo Pressure Sensor
- 👁 T 10 Turbocharger Variable Nozzle Motor
- 👁 T 11 Turbocharger Variable Nozzle Sensor
- 👁 T 12 Turn Signal Lamp (Front LH)
- 👁 T 13 Turn Signal Lamp (Front RH)
- 👁 T 14 Turn Signal Lamp (Front Side LH)
- 👁 T 15 Turn Signal Lamp (Front Side RH)
- 👁 V 1 VRV (EGR)
- 👁 V 2 VSV (EGR Cut Valve)
- 👁 W 1 Water Temp. Sensor
- 👁 W 2 Windshield Washer Motor
- 👁 W 3 Windshield Wiper Motor