


Front Fog Light

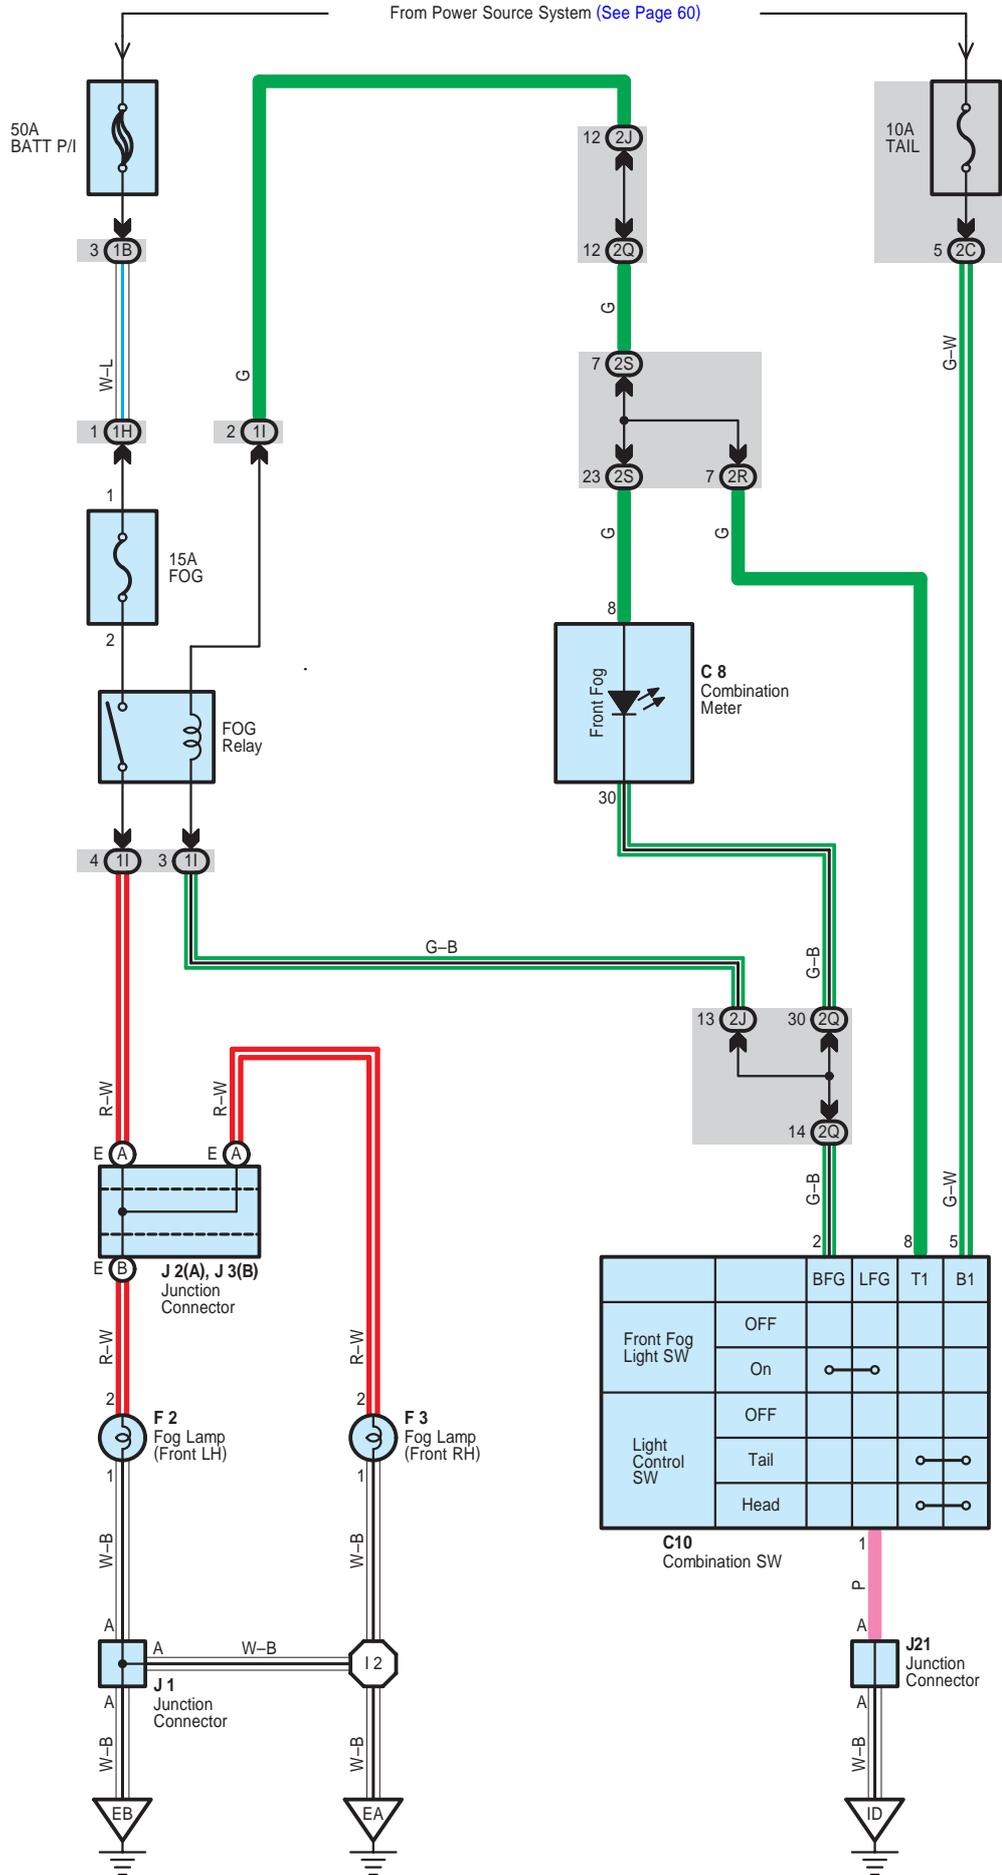

Service Hints

F2, F3 Fog Lamp (Front LH), (Front RH)

2-Ground : Approx. 12 volts with the light control SW at TAIL or HEAD position, dimmer SW at LOW position and front fog light SW at ON position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	38	F3	36	J3 B	38
C10	38	J1	37	J21	38
F2	36	J2 A	38		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H	24	
1I		
2C	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2J	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2Q	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2R		
2S		

▽ : Ground Points

Code	See Page	Ground Points Location
EA	46	Right Side of the Fender Apron
EB	46	Left Side of the Fender Apron
ID	48	Instrument Panel Reinforcement Center

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	50	Engine Wire			