


Headlight

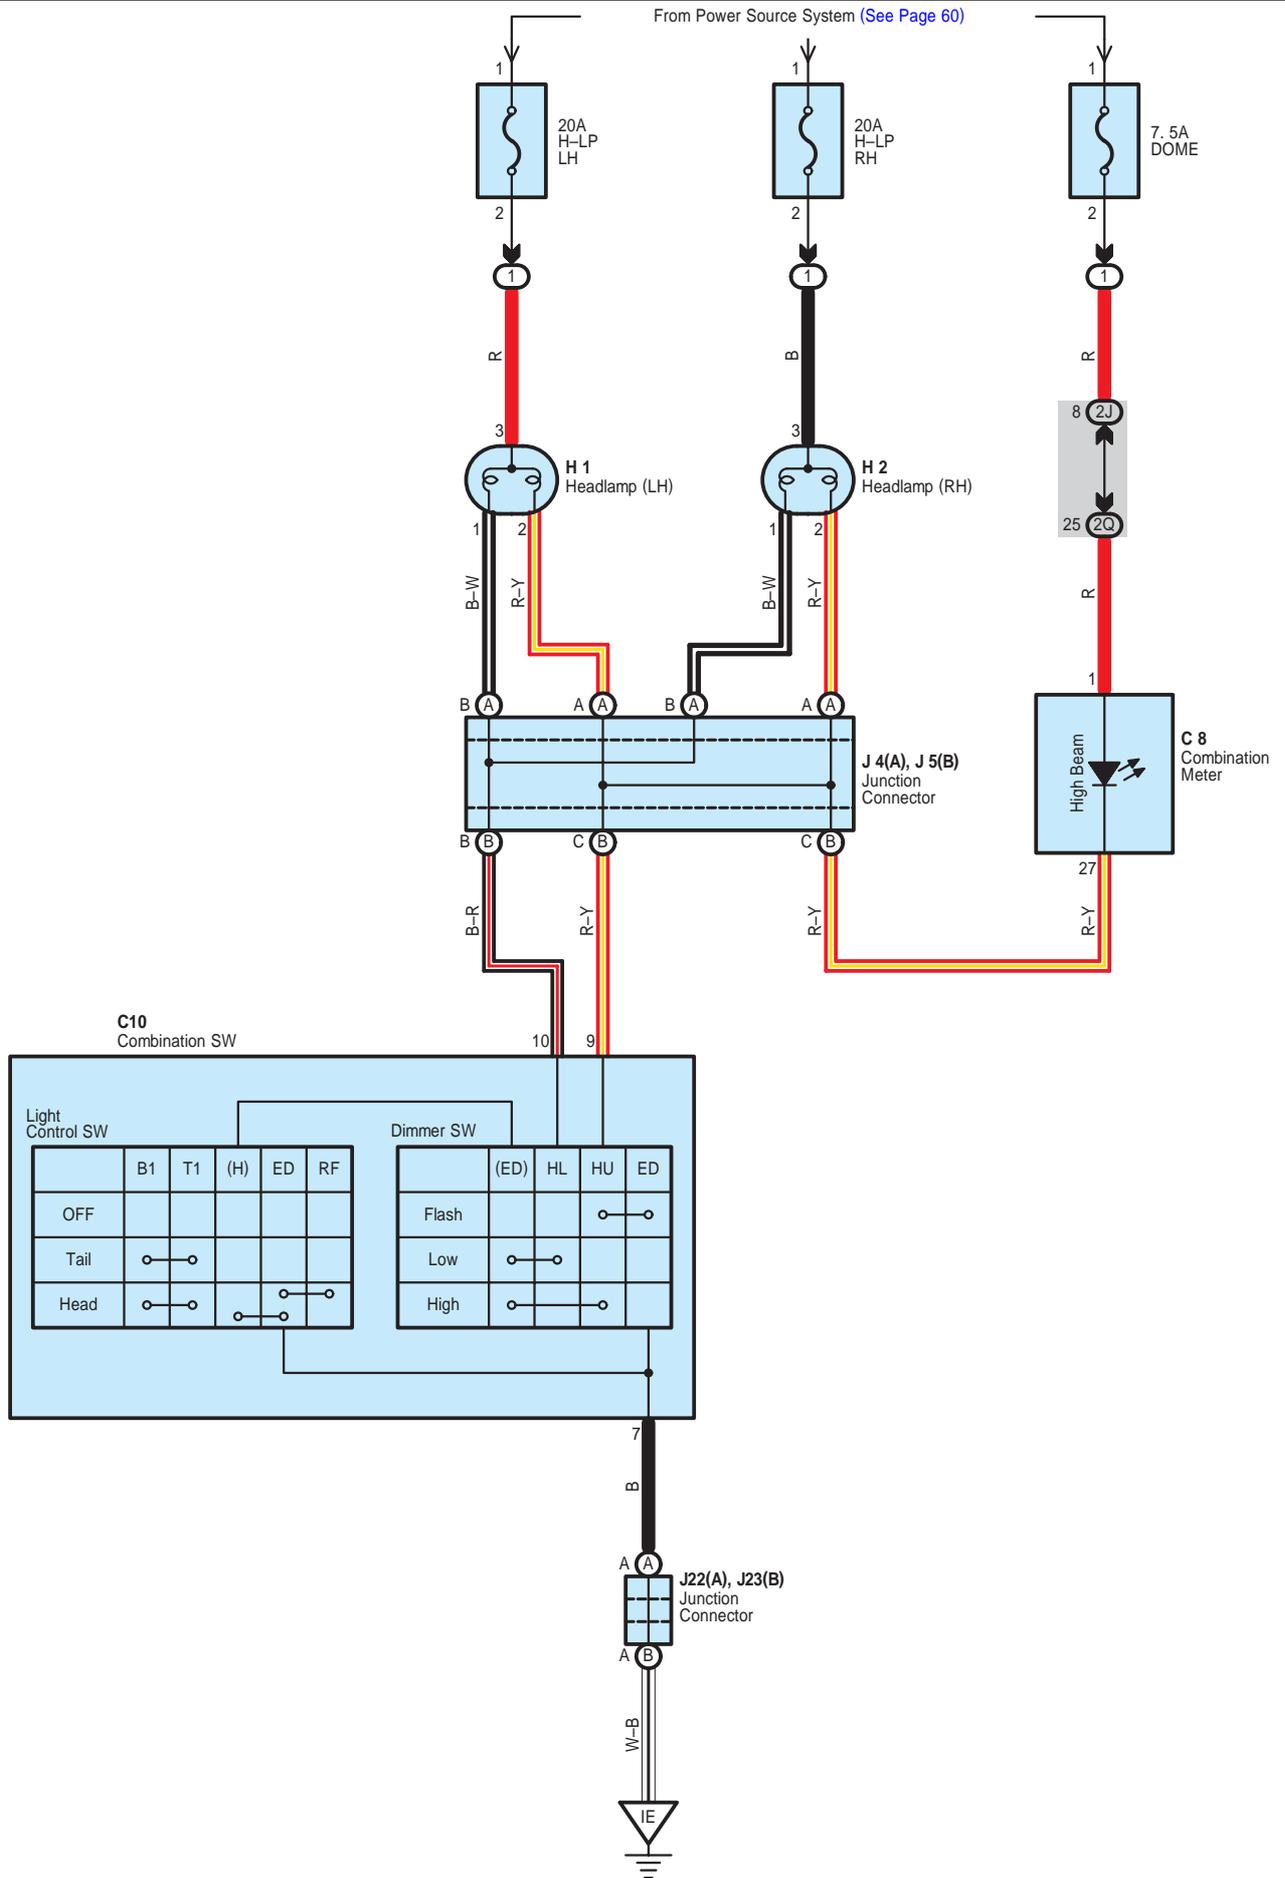

Service Hints

C10 Combination SW

10-7 : Continuity with the dimmer SW at LOW position and the light control SW at HEAD position

9-7 : Continuity with the dimmer SW at FLASH position or the dimmer SW at HIGH position and the light control SW at HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	38	H2	36	J22	A 38
C10	38	J4	A 38	J23	B 38
H1	36	J5	B 38		

□ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2J	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2Q	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	48	Instrument Panel Reinforcement RH