



Interior Light

From Power Source System (See Page 60)

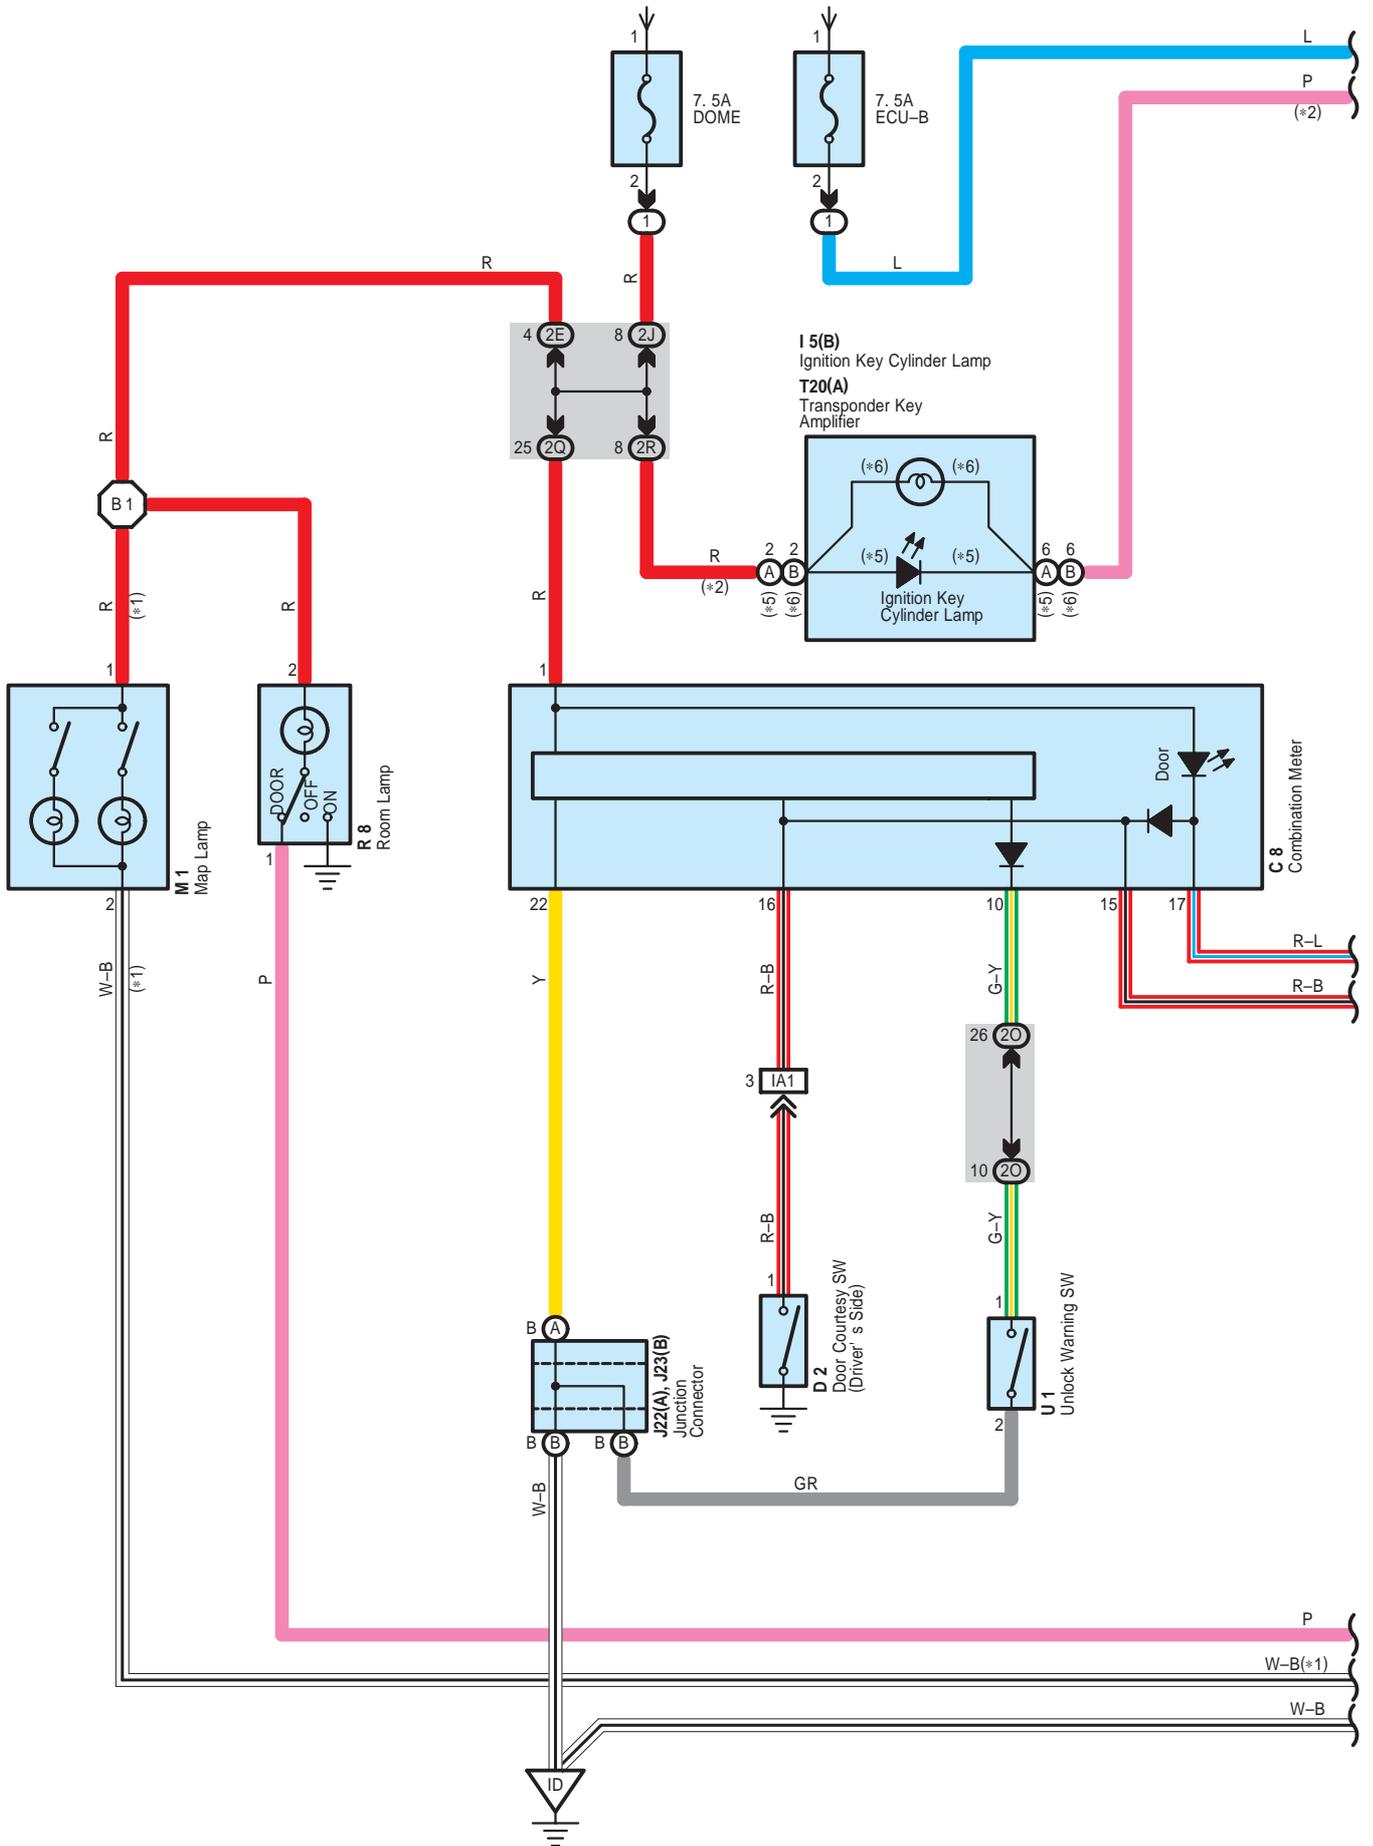

- * 1 : w/ Map Lamp
- * 2 : w/ Ignition Key Cylinder Lamp
- * 3 : Double Cab
- * 4 : Except *3
- * 5 : w/ Engine Immobilizer System
- * 6 : w/o Engine Immobilizer System

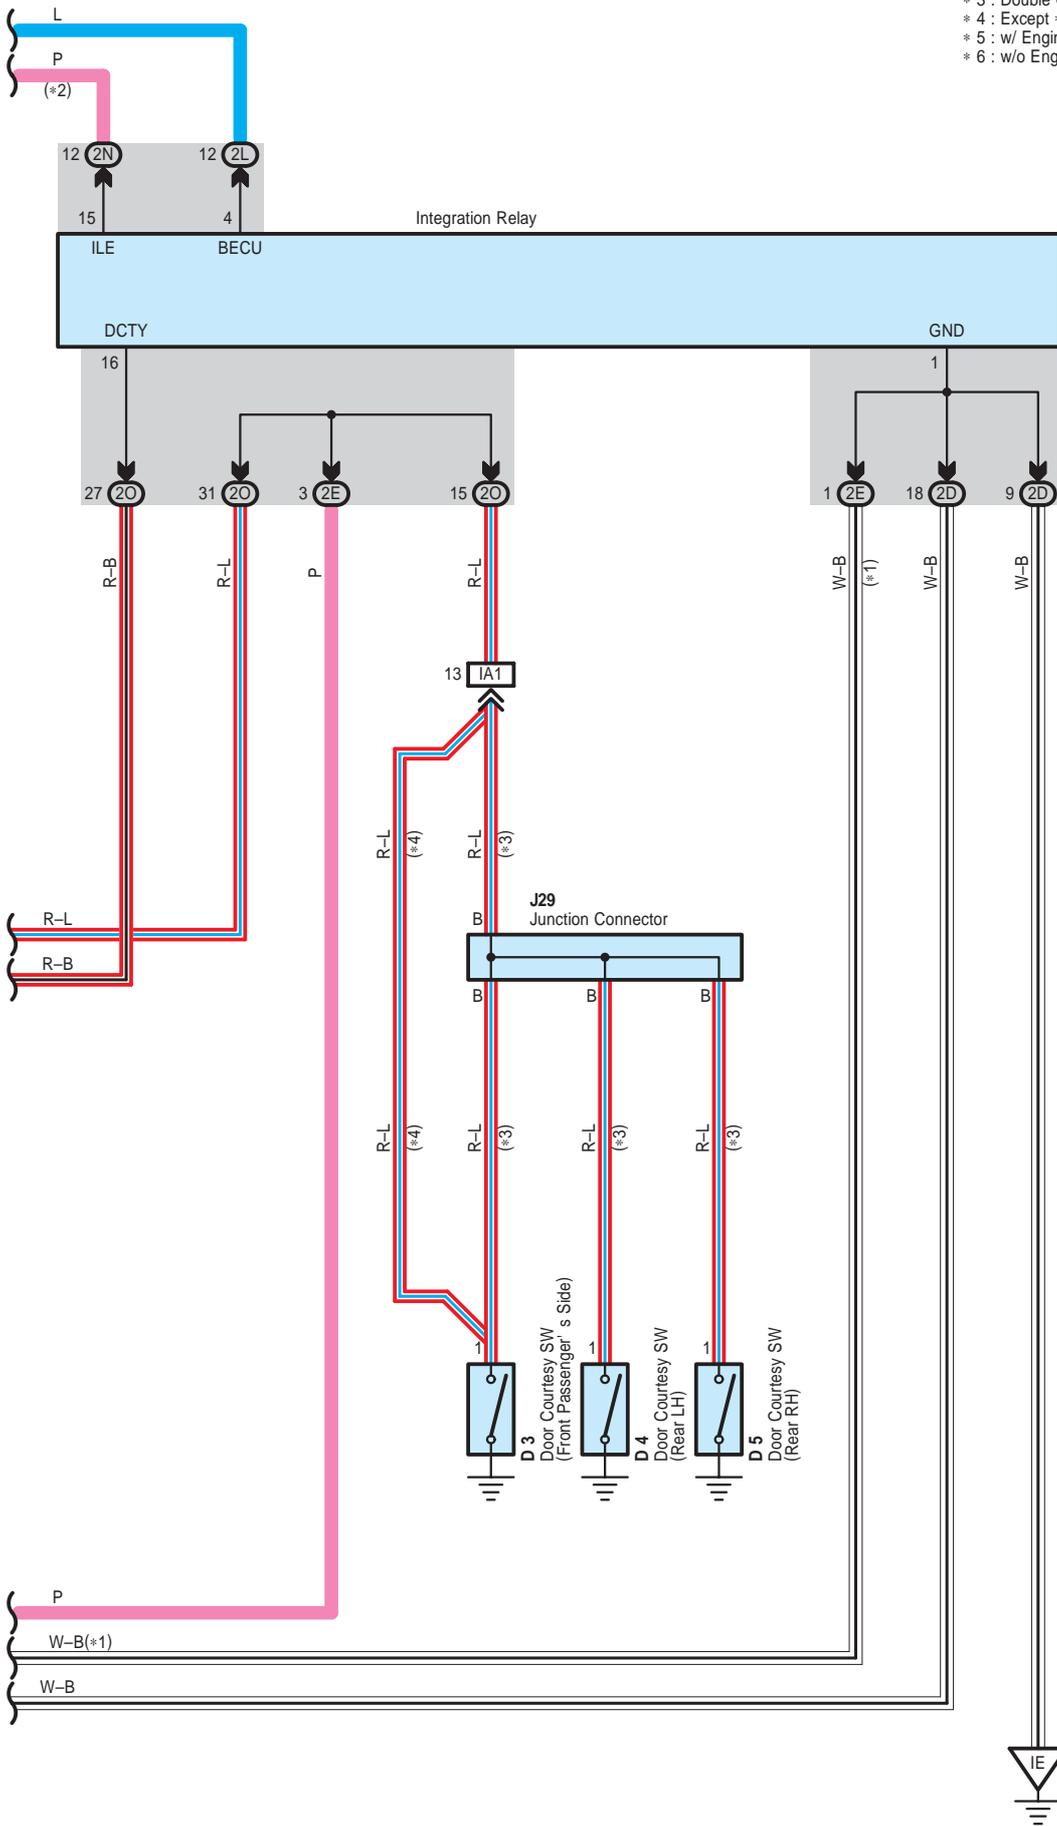

Interior Light

Service Hints

D2, D3, D4, D5 Door Courtesy SW (Driver's Side), (Front Passenger's Side), (Rear LH), (Rear RH)
 1-Ground : Continuity with each of the door open

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	38	D4	40 (Double Cab)	M1	42 (Extra Cab)
D2	40 (Double Cab)	D5	40 (Double Cab)	R8	41 (Double Cab)
	42 (Extra Cab)	I5	B 38		43 (Extra Cab)
	44 (Single Cab)	J22	A 38		45 (Single Cab)
D3	40 (Double Cab)	J23	B 38	T20	A 39
	42 (Extra Cab)	J29	38	U1	39
	44 (Single Cab)	M1	40 (Double Cab)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2E		
2J	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2L		
2N	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2O		
2Q		
2R		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	48	Instrument Panel Wire and Floor Wire (Left Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
ID	48	Instrument Panel Reinforcement Center
IE	48	Instrument Panel Reinforcement LH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	52 (Double Cab)	Roof Wire	B1	54 (Extra Cab)	Roof Wire