



Power Source

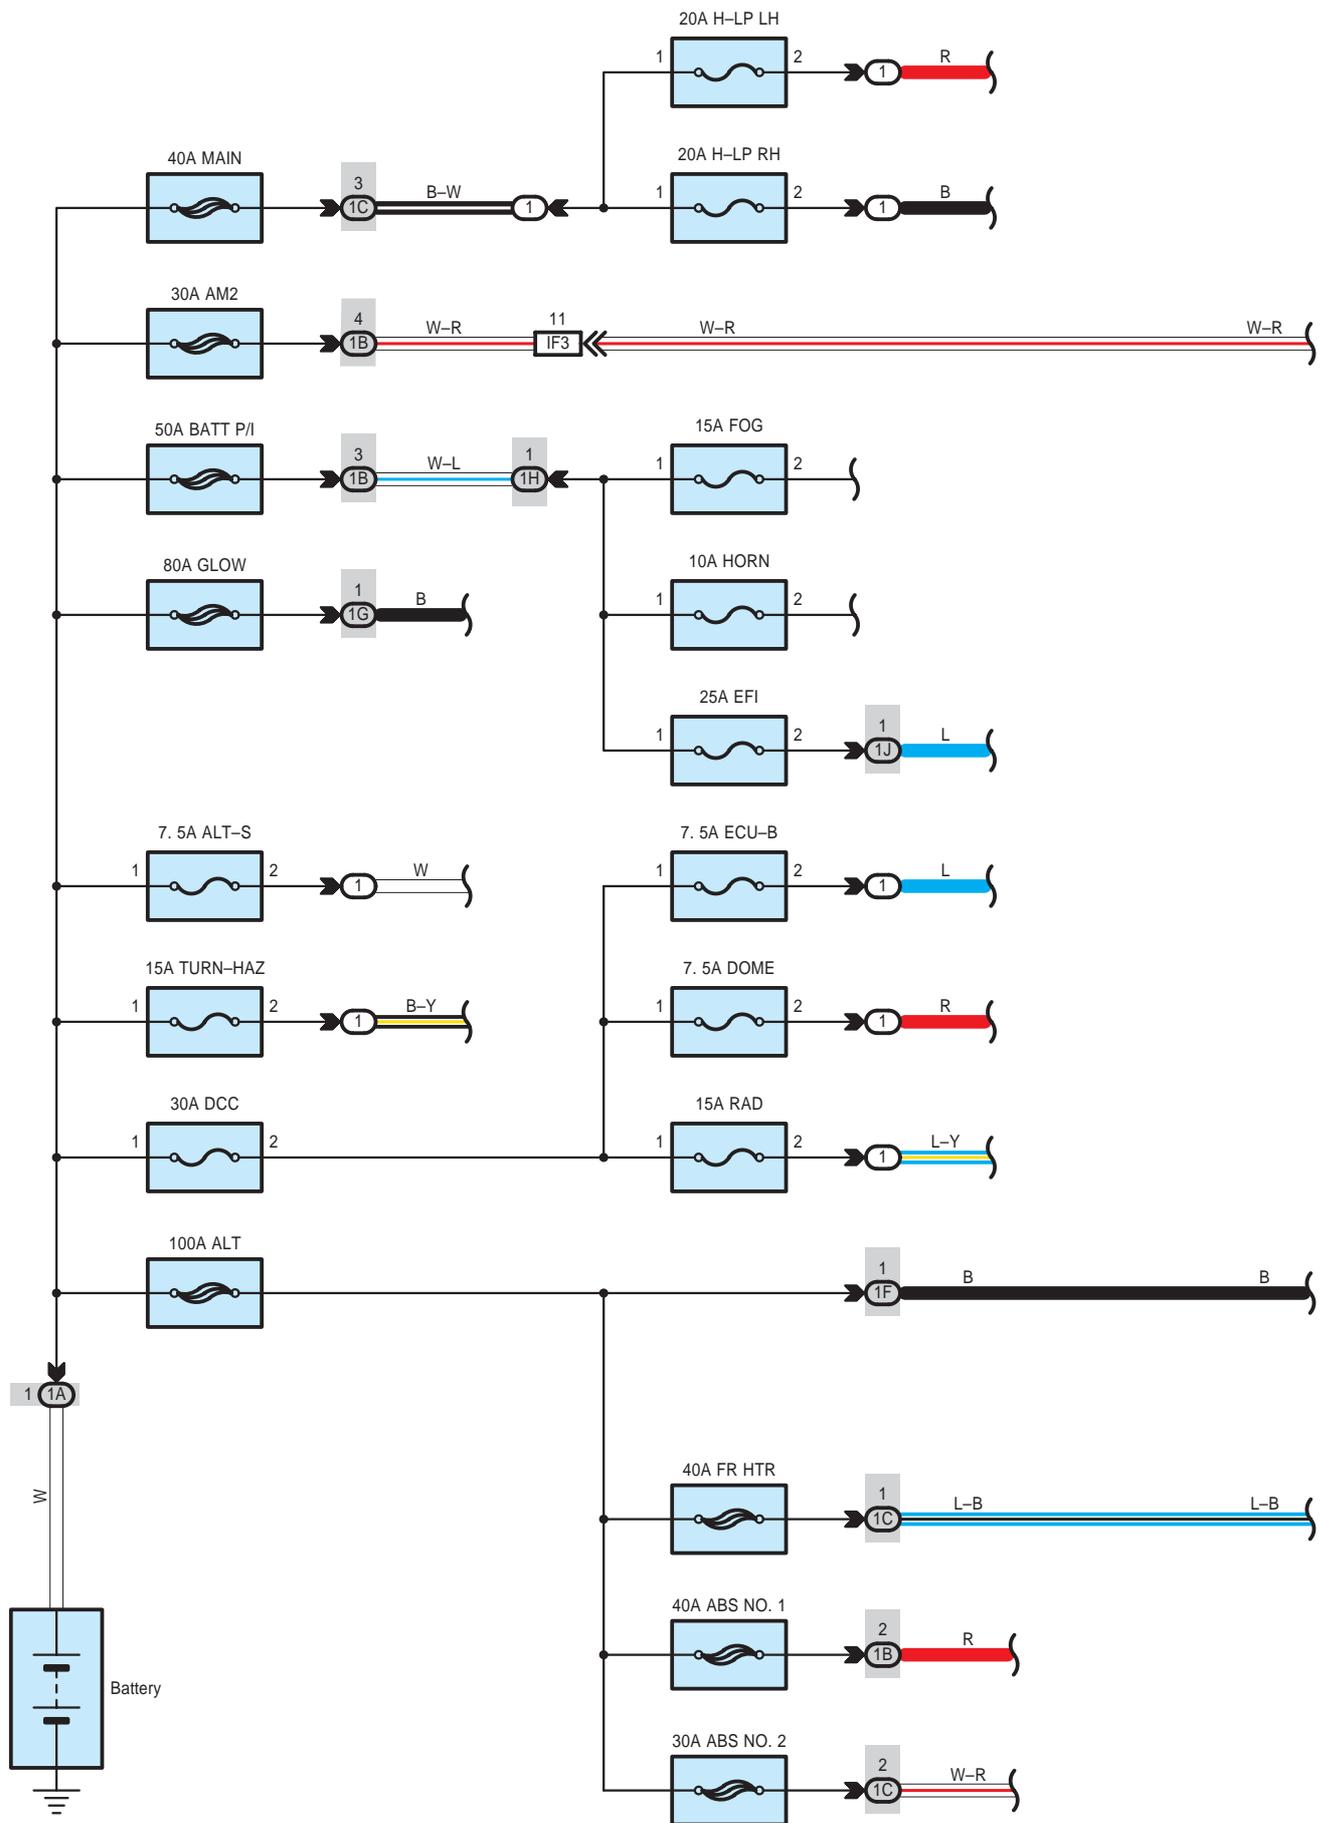

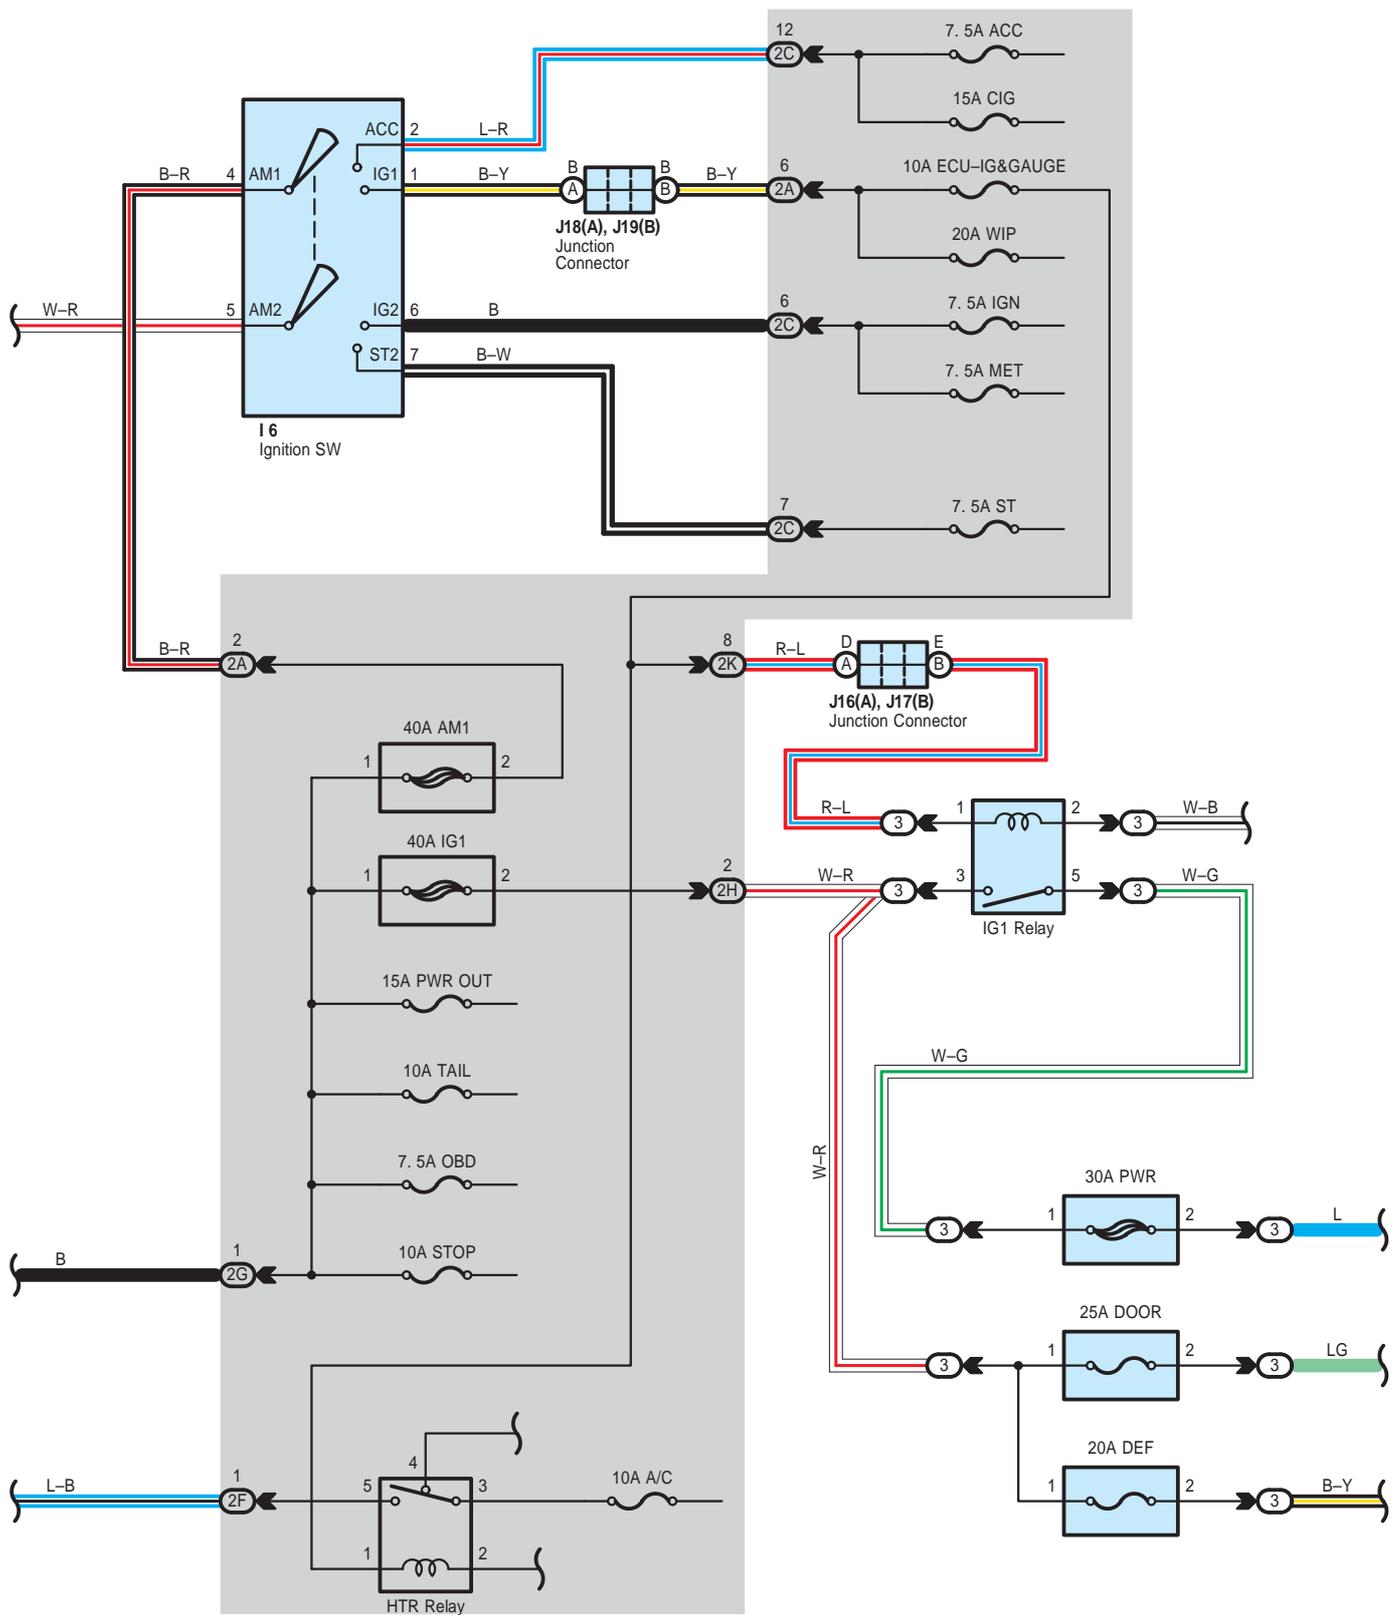

Power Source

Service Hints

I6 Ignition SW

- 4-2 : Closed with the ignition SW at ACC or ON position
- 4-1 : Closed with the ignition SW at ON or ST position
- 5-6 : Closed with the ignition SW at ON or ST position
- 5-7 : Closed with the ignition SW at ST position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page		
I6	38	J17	B	38	J19	B	38
J16	A	38	J18	A	38		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)
3	35	R/B No.3 (Cowl Side Panel LH)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B		
1C		
1F		
1G		
1H	24	
1J		
2A	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2C		
2F	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2G		
2H	28	Floor Wire and Driver Side J/B (Instrument Panel Brace RH)
2K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF3	50	Engine Room Main Wire and Instrument Panel Wire (Behind the Driver Side J/B)