

Service Hints**DEF Relay**

5-3 : Closed with the ignition SW at ON position and the rear window defogger SW at ON position

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
J15		38	J23	B	38	R7	B	41 (Double Cab)
J16	A	38	R3		39			43 (Extra Cab)
J17	B	38	R6	A			41 (Double Cab)	
J22	A	38					43 (Extra Cab)	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	35	R/B No.3 (Cowl Side Panel LH)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2K	28	Floor Wire and Driver Side J/B (Instrument Panel Brace RH)
2R	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	50	Instrument Panel Wire and Floor Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	48	Instrument Panel Reinforcement RH
IG	48	Cowl Side Panel LH