


Remote Control Mirror

From Power Source System (See Page 60)

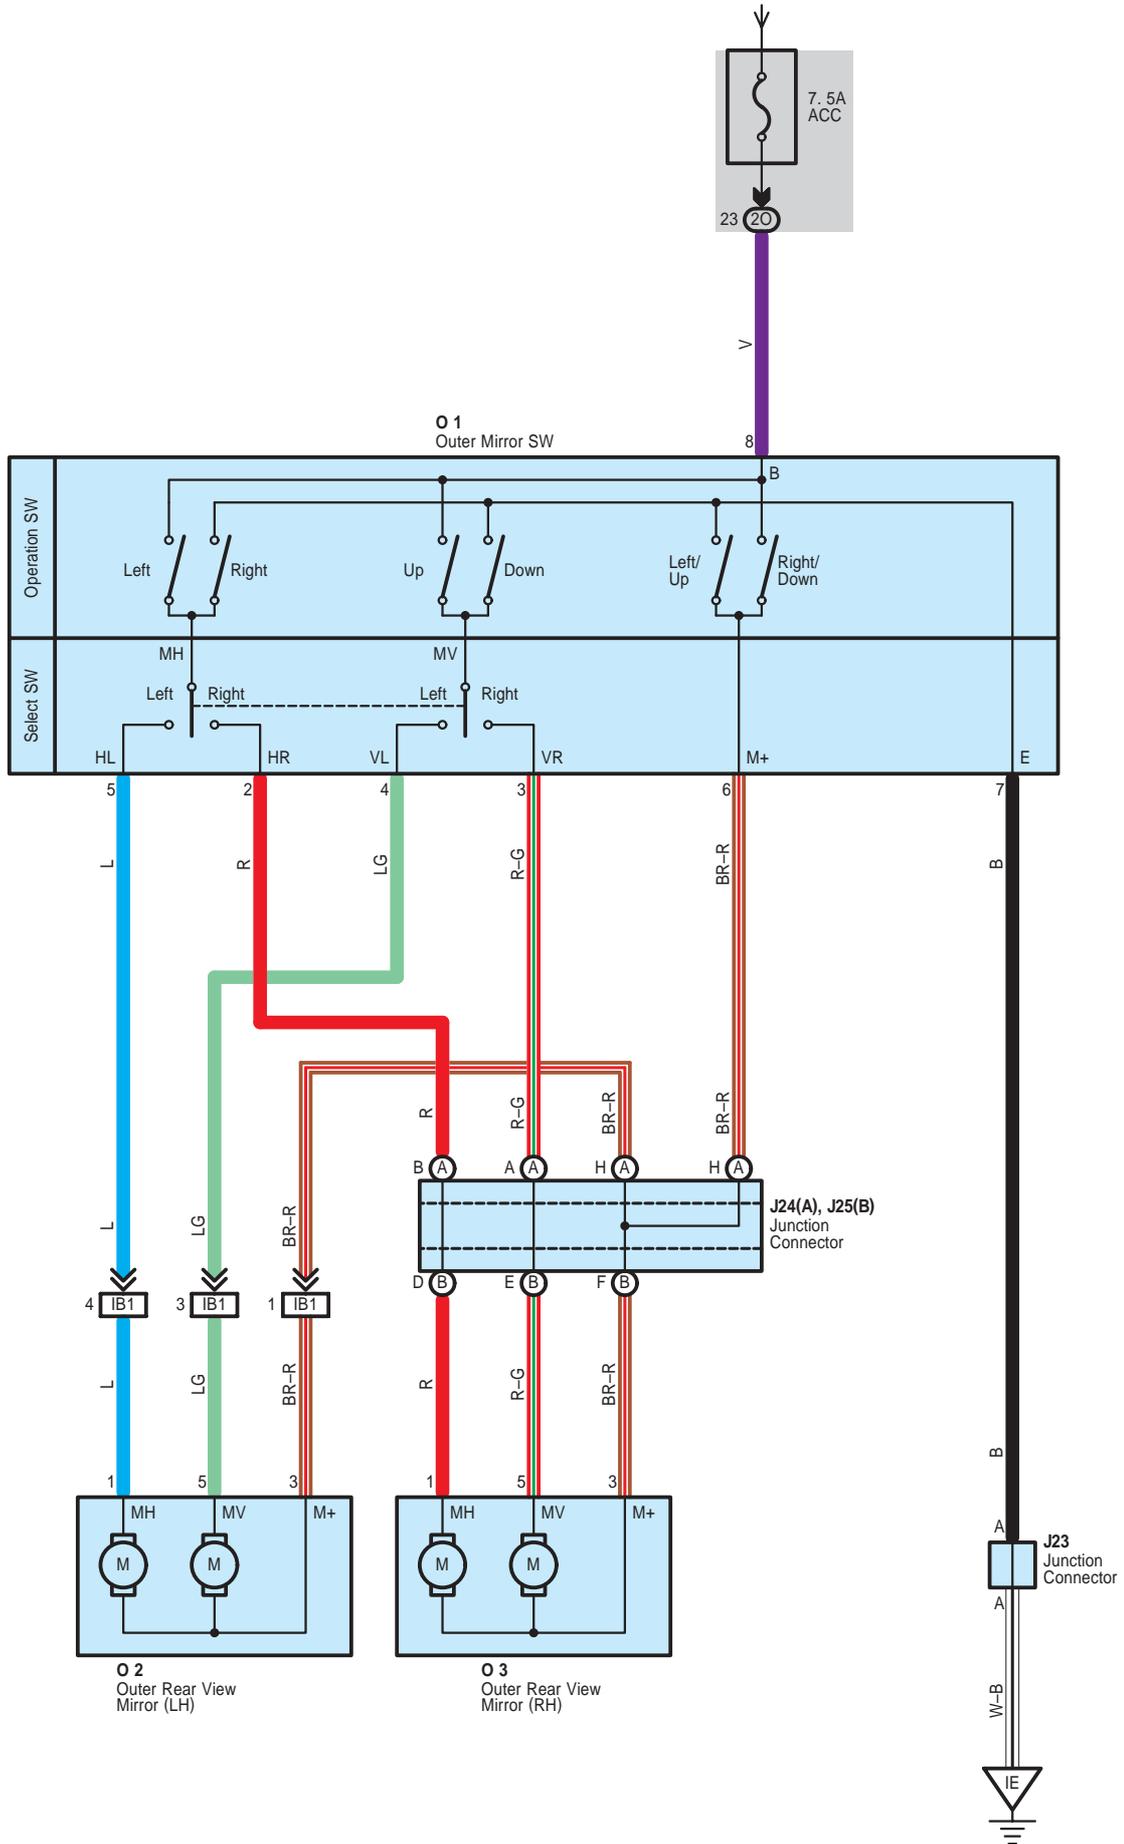

Service Hints

O1 Outer Mirror SW

8-Ground : Approx. 12 volts with the ignition SW at ACC or ON position

7-Ground : Always continuity

6-7 : Continuity with the operation SW at LEFT or UP position

8-6 : Continuity with the operation SW at RIGHT or DOWN position

: Parts Location

Code		See Page	Code		See Page	Code		See Page
J23		38	O2		40 (Double Cab)	O3		42 (Extra Cab)
J24	A	38			42 (Extra Cab)			44 (Single Cab)
J25	B	38			44 (Single Cab)			
O1		39	O3		40 (Double Cab)			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
20	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	48	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IE	48	Instrument Panel Reinforcement RH