


# Seat Belt Warning

From Power Source System (See Page 60)

- \* 1 : w/ Door Lock Control System
- \* 2 : w/o Door Lock Control System

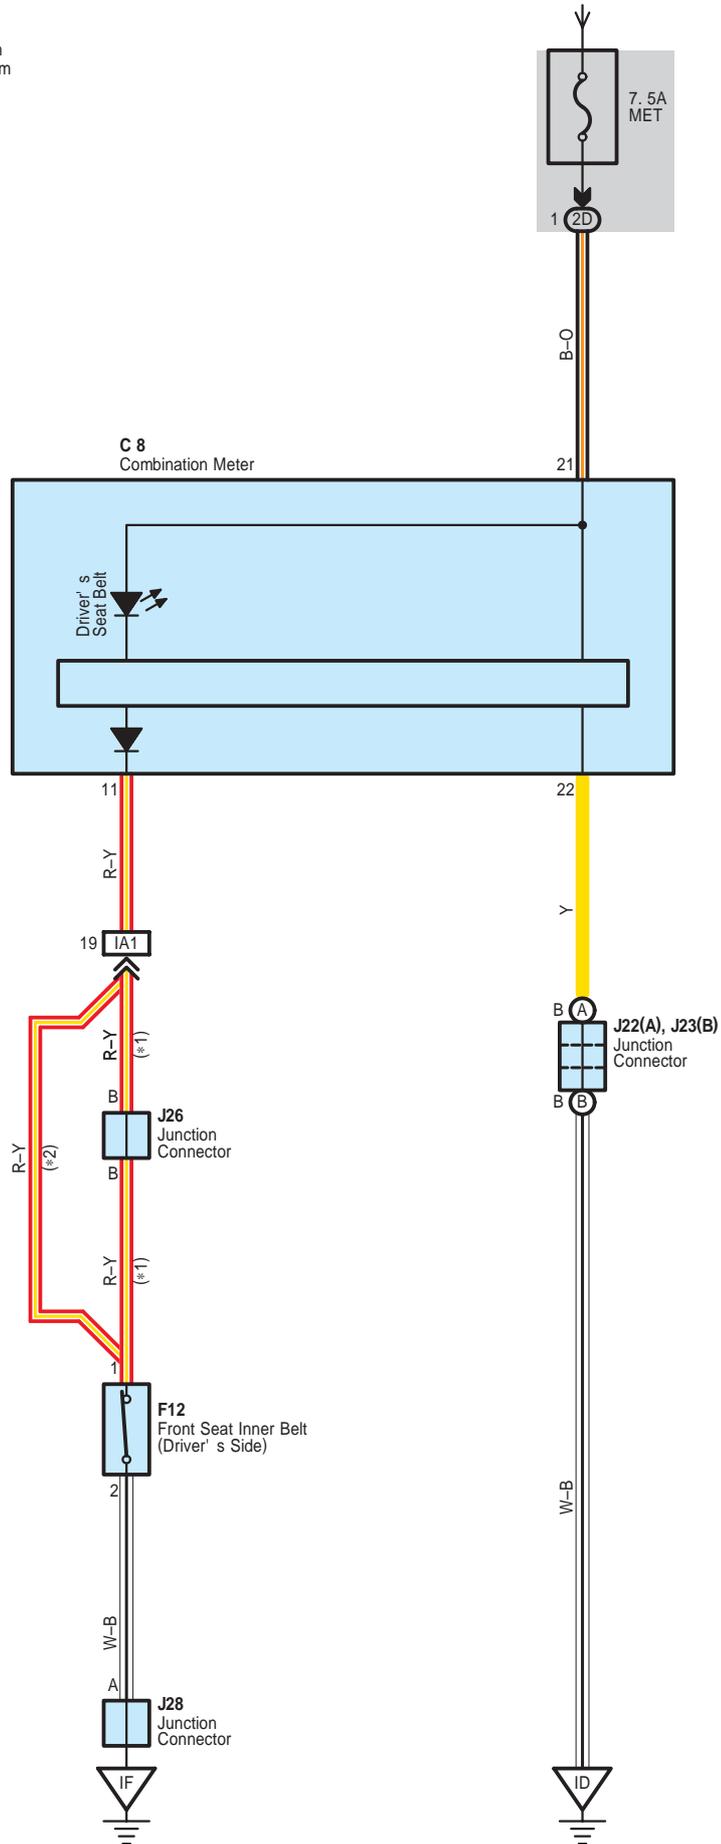

## System Outline

When the ignition SW is turned to ON position, the current from the MET fuse flows to TERMINAL 21 of the combination meter.

### Seat Belt Warning System

When the ignition SW turned on, a signal is input to the combination meter. To determine whether the driver has fastened the seat belt, a signal is input from the front seat inner belt (Driver's side) to TERMINAL 11 of the combination meter. When the seat belt is not fastened, the driver's seat belt warning light in the combination meter blinks.

## Service Hints

### F12 Front Seat Inner Belt (Driver's Side)

1-2 : Open with the driver's seat belt in use

### C8 Combination Meter

21-Ground : Approx. 12 volts with the ignition SW at ON position

22-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
C8	38	F12	44 (Single Cab)	J26	38	
F12	40 (Double Cab)	J22	A	38	J28	38
	42 (Extra Cab)	J23	B	38		

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	48	Instrument Panel Wire and Floor Wire (Left Kick Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
ID	48	Instrument Panel Reinforcement Center
IF	48	Cowl Side Panel RH