



Audio System

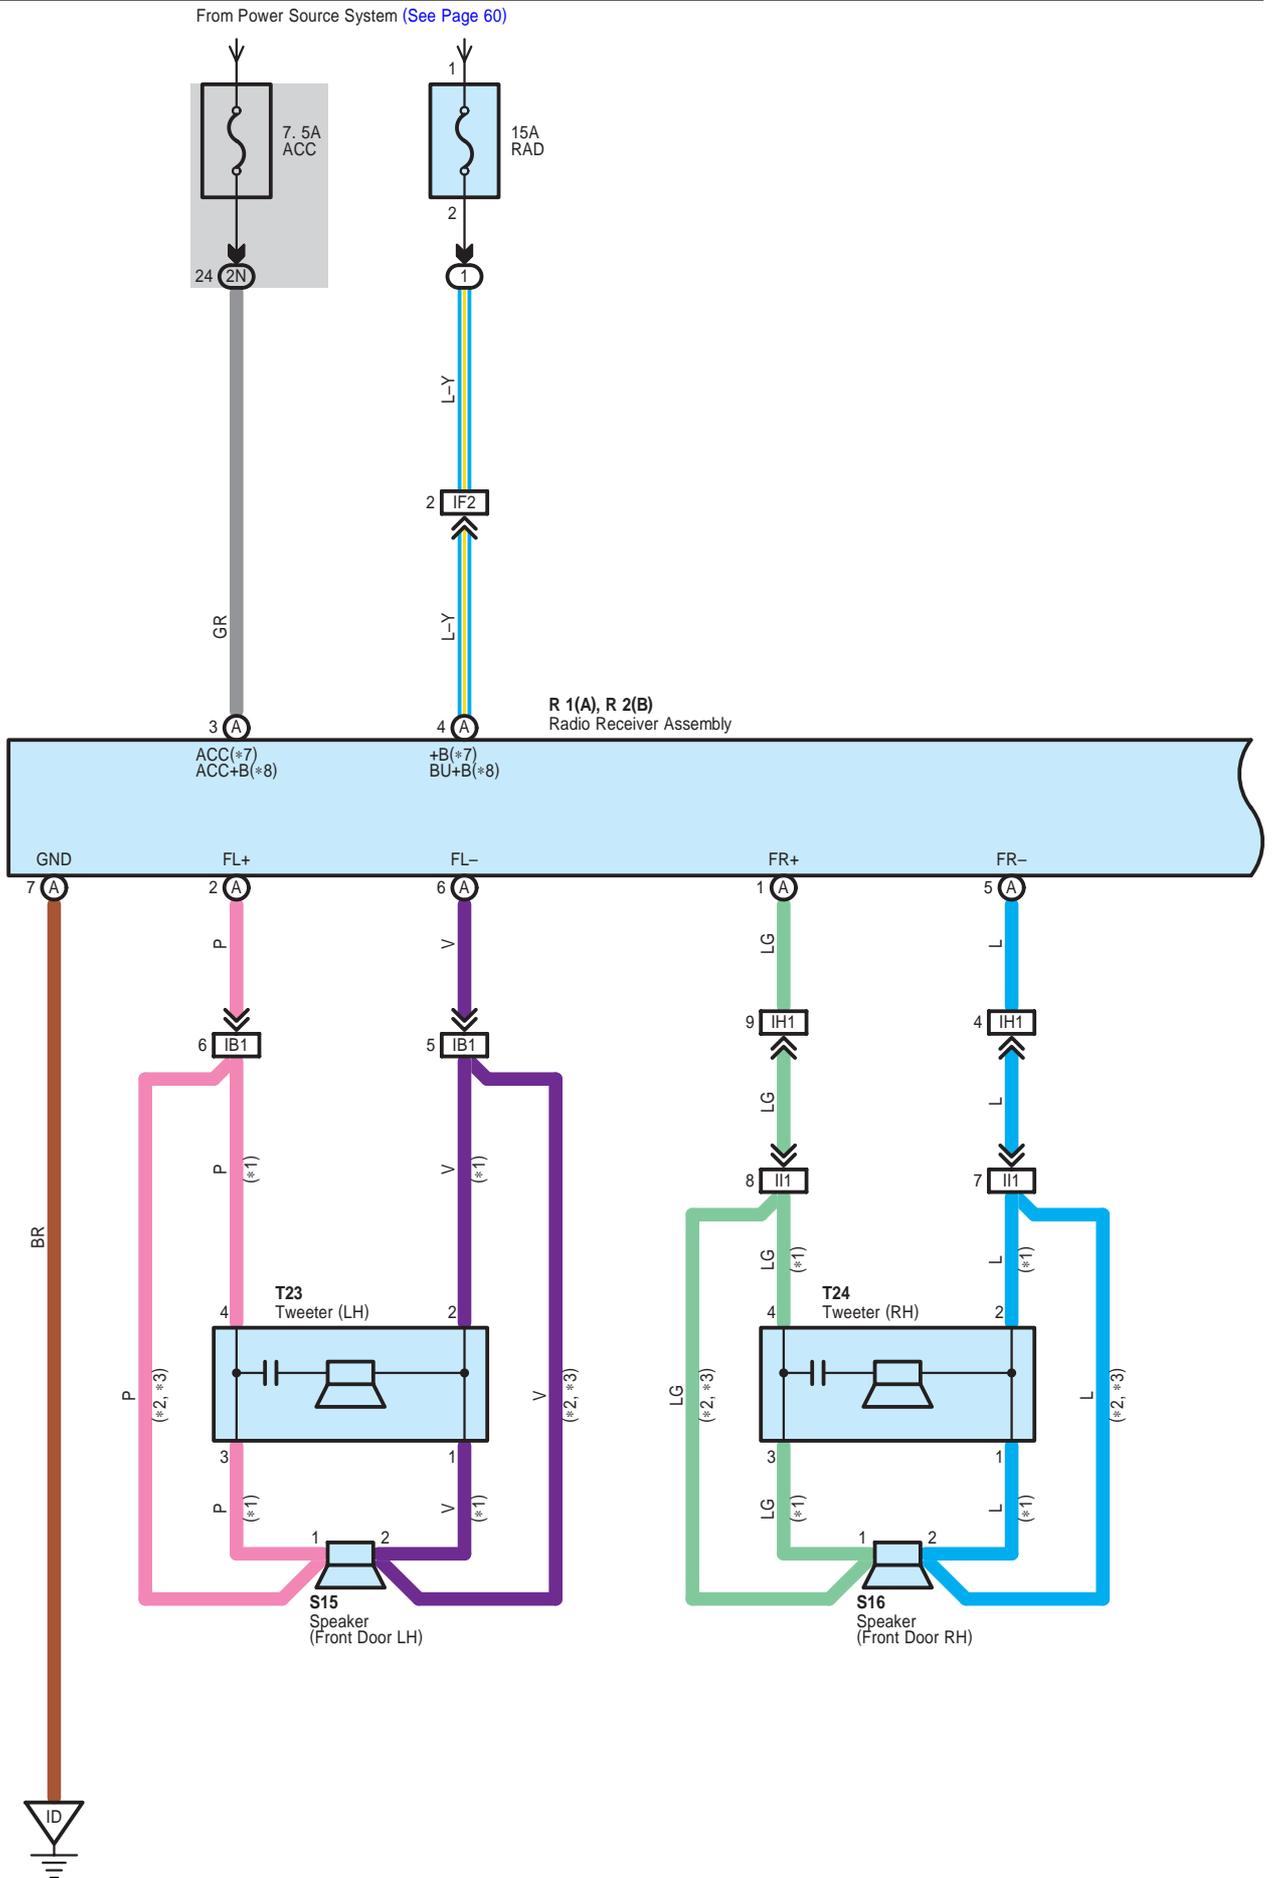

- * 1 : 6 Speaker
- * 2 : 4 Speaker
- * 3 : 2 Speaker
- * 4 : Double Cab
- * 5 : Extra Cab
- * 6 : 6 Speaker, 4 Speaker
- * 7 : w/ CD Player
- * 8 : w/o CD Player

R 1(A), R 2(B)
Radio Receiver Assembly

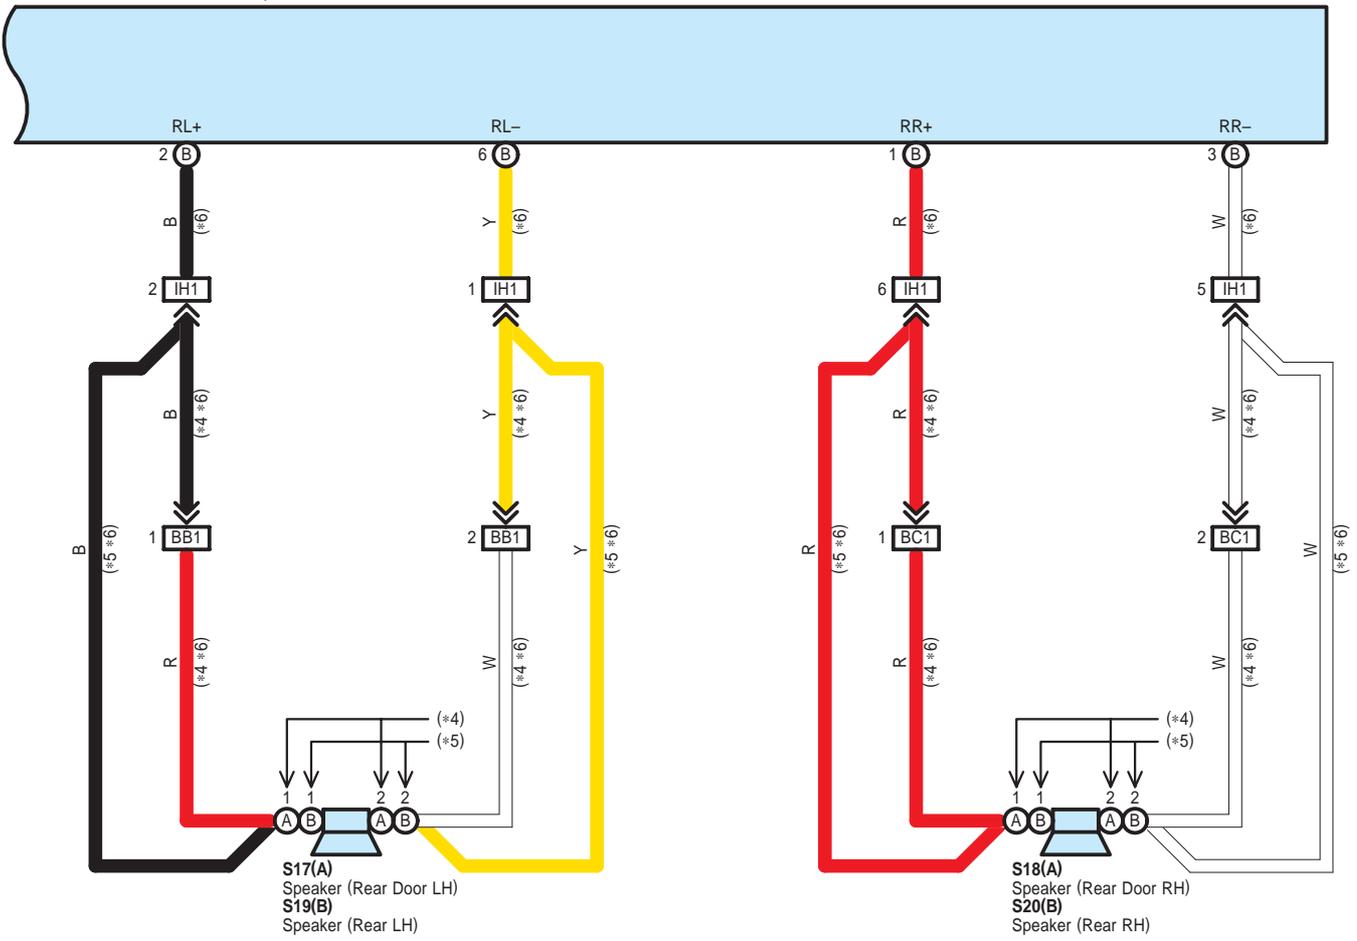

Audio System

Service Hints

R1 (A) Radio Receiver Assembly

- (A) 4-Ground : Always approx. 12 volts
- (A) 3-Ground : Approx. 12 volts with the ignition SW at ACC or ON position
- (A) 7-Ground : Always continuity

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
R1	A	39	S16		43 (Extra Cab)	T23	41 (Double Cab)
R2	B	39			45 (Single Cab)		43 (Extra Cab)
S15		41 (Double Cab)	S17	A	41 (Double Cab)	T24	41 (Double Cab)
		43 (Extra Cab)	S18	A	41 (Double Cab)		43 (Extra Cab)
		45 (Single Cab)	S19	B	43 (Extra Cab)		
S16		41 (Double Cab)	S20	B	43 (Extra Cab)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2N	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	48	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IF2	50	Engine Room Main Wire and Instrument Panel Wire (Behind the Driver Side J/B)
IH1	50	Instrument Panel Wire and Floor Wire (Right Kick Panel)
II1	50	Front Door RH Wire and Floor Wire (Right Kick Panel)
BB1	52 (Double Cab)	Rear Door No.1 Wire LH and Floor Wire (Center Pillar LH)
BC1	52 (Double Cab)	Rear Door No.1 Wire RH and Floor Wire (Center Pillar RH)

▽ : Ground Points

Code	See Page	Ground Points Location
ID	48	Instrument Panel Reinforcement Center