

Service Hints

S6 (A), S7 (B) Starter

Point closed with the neutral start SW at P or N position and the ignition SW at ST position (A/T)

Point closed with the ignition SW at ST position (M/T)

I6 Ignition SW

5-7 : Closed with the ignition SW at ST position

N1 Neutral Start SW

4-5 : Closed with the neutral start SW at P or N position

ST Relay

5-3 : Closed with the neutral start SW at P or N position and the ignition SW at ST position (A/T)

5-3 : Closed with the ignition SW at ST position (M/T)

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
I6		38	J23	B	38	S7	B	37
J11		38	N1		37	S12	B	39
J22	A	38	S6	A	37	T16	A	39

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B		
2C	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2O	29	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	46	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B and Engine Room J/B)
EA2		
ID2	48	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IF3	50	Engine Room Main Wire and Instrument Panel Wire (Behind the Driver Side J/B)

▽ : Ground Points

Code	See Page	Ground Points Location
ID	48	Instrument Panel Reinforcement Center