


Stop Light

From Power Source System (See Page 60)

* 1 : w/ Center Stop Lamp

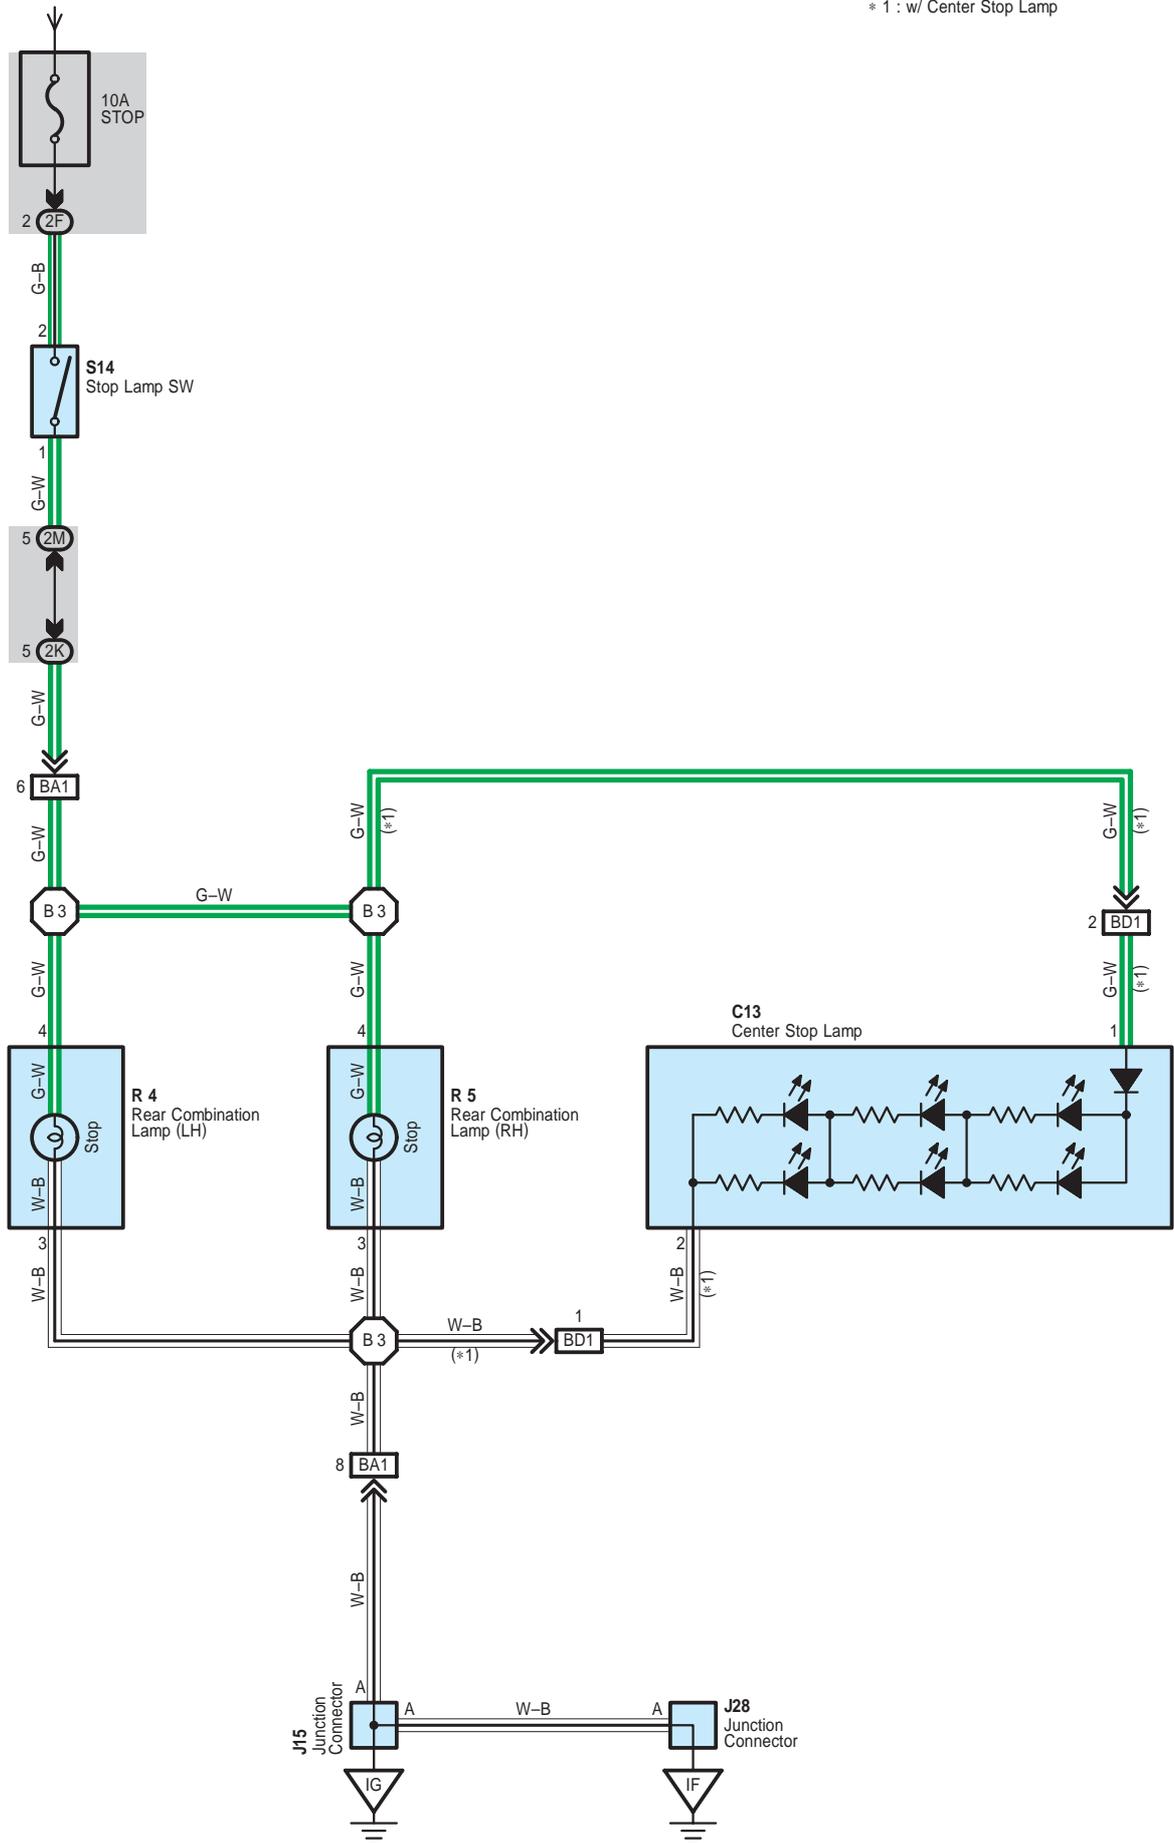

Service Hints

S14 Stop Lamp SW

2-1 : Closed with the brake pedal depressed

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C13	40 (Double Cab)	J28	38	R5	41 (Double Cab)
	42 (Extra Cab)	R4	41 (Double Cab)		43 (Extra Cab)
	44 (Single Cab)		43 (Extra Cab)		45 (Single Cab)
J15	38		45 (Single Cab)	S14	39

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2F	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2K	28	Floor Wire and Driver Side J/B (Instrument Panel Brace RH)
2M	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BA1	52 (Double Cab)	Frame Wire and Floor Wire (Under the Front Seat LH)
	54 (Extra Cab)	
	56 (Single Cab)	
BD1	52 (Double Cab)	Frame No.2 Wire and Frame Wire (Under the Back Panel LH)
	54 (Extra Cab)	
	56 (Single Cab)	

: Ground Points

Code	See Page	Ground Points Location
IF	48	Cowl Side Panel RH
IG	48	Cowl Side Panel LH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B3	52 (Double Cab)	Frame Wire	B3	56 (Single Cab)	Frame Wire
	54 (Extra Cab)				