


From Power Source System (See Page 60)



From Power Source System (See Page 60)

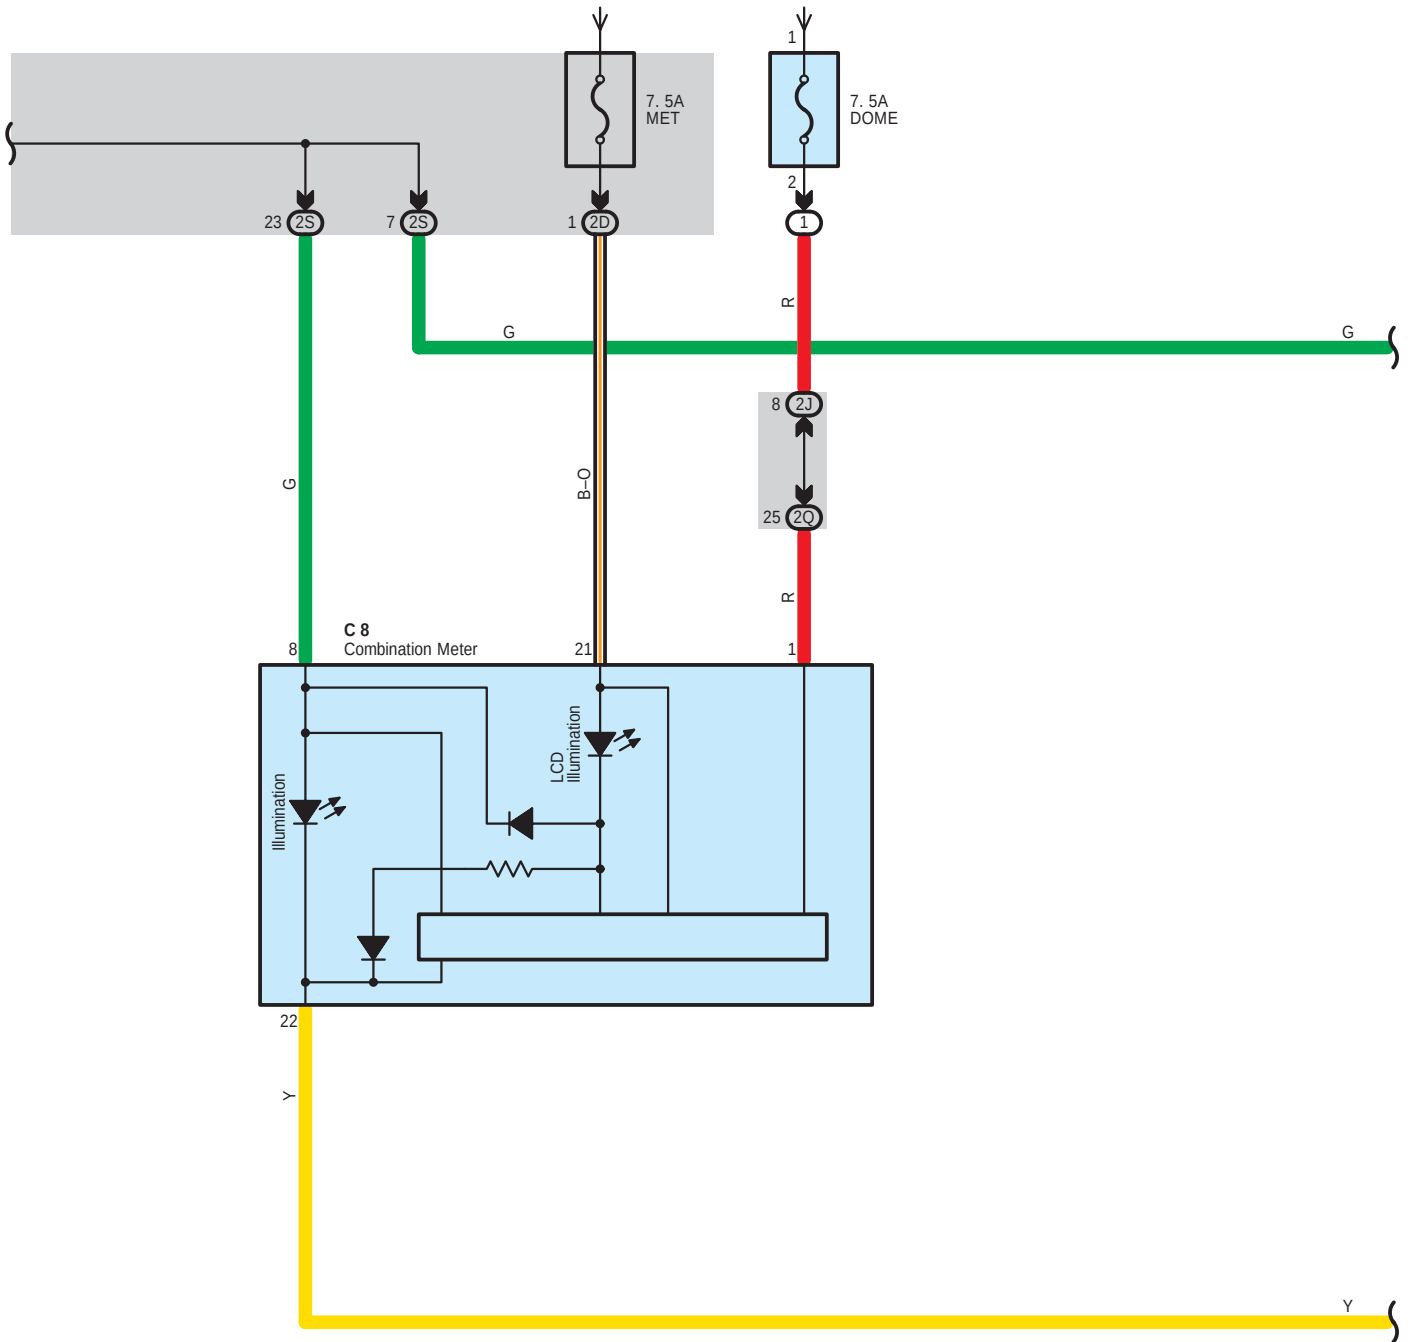



Service Hints

C10 Combination SW

5-8 : Continuity with the light control SW at HEAD or TAIL position

○ : Parts Location

Code	See Page	Code		See Page	Code	See Page
A12	38	J15		38	R1	39
A16	38	J21		38	R3	39
B6	38	J22	A	38	R4	41 (Double Cab)
C2	36	J23	B	38		43 (Extra Cab)
C3	36	L1		40 (Double Cab)		45 (Single Cab)
C6	38			42 (Extra Cab)	R5	41 (Double Cab)
C8	38			44 (Single Cab)		43 (Extra Cab)
C10	38	L2		40 (Double Cab)		45 (Single Cab)
H5	38			42 (Extra Cab)		
J1	37			44 (Single Cab)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2D		
2J	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2K	28	Floor Wire and Driver Side J/B (Instrument Panel Brace RH)
2L	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2M		
2P	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2Q		
2R		
2S		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BA1	52 (Double Cab)	Frame Wire and Floor Wire (Under the Front Seat LH)
	54 (Extra Cab)	
	56 (Single Cab)	

▽ : Ground Points

Code	See Page	Ground Points Location
EA	46	Right Side of the Fender Apron
EB	46	Left Side of the Fender Apron
ID	48	Instrument Panel Reinforcement Center
IE	48	Instrument Panel Reinforcement RH
IG	48	Cowl Side Panel LH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	50	Engine Room Main Wire	B3	54 (Extra Cab)	Frame Wire
B3	52 (Double Cab)	Frame Wire		56 (Single Cab)	