



Theft Deterrent

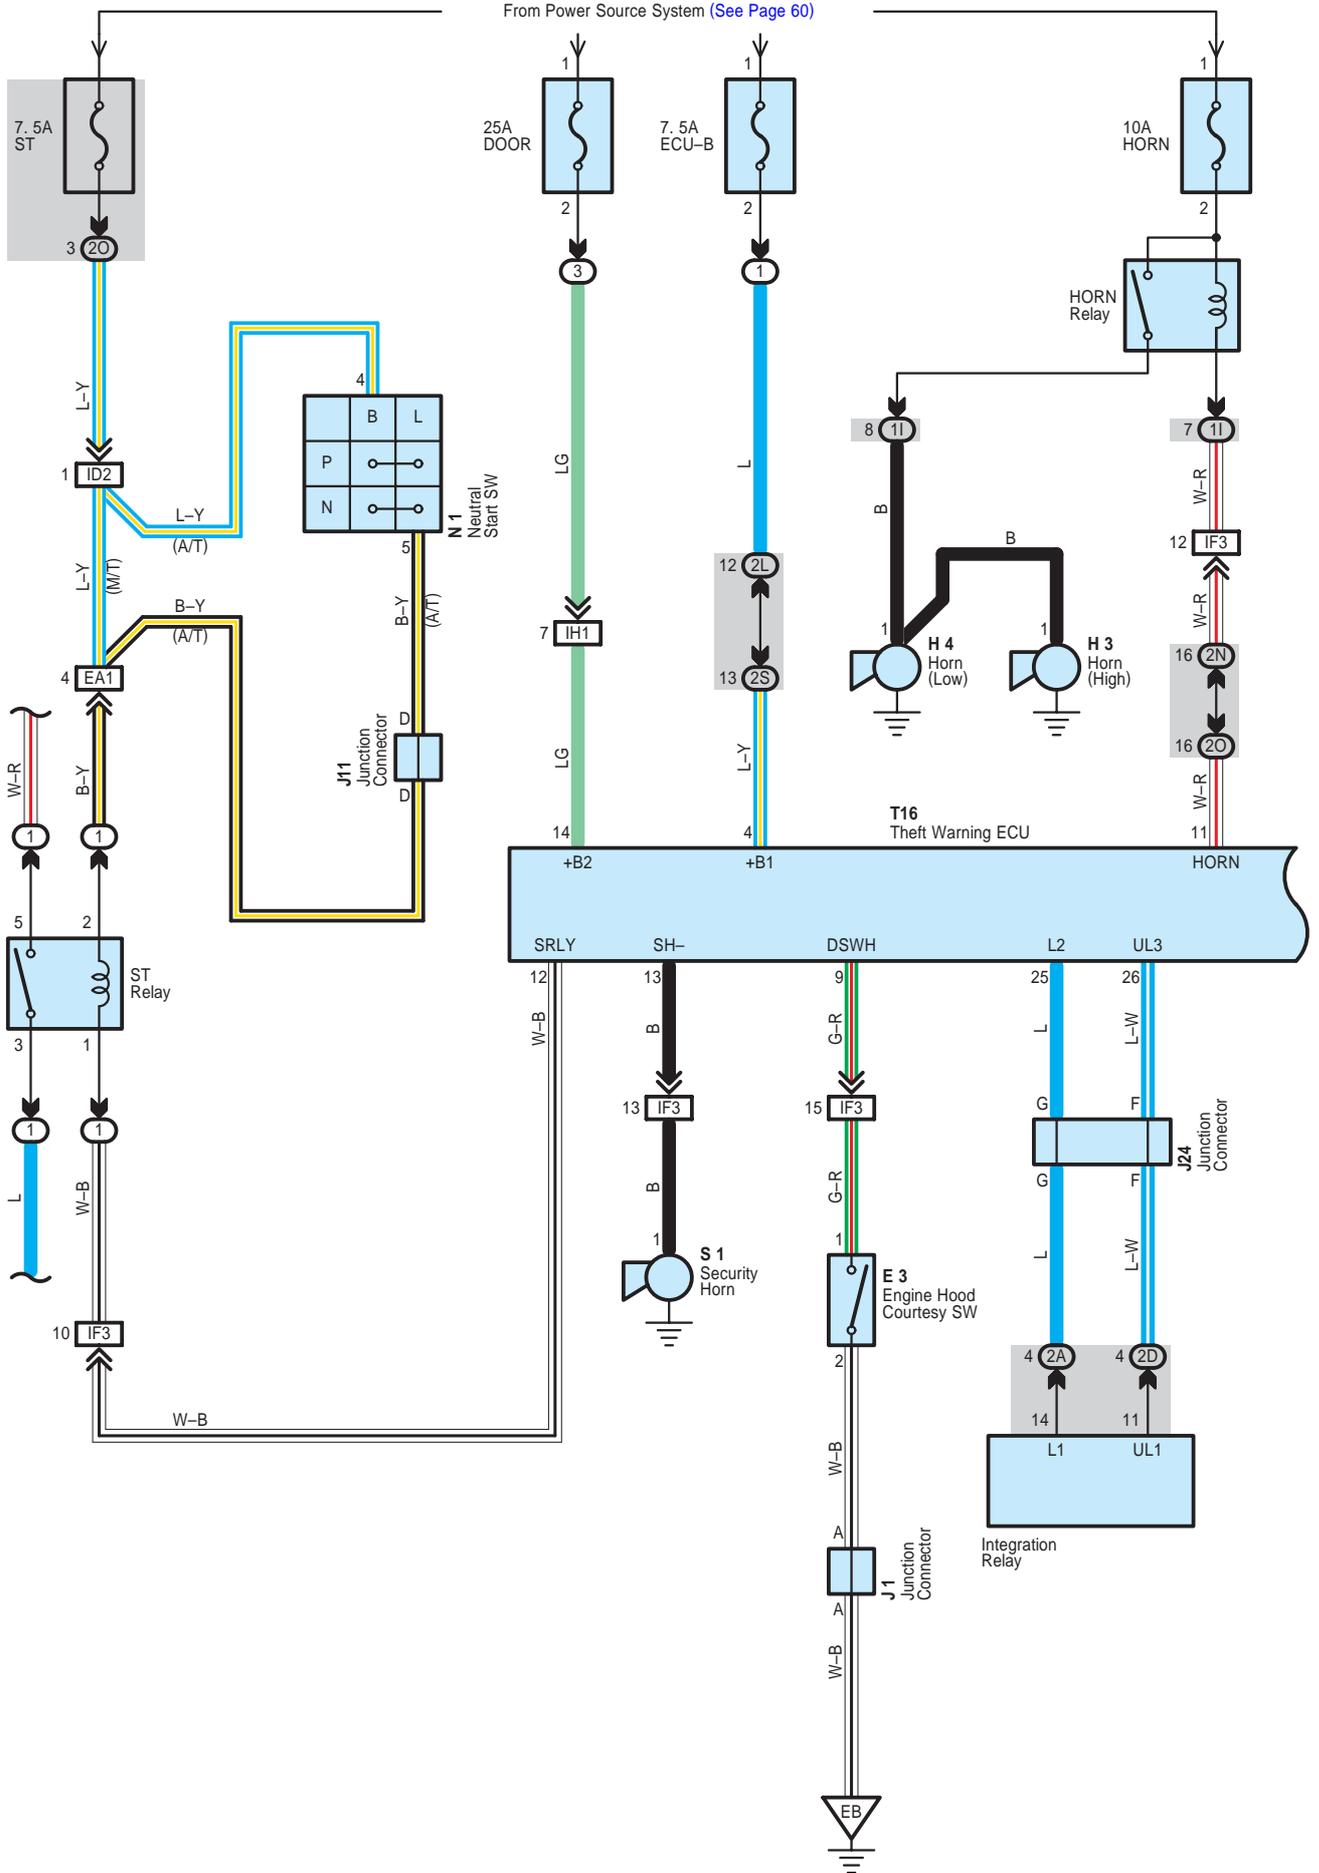


- * 1 : Double Cab
- * 2 : Extra Cab

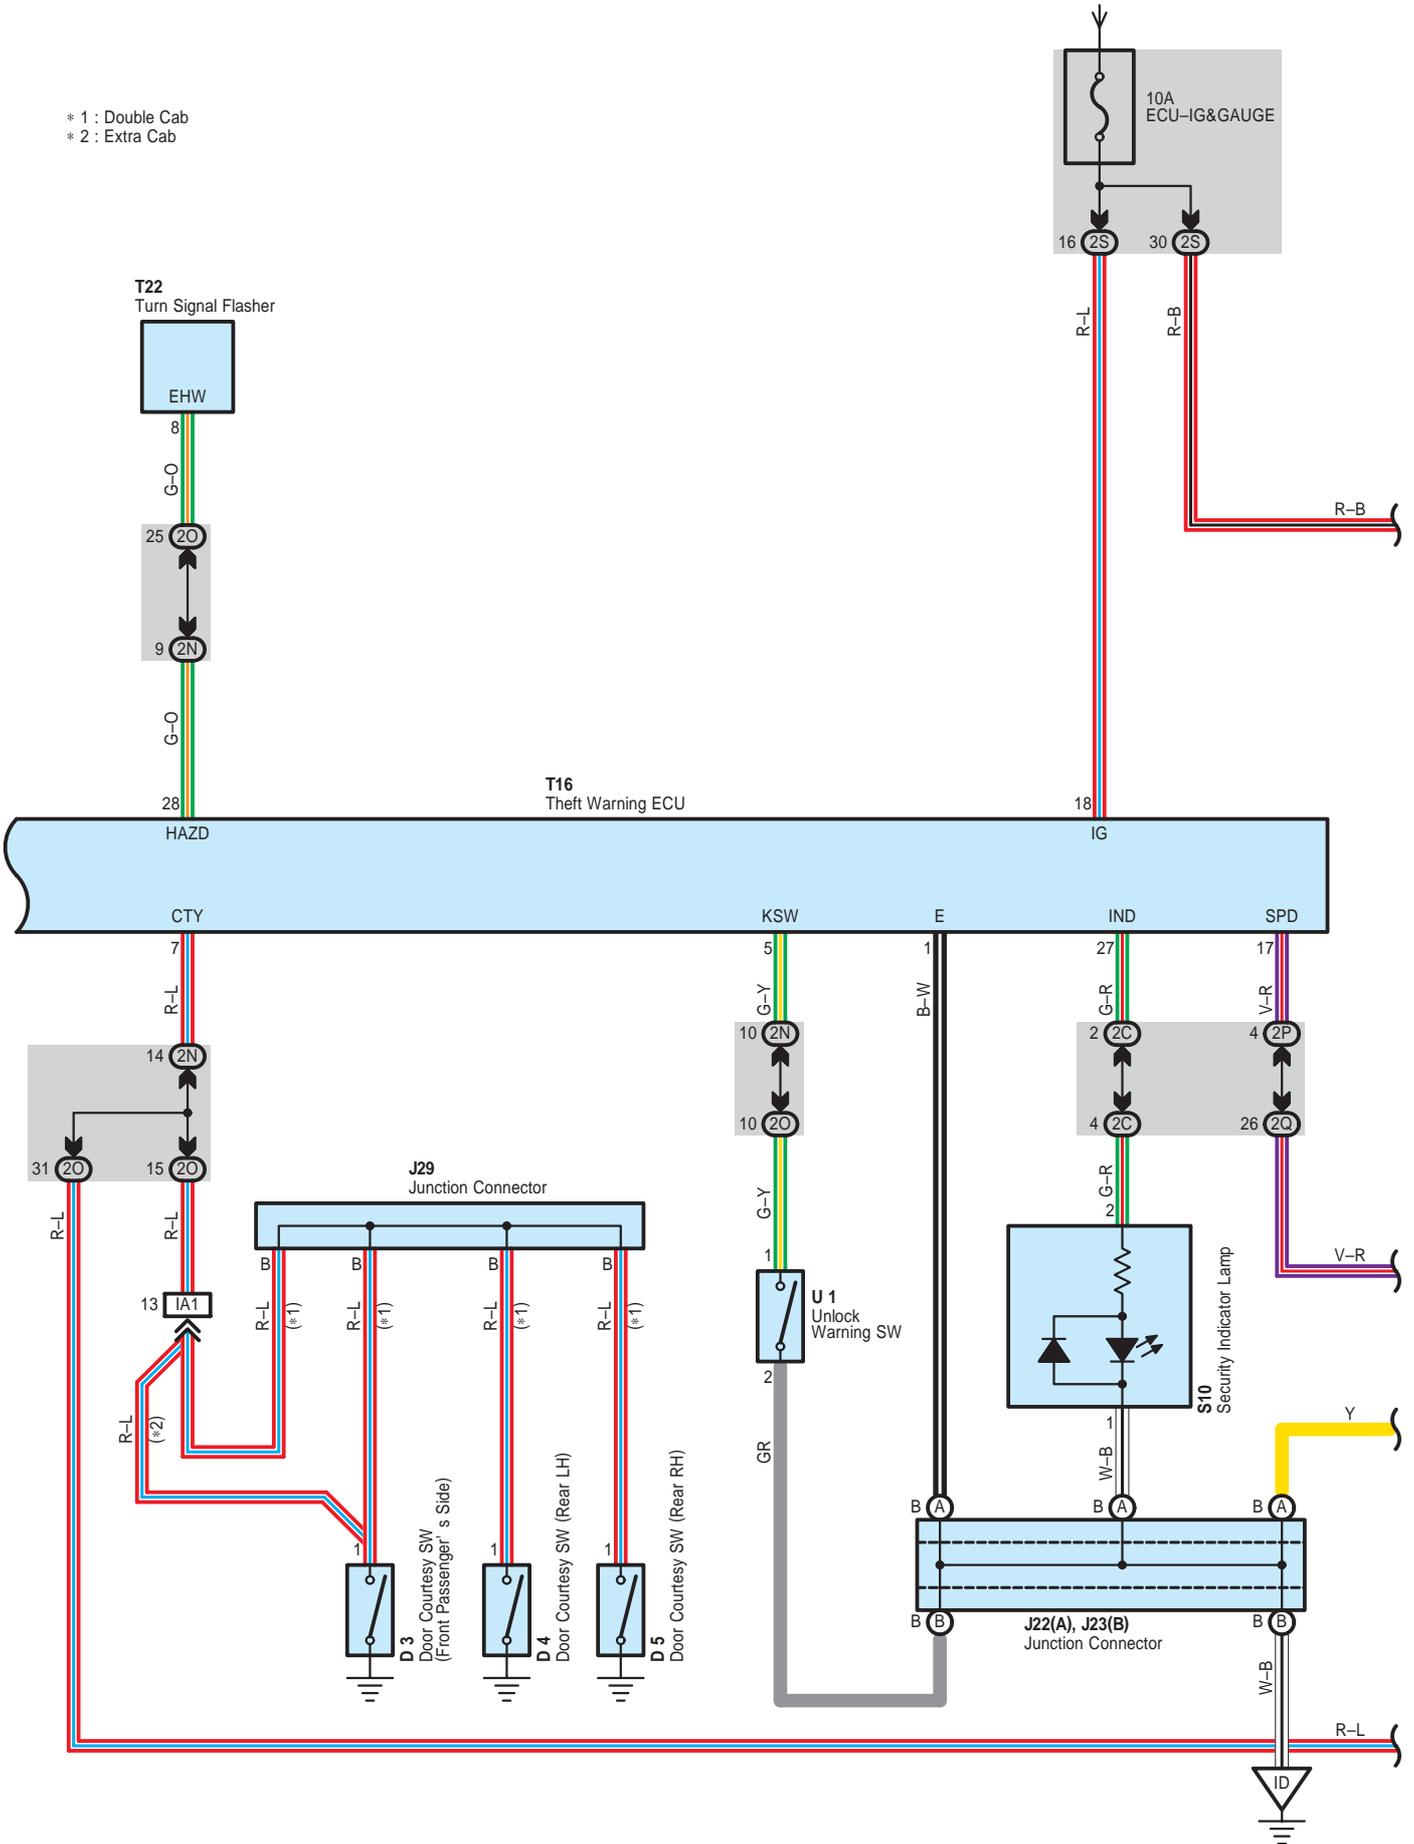

Theft Deterrent

From Power Source System (See Page 60)

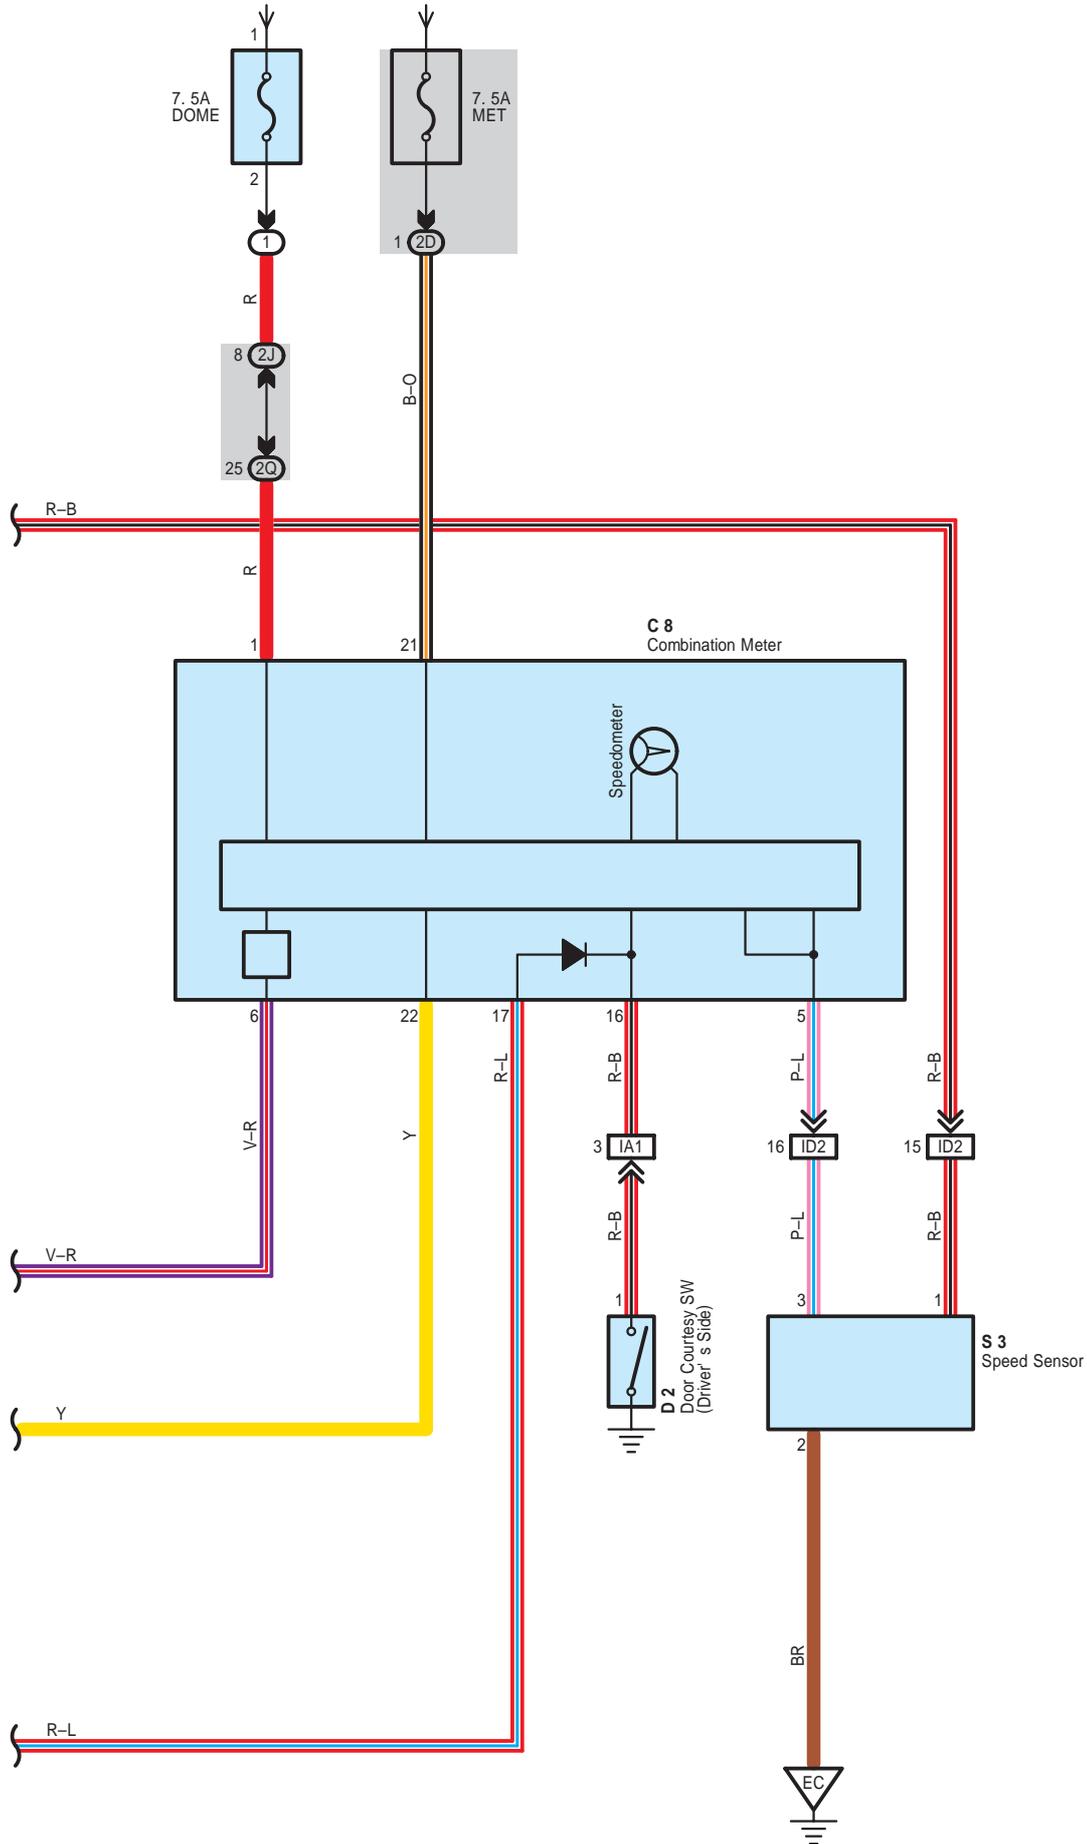

Service Hints

D2, D3, D4, D5 Door Courtesy SW (Driver's Side), (Front Passenger's Side), (Rear LH), (Rear RH)

1-Ground : Continuity with each of the door open

E3 Engine Hood Courtesy SW

1-2 : Open with the engine hood open

T16 Theft Warning ECU

9-Ground : Continuity with the engine hood close

4, 14-Ground : Always approx. 12 volts

1-Ground : Always continuity

18-Ground : Approx. 12 volts with the ignition SW at ON position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	38	E3	36	J29	38
D2	40 (Double Cab)	H3	36	N1	37
	42 (Extra Cab)	H4	36	S1	37
	44 (Single Cab)	J1	37	S3	37
D3	40 (Double Cab)	J11	38	S10	39
	42 (Extra Cab)	J22	A 38	T16	39
	44 (Single Cab)	J23	B 38	T22	39
D4	40 (Double Cab)	J24	A 38	U1	39
D5	40 (Double Cab)	J25	B 38		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)
3	35	R/B No.3 (Cowl Side Panel LH)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1I	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2C		
2D		
2J	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2L		
2N	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2O		
2P		
2Q		
2S		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	46	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B and Engine Room J/B)
IA1	48	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID2	48	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IF3	50	Engine Room Main Wire and Instrument Panel Wire (Behind the Driver Side J/B)
IH1	50	Instrument Panel Wire and Floor Wire (Right Kick Panel)

Theft Deterrent



: **Ground Points**

Code	See Page	Ground Points Location
EB	46	Left Side of the Fender Apron
EC	46	Rear Side of the Cylinder Block
ID	48	Instrument Panel Reinforcement Center