

Turn Signal and Hazard Warning Light

Service Hints

T22 Turn Signal Flasher

- 1-Ground : Approx. 12 volts with the ignition SW at ON position
- 4-Ground : Always approx. 12 volts
- 2, 3-Ground : Changes from approx. 12 to 0 volts with the ignition SW at ON position and the turn signal SW at LEFT or RIGHT position or the hazard warning signal SW at ON position
- 5-Ground : Continuity with the turn signal SW at LEFT position
- 6-Ground : Continuity with the turn signal SW at RIGHT position
- 8-Ground : Continuity with the hazard warning signal SW at ON position
- 7-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	38	J22	A 38	R5	45 (Single Cab)
C10	38	J23	B 38	T12	37
H5	38	R4	41 (Double Cab)	T13	37
J1	37		43 (Extra Cab)	T14	37
J15	38		45 (Single Cab)	T15	37
J20	A 38	R5	41 (Double Cab)	T16	39
J21	B 38		43 (Extra Cab)	T22	39

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2K	28	Floor Wire and Driver Side J/B (Instrument Panel Brace RH)
2L	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2M		
2N	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2O		
2S		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF3	50	Engine Room Main Wire and Instrument Panel Wire (Behind the Driver Side J/B)
BA1	52 (Double Cab)	Frame Wire and Floor Wire (Under the Front Seat LH)
	54 (Extra Cab)	
	56 (Single Cab)	

▽ : Ground Points

Code	See Page	Ground Points Location
EA	46	Right Side of the Fender Apron
EB	46	Left Side of the Fender Apron
ID	48	Instrument Panel Reinforcement Center
IE	48	Instrument Panel Reinforcement RH
IG	48	Cowl Side Panel LH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	50	Engine Wire	B3	54 (Extra Cab)	Frame Wire
B3	52 (Double Cab)	Frame Wire		56 (Single Cab)	