


# Back-Up Light

From Power Source System (See Page 60)

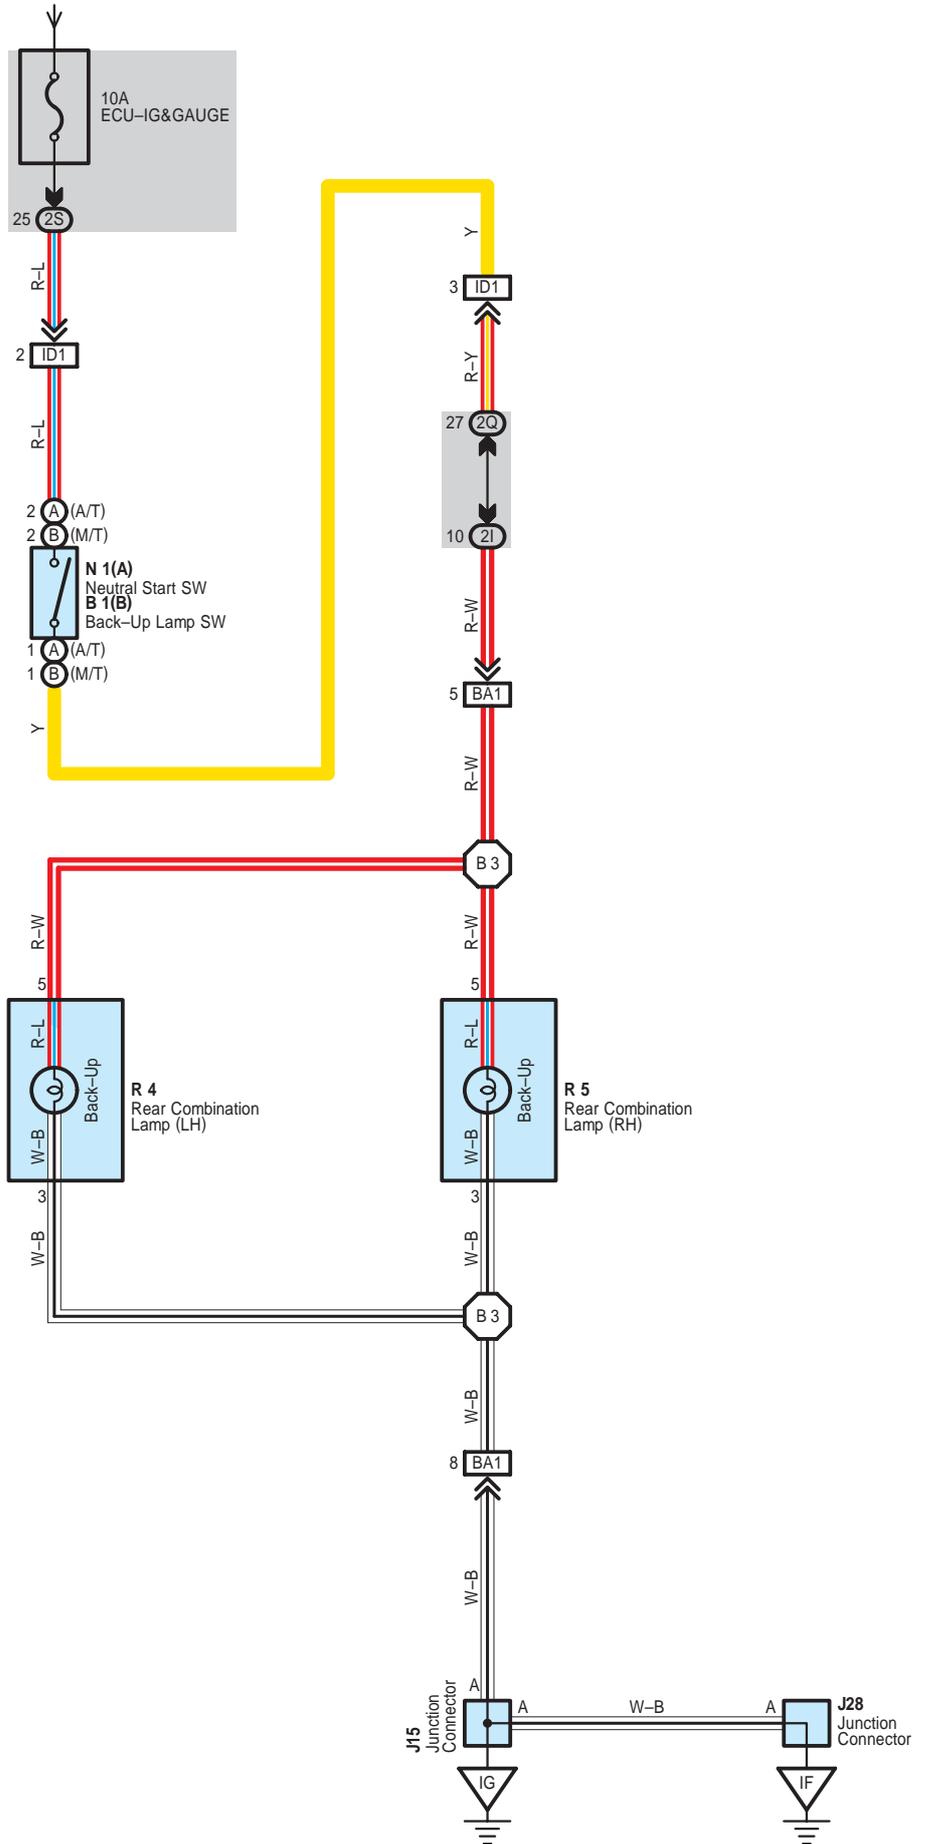

**Service Hints**

**B1 (B) Back-Up Light SW (M/T)**

(B) 2-(B) 1 : Closed with the shift lever in R position

**N1 (A) Neutral Start SW (A/T)**

(A) 2-(A) 1 : Closed with the shift lever in R position

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
B1	B	R4	41 (Double Cab)	R5	43 (Extra Cab)
J15	38		43 (Extra Cab)		45 (Single Cab)
J28	38		45 (Single Cab)		
N1	A	R5	41 (Double Cab)		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2I	28	Floor Wire and Driver Side J/B (Instrument Panel Brace RH)
2Q	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2S		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	48	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
BA1	52 (Double Cab)	Frame Wire and Floor Wire (Under the Front Seat LH)
	54 (Extra Cab)	
	56 (Single Cab)	

 : **Ground Points**

Code	See Page	Ground Points Location
IF	48	Cowl Side Panel RH
IG	48	Cowl Side Panel LH

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B3	52 (Double Cab)	Frame Wire	B3	56 (Single Cab)	Frame Wire
	54 (Extra Cab)				